



Automatic Bobbin Winder Quick Installation Guide

Include: Bobbin winder machine X 1, base plate X 1, thread stand X 1, thread spool shaft X 1, metal screw X 2, wooden screw X 2

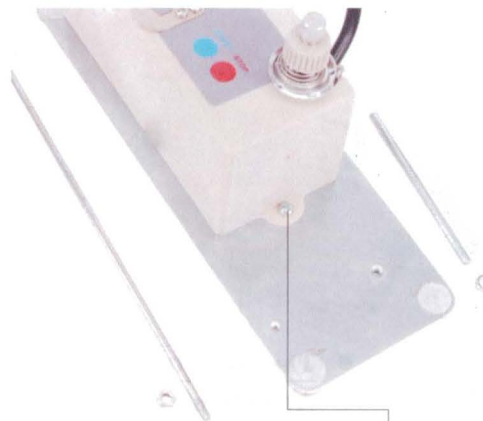


Tight the two metal screws on the bobbin winder and baseplate.

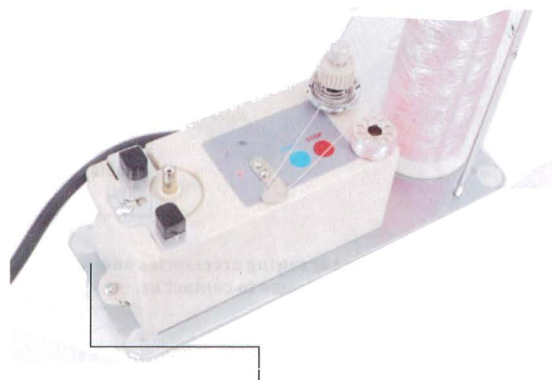


Tight the two metal screws on the bobbin winder and baseplate.

1

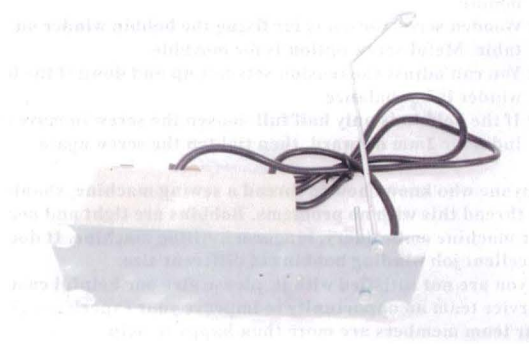


Loosen the nut from thread stand & thread spool shaft, then tighten them on their holes, then tighten their nuts

2

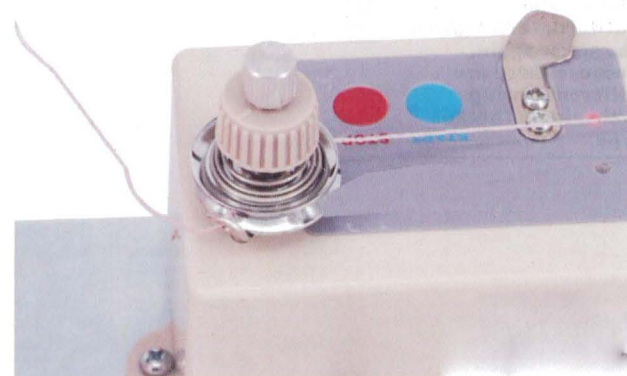

3

Tips:

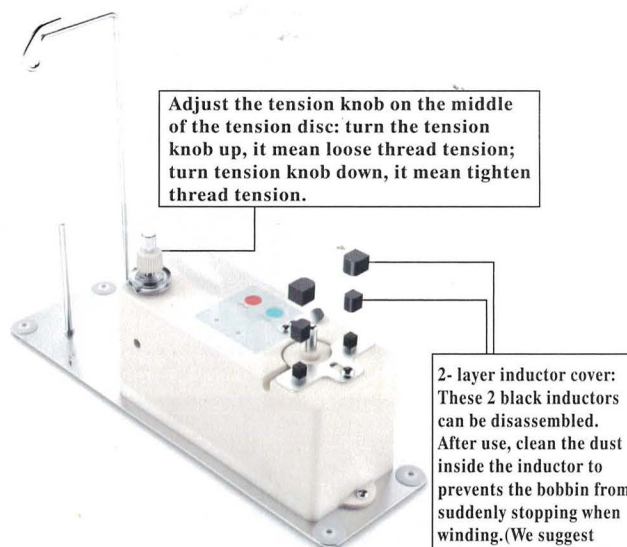

Adjust the tension knob on the middle of the tension disc: turn the tension knob up, it mean loose thread tension; turn tension knob down, it mean tighten thread tension.

2- layer inductor cover: These 2 black inductors can be disassembled. After use, clean the dust inside the inductor to prevents the bobbin from suddenly stopping when winding. (We suggest cleaning them every 15 days)

We supply many different sewing accessories and sewing kits, if you have any needs, welcome to contact us.