

April 22, 1949
Department #54

105-6

List of Parts Complete

for

Machine No. 105-6

HISTORICAL COPY
DO NOT REMOVE

April 22, 1949
Department #54

List of Parts Complete
for
Machine No. 105-6

No.	Name
*59532	Arm, upper and lower (solid) with 15404, 59465 and two each 949E and 15405
59491	Arm Rotary Shaft
59610	" " " Bushing (back) with 52045 and 59611
59611	Arm Rotary Shaft Bushing (back) Oil Wick (braided cotton)
52045	Arm Rotary Shaft Bushing (back) Packing (wick)
50554 C	" " " " " Set Screw
59524	" " " " (front) with 52045
52045	" " " " " Packing (wick)
448 AL	" " " " " Set Screw
59613	" " " " (intermediate) with 52045 and 128571
128571	Arm Rotary Shaft Bushing (intermediate) Oil Wick (braided cotton)
52045	Arm Rotary Shaft Bushing (intermediate) Packing (wick)
50554 C	Arm Rotary Shaft Bushing (intermediate) Set Screw
59628	" Side Cover
1423 D 2	" " " Screw
59208	Balance Wheel, 2 3/16 in. pulley, with 424C and 1354C
1354 C	Balance Wheel Position Screw

No.	Name
424 C	Balance Wheel Set Screw
59488	Chip Guard
59448	Chute with 59344 and two 664E
59340	" Bracket
59388	Chute Bracket complete, Nos. 447F, 1547J and 59340
59449	Chute Bracket Hinge Pin Spring
59343	" " " " " Collar with 735AL
735 AL	" " " " " " Set Screw
59343	" " " " " Stop Collar with 735AL
735 AL	" " " " " " Set Screw
447 F	" " Stop Screw
1547 J	" " " " Nut
59344	" Cushion Spring
664 E	2 " " " Screw
1443 X	2 " Screw
59482	Cloth Plate
691 F	3 " " Screw
59450	Feed (back) Bar with two each 449AL and 882AL
59624	" " " 59450 with 59211 and 59626
59625	" " " Carrier with two 882AL and three 449AL
59626	Feed (back) Bar Carrier 59625 with 59613 and 59627
57234	Feed (back) Bar Carrier Hinge Pin
57235	" " " " " " Bushing
449 AL	" " " " " " Set Screw (for 59625)
59211	Feed (back) Bar Hinge Pin
59627	" " " " " Bushing (left)
882 AL	" " " " " " Set Screw

No.	Name
59618	Feed (back) Bar Hinge Pin Bushing (right)
882 AL	" " " " " " " " Set Screw
882 AL 2	" " " " " " " " Set Screw
59452	" " " Dog
190 D	" " " Screw
59453	" (front) Bar
1467 J	" " " Cap Screw
59454	" " " Crank
50584 C	" " " " Screw Stud
1662 C	" " " " " " Nut
59455	" " " " " " " Washer
50585 C	" " " Screw Stud
1521 E	" " " " " Nut
59456	" (front) Bar Screw Stud Nut Washer
59492	" " Dog, for 1/8 in. to 3/16 in. trim
1094 D	" " " Screw
59458	" " Regulator
59460	" " " Plate
190 D 3	" " " " Screw
24696	" " " Slide Block
59459	Feed (front) Regulator Slide Block complete, Nos. 1637E, 9525, 24696 and 50586C
50586 C	Feed (front) Regulator Slide Block Screw Stud
1637 E	" " " " " " " Nut
9525	" " " " " " " "
	Washer
*59213	Feed Eccentric with 130337
*59494	" " Body with 42727
51061 AL 2	" " " Set Screw
130337	" " Lubricating Oil Pad (wood)
7071	" " Clamping Washer

No.	Name
217 E	Feed Eccentric Clamping Washer Screw
59495	Feed Eccentric (adjustable) complete, Nos. 217E, 7071, 503280, 59213, 59494 and two 51061AL
59517	Feed Eccentric 59495 with 59216
59216	" " Connection with 12002 and 139110
59217	" " " Bar with 59218
59218	" " " " Plug
449 AL 2	" " " " Set Screw for 59450
139110	" " " " Oil Pad (braided cotton)
12002	Feed Eccentric Connection Oil Pad Retaining Pin
59496	" Lifting Eccentric with two 50150AL
59516	" " " 59496 with 59220
59220	" " " Connection
59221	" " " " Bar with 59218
12454	" " " " " Oil Tube with 132590
59619	Feed Lifting Eccentric Connection Bar Oil Tube Bracket
59620	Feed Lifting Eccentric Connection Bar Oil Tube Bracket 59619 with 12454
190 J	Feed Lifting Eccentric Connection Bar Oil Tube Bracket Screw
132590	Feed Lifting Eccentric Connection Bar Oil Tube Oil Pad (wick)
59218	Feed Lifting Eccentric Connection Bar Plug
449 AL 2	" " " " " Set Screw for 59625
42727	Feed Lifting Eccentric Position Pin
50150 AL 2	" " " Set Screw
50328 C	" Regulating Screw

59522			Knife (movable)
896 AL			" " Clamping Screw
*59497			" " Holder with 896AL
59498			Knife (movable) Holder complete, Nos. 172C, 59497 and 59501
172 C			Knife (movable) Holder Adjusting Screw
59499			" " " " Stud (eccentric)
208 AL			" " " " " Set Screw
59500			" " " Connection with 237F
237 F			" " " " Set Screw
59356			" " " " Shaft
59357			" " " " " Spring
27659			" " " " " "
			Collar with 237F
237 F			Knife (movable) Holder Connection Shaft Spring Collar Set Screw
59358			Knife (movable) Holder Driving Crank with 1019AL and three 465C
465 C	2		Knife (movable) Holder Driving Crank Set Screw
59359			" " " " " Shaft
59360			" " " " " Collar with two 460AL
460 AL	2		Knife (movable) Holder Driving Crank Shaft Collar Set Screw
*59501			Knife (movable) Holder Extension with 171AL
171 AL			" " " " Clamping Screw
51819			" " " Roller and Stud
465 C			" " " " " Set Screw
1019 AL			" " " " " Screw
42309			" (stationary) with 42049
42310			" " Clamping Stud

No.		Name
1534	D	Knife (stationary) Clamping Stud Thumb Nut
59464		" " Holder
59465		" " " Bracket
949	E 2	" " " " Screw
1376	C	" " " Regulating Thumb Screw
122	C	" " " Screw
45057		" " " " Washer
440	F 2	" " " Stop Screw
1700	E 2	" " " " " Nut
42049		" " Stud
59487		Looper
59381		" Carrier with 50395C
59224		" " Driver with two 1186E
59435		" " " 59224 with 59226, 59227 and 59381
1186	E 2	Looper Carrier Driver Clamping Screw
207	D	" " " Timing Screw
59225		" " Hole Plug
59226		" " Shaft
59227		" " " Crank with 1143AL
1143	AL	" " " " Clamping Screw
59466		" Cover
59467		Looper Cover complete, Nos. 59230, 59466 and two 330J
59230		Looper Cover Holder
59231		" " " Sleeve with 457AL
457	AL	" " " " Set Screw
59232		" " Lock Stud
59233		" " " " Spring
50300	D	" " " " " Cap Screw
330	J 2	" " Screw

50395	C		Looper Set Screw
59484			Needle Bar (hollow) with 853AL and 50138F
59468			" " Bushing (lower)
457	AL		" " " " Set Screw
59469			" " " (upper)
457	AL		" " " " Set Screw
59470			" " Connecting Bracket with 175J and 460AL
175	J		" " " " Clamping Screw
59237			" " " Link
40247			" " " " Hinge Pin (lower)
208	AL		" " " " " " "
			Set Screw
40247			Needle Bar Connecting Link Hinge Pin (upper)
460	AL		" " " " " "
			Set Screw
59471			Needle Bar Lever with 208AL, 448AL and 51407AL
59483			" " " 59471 with 59237, 59470 and two 40247
59603			Needle Bar Lever Connecting Rod with 2089, 54969 and two each 141E and 647E
59604			Needle Bar Lever Connecting Rod 59603 with 59240 and 59636
59240			Needle Bar Lever Connecting Rod Ball Stud
51407	AL		" " " " " " " Set Screw
141	E	2	" " " " " " Cap (lower) Screw
647	E	2	" " " " " " (upper) Screw
59636			" " " " " Eccentric with 448AL, 1299AL and two 59606
59606		2	Needle Bar Lever Connecting Rod Eccentric Lubricating Pad (wood)
1299	AL		Needle Bar Lever Connecting Rod Eccentric Position Screw

From the library of: Diamond Needle Corp

No.	Name
448 AL	Needle Bar Lever Connecting Rod Eccentric Set Screw
42077	" " " " " Guide
187 D	" " " " " " Screw
59245	" " " " " " Stud
59246	" " " " " " "
	Bracket with 59245
193 D	Needle Bar Lever Connecting Rod Guide Stud Bracket Screw
54969	Needle Bar Lever Connecting Rod Oil Wick
2089	" " " " " " " Retaining Pin
59247	Needle Bar Lever Hinge Pin
59248	" " " " " Bushing (back)
624 AL	" " " " " " " Set Screw
59249	Needle Bar Lever Hinge Pin Bushing (front)
457 AL	" " " " " " " Set Screw
448 AL	Needle Bar Lever Hinge Pin Set Screw
59394	" " Thread Retainer Bracket
228 J	" " " " " Screw
42483	2 " " " " Disc
93 AL	" " " " Screw
10107	" " " " Spring
59395	Needle Bar Thread Retainer complete, Nos. 93AL, 10107, 59394 and two 42483
59533	Needle Guard
50138 F	" Set Screw
59544	Presser Bar
59472	" " Bushing (lower)
457 AL	" " " " Set Screw

No.	Name
42253	Presser Bar Bushing (upper)
457 AL	" " " " Set Screw
59368	" " Lifter
89 F	" " " Hinge Screw
51815	" " " Roller and Stud
50138 F	" " " Stop Screw
59505	" " Lifting Bracket with 391E, 1143AL, 51810, 51811 and 51815
391 E	Presser Bar Lifting Bracket Adjusting Screw
59506	" " " " Guide
624 AL	" " " " " Set Screw
1143 AL	" " " " Set Screw
59675	" " Spring
59676	" " " Block
51810	" " " Roller and Stud
59389	" Foot Chaining Plate
59545	" " " " Collar with 240C
240 C	" " " " " Set Screw
59372	" " " " Spring
59546	" " " " " Guide Pin
1019 AL	" " " " " " "
	Set Screw
59480	Presser Foot Hinge Pin
468 C	" " " " Set Screw
59475	" " Plate
59392	" " Shank with 468C and 1019AL
59540	" " " Guard
50470 J	" " " " Screw
59476	" " Knife Guide for 1/8 in. to 3/16 in. trim
59526	Presser Foot Knife Guide for 13/64 in. to 1/4 in. trim

No.		Name
229 D		Presser Foot Knife Guide Screw
59375		" " Thread Cutter
1329 D	2	" " " " Screw
59477		Presser Foot (hinged) complete, Nos. 229D, 50470J, 59372, 59375, 59389, 59392, 59475, 59476, 59480, 59540, 59545, 59546 and two 1329D
185 X		Presser Foot Screw
1317 D		Pressure Regulating Thumb Screw
1547 J		" " " " Lock Nut
59264		Slack Thread Controller
95 C	2	" " " Hinge Screw
59266		" " Regulator
59267		" " " Holder with 465C
59268		" " " " Crank with two 465C
51811		" " " " " Roller and Stud
465 C	2	Slack Thread Regulator Holder Crank Set Screw
465 C		" " " Set Screw
59269		Tension (under thread) Bracket
38670		" " " " Steady Pin
2102	2	" " " Disc
51570 C		" " " Regulating Thumb Nut
50326 C		" " " Screw Stud
59534		" " " Spring
59537		" " " " Bushing (large)
59538		" " " " " (small)
2102	2	" (upper thread) Disc
51570 C		" " " Regulating Thumb Nut
50326 C		" " " Screw Stud
1547 J		" " " " " Nut

No.	Name
59535	Tension (upper thread) Spring
59537	" " " " Bushing (large)
59538	" " " " " (small)
59270	Thread (under) Eyelet
1423 D	" " " Screw
59271	" " Nipper Bracket with 9547 and 59301
452 C	" " " " Set Screw
59301	" " " " Stud
59272	" " " Guide Plate
59273	" " " Releasing Bracket
176 D	" " " " " Screw
59274	" " " " Stud
59275	" " " Spring
1423 D	" " " " Screw
9547	" " " " Steady Pin
59276	" " Protector
240 C	" " " Set Screw
59277	" " Take-up (left)
59278	" " " (right)
190 J	2 " " " Screw
59280	" " " Staple
59281	" " " " Holder with 904AL
59282	" " " " " Collar with 460AL
460 AL	Thread (under) Take-up Staple Holder Collar Set Screw
59283	Thread (under) Take-up Staple Holder Collar Spring
236 F	" " " " " " " " Screw
904 AL	Thread (under) Take-up Staple Set Screw

No.	Name
59284	Thread (under Take-up Stripper
59285	" " " " Bracket with 2400
140050 D	" " " " " Screw
207 F	" " " " Screw
59286	" (upper) Eyelet (front of arm)
462 AL	" " " " " " Set Screw
59287	" " " (side of arm)
50014 AL	" " " " " " Set Screw
59289	" " Take-up
853 AL	" " " Set Screw
59507	Throat Plate for 59452 and 59492
59479	" " Packing with 59292
59292	" " " Position Stud
1149 AL	" " " Screw
691 F 2	" " Screw
*15404	Trade Mark
15405 2	" " Rivet