SINGER 110W150

LIST of PARTS



SINGER"

MACHINE No. 110w150

THE SINGER MANUFACTURING COMPANY

INSTRUCTIONS FOR OILING

To ensure easy running and prevent unnecessary wear of the parts which are in movable contact, the machine requires oiling and when in continuous use, "TYPE B" or "TYPE D" OIL, sold by Singer Sewing Machine Company, should be applied at least twice each day to all oil holes marked "OIL", as instructed in Form 1943w.

"TYPE D" OIL should be used when an oil is desired which will produce a minimum of stain on fabrics, even after a long period of storage.

Occasionally check the grease in gear case, fill when necessary, with GEAR LUBRICANT, sold by Singer Sewing Machine Company.

To insure satisfactory results, "TYPE E" Thread Lubricant, sold by Singer Sewing Machine Company, should be used in the thread lubricator which is attached to the top of the machine.

Oil the the bobbin case bearing in the hook race each time a bobbin is replaced.

Copyright, U. S. A., 1925, 1938, 1939, 1940, 1950 and 1954, by The Singer Manufacturing Company All Rights Reserved for All Countries

INDEX

Accessories	Corp	Page
Bobbin Winder		
Bobbin Winder	Jee.	. 14
Feed Regulating Gears		
Foot Lifter	ਲ	
Machine No.110w150	f: O	. 5
Numerical List of Parts	o V	. 19
Roller Pressers	ibra	. 16
Work Plate Platform	the	. 17
	-rom	

INSTRUCTIONS FOR ORDERING

In ordering from this list, use ONLY the PART number in the FIRST column.

The number stamped on a Sewing Machine Part is the number of the Single Part only, except when the part includes Set Screws, Clamping Screws, Studs and Rollers Spun on, Small Wires riveted, or Parts soldered together, etc., which it is necessary to furnish in combination.

Every combination of parts sent out has its specific number which, although not stamped on Parts (except in above case), must be used when ordering the combination.

Each number always indicates the SAME PART in whatever list it appears, or for whatever Machine.

The letters after some of the numbers indicate the style of finish only, as follows:

- A Hardened, Polished, Nickel Plated and Buffed.
- AL Heat Treated for Toughness.
- B Polished, Nickel Plated and Buffed.
- C Hardened only.
- D Polished only.
- E Soft, Not polished.
- F Hardened and Polished.
- H Blued,
- J Nickel Plated only.
- R Merlized.
- X Black Oxide, for Iron and Steel.
- XC Hardened and Black Oxide, for Iron and Steel.
- Y Black Nickel Plated only.
- Z Chromium Plated.

These letters MUST BE USED when they appear in the list and AFTER the number, as in the list.

In this series

1 to 1500, 200001 to 201500 and 350001 to 351500 are Screw Numbers. 1501 to 1800, 201501 to 201800 and 351501 to 351800 are Nut Numbers. 1801 to 2000, 201801 to 202000 and 351801 to 352000 are Roller Numbers. 2001 to 50000 and 202001 to 350000 are Numbers of Machine Parts.


The figures in the second column refer only to the plate in which the illustration of the part is shown and are NOT TO BE USED in ordering.

Two or more numbers over a cut indicate that the difference between such parts is not visible in an illustration.

Parts marked with an asterisk \mathbb{R}^3 are furnished only when repairs are made at the factory.

LIST OF PARTS COMPLETE

FOR

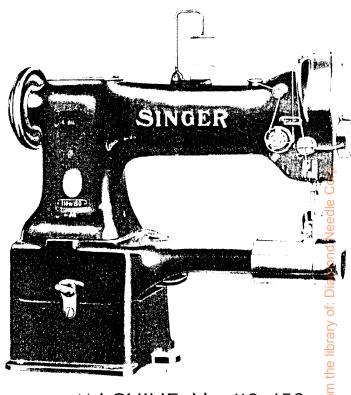

MACHINE No. 110w150

LEFT HAND CYLINDER MACHINE.

VERTICAL HOOK. ROLLER PRESSER.

HIGH SPEED. LOCK STITCH.

MAXIMUM STITCH 13 TO THE INCH.

FOR SHOES

No.	Plate		Name
*239001		Arm	with 202135
202247	16778	17	Cap
200278H	16778	11	" Screw
202248	16778	- 0	" Washer
204235	16758	11	Position Pin (2)
200010E	16758	11	Screw (2)
200004E	16758	11	Screw
202005	16758	11	" Washer(3)
237702	16778	11	Shaft with 224392 and 350431E

No.	Plate	Name
237748	16778	Arm Shaft Bushing (back) with 202260
202260	16778	Oil Packing
		(wick)
200071E	16778	Arm Shaft Bushing (back) Screw (3)
239062	16778	" " (front) with 202244
202244	16778	" Oil Packing
		(wick)
200502H	16778	Arm Shaft Bushing (front) Oil Packing
		Thumb Screw
200338C	16778	Arm Shaft Bushing (front) Set Screw
224392	16778	" Oil Packing (wick)
350431E	16778	" " Stop Screw
202632	16758	" Side Plate
200462H	16758	" " Thumb Screw
237793	16778	Balance Wheel (aluminum alloy casting)
231177	10110	for "V" belt (outside diameter of
		belt groove 2.9 in.) with 350540C
		and 350541C
350419H	16778	Balance Wheel Adjusting Screw
350540C	16778	" Position Screw
350541C	16778	" Set Screw
*239002		Bed (cylinder)
239003	16782	" End Cover
213312	16782	" Base (4 in. high)
213313	16782	" " (6 in. high)
Note:		se 213313 is furnished with this machine
1101.	1,700 1,70	unless otherwise specified on order
203184	16782	Bed Clamp
20026211	16782	" " Hinge Screw
202622	16782	" Packing Washer
200728H	16782	" " Thumb Screw
203185	16782	" Washer
202618	16782	" Hinge
201110H	16782	" " Screw (6)
213338	16782	" Slide (back)
239004	16782	" " Clamp Plate (back)
239005	16782	" (front)
200580H	16782	" " " " Screw (4)
203470	16780	Bobbin
*235099		" Case
203648	16780	" " Latch
*202056		o o Pin
203473	16780	" " Plunger
203474	16780	" " Spring
239006	16780	" Lever
*203476		" " Eccentric
204243	16780	n n n Position Pin
203577	16780	" " Fulcrum with 203579
200110D	16780	" " Screw
203578	16780	" " Slide
203579	16780	" " " Stud
241674	16780	" Oiling Felt
241014	10,00	

No.	Plate	Name
241675	16780	Bobbin Case Oiling Felt Retainer
350405C	16780	o o o o o o o o o o o o o o o o o o o
203214	16780	" Tension Spring
200984C	16780	" " " Regulating
2007030	10700	Screw
200594C	16780	Bobbin Case Tension Spring Screw
203216	16780	" " Washer (cloth)
235100	16780	Bobbin Case complete, Nos. 200594C,
233100	10100	200984C, 202056, 203214, 203216,
		203473, 203474, 203648, 235099,
		241674, 241675 and two 350405C
239007	16780	Cylinder End Cover Rest
200110D	16780	" " " " Screw
	16758	Face Plate with 201650H and 350432XC
239070	16758	" " Position Pin
202135	16758	" Thumb Screw
200473H	16779	Feed Driving Gear Shaft
239009	16779	Bushing (back)
239028 239010	16779	(front)
200347C	16779	u u u u Z Set
2003470	1011)	Screw (back)
200335C	16779	Feed Driving Gear Shaft Bushing Set
2007730	1011)	Screw (front)
221743	16779	Feed Driving Gear Shaft Collin with two
22114)	10///	200380C
200380C	16779	Feed Driving Gear Shaft Collar Set
200 31777	*****	Screw
239020	16779	Feed Driving Gear Shaft Driving Gear,
237020	1,	25 teeth, with 200382C and 201220C,
		for 12-1/2 to 23 stitches per inch
239013	16779	Feed Driving Gear Shaft Driving Gear
2.77013	• • • • • • • • • • • • • • • • • • • •	Guard
200030H	16779	Feed Driving Gear Shaft Driving Gear
		Guard Screw
201220C	16779	Feed Driving Gear Shaft Driving Gear
20,100	•	Position Screw
200382C	16779	Feed Driving Gear Shaft Driving Gear
		Set Screw
239015	16779	Feed Driving Gear Shaft Pinion, 19
,		teeth, with 200382C and 201220C
201220C	16779	Feed Driving Gear Shaft Pinion Position
	·	Screw
200382C	16779	Feed Driving Gear Shaft Pinion Set
		Screw
237724	16779	Feed Driving Worm Gear with 200378C
		and 201220C
201220C	16779	Feed Driving Worm Gear Position
		Screw
200378G	16779	Feed Driving Worm Gear Set Screw
239016	16779	n u "Shaft
239017	16779	" Bushing

2001-06-1-1-1-1-1-1-1-1-1-1-1-1-1-1-1-1-1	No.	Plate	Name	No.	Plate	Name
Set Series						
239028 1579			• • • • • • • • • • • • • • • • • • • •			
20016 1.677	239027	16779	Feed Regulating Counter Shaft	237732	16754	- '
2005-12-1677 Feed Regulating Counter Shaft Gear, 26 2005-12-1678 Hook Driving Shaft Peed Gear Housing Capes 1879 Feed Regulating Counter Shaft Gear, 26 2005-12-1678 Hook Driving Shaft Peed Gear Housing Capes 1879 Feed Regulating Counter Shaft Gear, 26 2005-12-1679 Hook Driving Shaft Peed Gear Housing Capes 1879 Feed Regulating Counter Shaft Gear, 28 22552 1679 Hook Driving Shaft Peed Gear Housing Capes 1879 Feed Regulating Counter Shaft Gear, 28 22552 1679 Hook Driving Shaft Peed Gear Housing Capes 1879 Feed Regulating Counter Shaft Gear, 28 1879 1879 Hook Driving Shaft Peed Gear Housing Capes 1879 Feed Regulating Gear, 28 teeth, with 2003-12-260 2003-12-260 1879 Feed Regulating Gear, 28 teeth, with 2003-12-260 2003-12-260 1879 Feed Regulating Gear Position Screw 2003-12-260 1879 187	239028	16779	The state of the s			
24902	200363AL	. 16779	и и и и	237733	16754	· · ·
The content of the			Set Screw			Cap (side) Gasket
	239021	16779	Feed Regulating Counter Shaft Gear, 26	200053C	16754	Hook Driving Shaft Bevel Gear Housing
Postion Screw Postion Plate Postion Plat			teeth, with 200382C and 201220C			Cap Screw (4)
2003-20	201220C	16779	Feed Regulating Counter Shaft Gear	201082E	16754	Hook Driving Shaft Bevel Gear Housing
1902.50 1679 1676			Position Screw			
1679 1679	200382C	16779	**	225532	16754	
101200 1679						• • • • • • • • • • • • • • • • • • • •
2012-02 16779 Feed Regulating Gear Position Screw 2003367 1674 Hook Driving Shaft Bevel Gear Position Screw (200348C 1679 Hook Driving Shaft Bevel Gear Position Screw (300340 16779 Hook Driving Shaft Bevel Gear Position Screw (300340 16779 Hook Driving Shaft Bevel Gear Position Screw (300340 16779 Hook Driving Shaft Bevel Gear Position Screw (300340 16779 Hook Driving Shaft Bevel Gear Position Screw (200374C 16779 Hook Driving Shaft Bevel Gear Position Screw (200374C 16779 Hook Driving Shaft Bushing (46-k)	239023	16779		201308E	16754	
20038C 16779 " " Wheel 20039C 16779 " Wheel 20039C 16779 " Wheel 20039C 16779 " " Wheel 20039C 16779 " " Wheel 20039C 16779 " " " Adjusting Screw 20037C 16779 Eed Wheel Bracket Adjusting Screw 20037C 16779 Eed Wheel Bracket Adjusting Screw 20039C 16779 Eed Wheel Bracket Adjusting Screw 20039C 16779 Eed Wheel Bracket Adjusting Screw 20039C 16779 Eed Wheel Bracket Adjusting Screw 219038 16779 Eed Wheel Bracket Adjusting Screw 219038 16779 Eed Wheel Bracket Adjusting Screw 219038 16779 Eed Wheel Bracket Position Plate 200350L 16779 Eed Wheel Bracket Position Plate 200350L 16779 Eed Wheel Bracket Position Plate 200350L 16779 Eed Wheel Bracket District Plate Pla	2012207	1 (7 7 0		202/27	1/254	
249024				203637	16754	
23903				2003067	16770	
				2003460	10/19	— —
Chark Char				200374C	16779	0)
200437C 16779 Feed Wheel Bracket Adjusting Screw 200348C 16754 Feed Wheel Bracket Adjusting Screw 200348C 16754 Feed Wheel Bracket Adjusting Screw 200348C 16779 Feed Wheel Bracket Destroy 100 10		,		22777	• .,, . ,	
	200437C	16779	,	239037	16779	
200388C 16779 Feed Wheel Bracket Adjusting Screw 239038 16779 Hook Driving Shaft Bushing (Font Screw (back or trong) (2) 239038 16779 Hook Driving Shaft Bushing (Font Screw (back or trong) (2) 239038 16779 Hook Driving Shaft Collar with two Screw (2) 221743 16779 Hook Driving Shaft Collar with two Screw (2) 221748 16779 Hook Driving Shaft Collar with two Screw (2) 200380C 2				200346C		
Check Screw (back or front) (2)	200388C	16779	Feed Wheel Bracket Adjusting Screw			Screw
200156E 16780				239038	16779	Hook Driving Shaft Bushing (front)
	239031	16780	Feed Wheel Bracket Position Plate	200363AL	16779	'' '' '' '' 💥 Set
239032 16779 Feed Wheel Gear 200380C 16779 200380C 16779 200380C 16779 200380C 16779 200380C 16779 200380C 16779 200380C 16778 200380C 16778 200380C 16778 200380C 16778 200380C 16778 200380C 16778 200380C 16788 200380C 201376C 16780 200380C 201376C 16780 200380C	200156E	16780	H H H H H			Screw
20088E 16779			Screw	221743	16779	Hook Driving Shaft Collar with two
239040 16758 Foot Lifter Lifting Lever 221148 16780 " 618	239032	16779				200380C
200262H 16758			" " Screw (2)	200380C	16779	· ·
*20348.2			•			
*20348.2			ringe serew			" Hinge Screw
*20348.2			Spring			" " Screw Q
237726						
239076 16780 Hook and Bobbin Case complete, Nos. 235100 and 237726 237937 16755 Needle Bar with 200141 F 203596 16780 Hook Bevel Gear Socket, 18 teeth 239041 16755 " " " Connecting Link Stud with 200564 16780 " " " " " " " " " " " " " " " " " "			* ***			Dere (L)
	231120	10780				
237978 16780 16800 168	239076	16780		213018	10/00	
239938 16780 Hook Bevel Gear Socket, 18 teeth 239041 16755 " " Connecting Link 239038 16780 " " " " Bushing 239042 16755 " " " " " Oil Guard 200446C 16780 " " " " " " " Position 201183D 16755 " " " " " " " " " " " " " " " " " "	27,010	10100		237937	16755	
239033 16780	203596	16780				
200446C 16780						control of the contro
Screw Scre			17			
200556H 16780 Hook Bevel Gear Socket Screw 202333 16755 Needle Bar Connecting Link Stud with 239034 16779 " " Pinion with two 350171C 16779 " " " Set Screw 202254 16755 Needle Bar Connecting Link Stud Oil 239035 16779 " Driving Shaft Sevel Gear with						Screw
239034 16779 " " Pinion with two 350171C 202254 16755 Needle Bar Connecting Link Stud Oil 239035 16779 " " " Set Screw 202254 16755 Needle Bar Connecting Link Stud Oil Packing (wick)	200556H	16780		202333	16755	
239035 16779 " Driving Shaft Driving Shaft Packing (wick) Packing (wick)	239034	16779				
235857	350171C	16779		202254	16755	Needle Bar Connecting Link Stud Oil
239036 16754 Hook Driving Shaft Bevel Gear Housing with three 200346C 237730 16754 Hook Driving Shaft Bevel Gear Housing *206891 Needle Bar Connecting Stud	239035	16779	" Driving Shaft			• • • • • • • • • • • • • • • • • • • •
239036 16754 Hook Driving Shaft Bevel Gear Housing 200383C 16755 Needle Bar Connecting Link Stud Set Screw 237730 16754 Hook Driving Shaft Bevel Gear Housing *206891 Needle Bar Connecting Stud	235857	16779	" Bevel Gear with	200374C	16755	Needle Bar Connecting Link Stud Set
with three 200346C Screw 237730 16754 Hook Driving Shaft Bevel Gear Housing *206891 Needle Bar Connecting Stud			200374C and 200396C			Screw
237730 16754 Hook Driving Shaft Bevel Gear Housing *206891 Needle Bar Connecting Stud	239036	16754	**	200383C	16755	Needle Bar Connecting Link Stud Set
Cap (bottom)	237730	16754		*206891		Needle Bar Connecting Stud
			Cap (bottom)			

No.	Plate	Name
202329	16755	Needle Bar Connecting Stud 206891 with
202220	1/755	200086C and 202330
202330	16755	Needle Bar Connecting Stud Oil Packing (wick)
200086C	16755	Needle Bar Connecting Stud Pinch Screw
202692	16755	" Crank with 200335C, 200374C, 200383C, 200428C and 202333
239043	16755	Needle Bar Crank 202692 with 202329, 202399, 202400, 239041 and 239049
203172	16755	Needle Bar Crank Friction Washer
200428C	16755	" " Position Screw
200335C	16755	" " Set Screw
239044	16755	" " Rock Frame
239045	16755	" " 239044 with
		237937
*237794		Needle Bar Rock Frame Driving Ec- centric
*237749		Needle Bar Rock Frame Driving Ec-
		centric Body
350107C	16778	Needle Bar Rock Frame Driving Ec-
3		centric Body Position Screw
44 3C	16778	Needle Bar Rock Frame Driving Ec- centric Body Set Screw
1103C	16778	Needle Bar Rock Frame Driving Ec-
		centric Regulating Screw
217D	16778	Needle Bar Rock Frame Driving Ec-
		centric Set Screw
7071	16778	Needle Bar Rock Frame Driving Ec-
		centric Set Screw Washer
237750	16778	Needle Bar Rock Frame Driving Ec-
		centric complete, Nos. 217D, 443C,
		1103C, 7071, 237749, 237794 and
		350107AL
237739	16754	Needle Bar Rock Frame Driving Fork Lever with 200029E
200029E	16754	Needle Bar Rock Frame Driving Fork
		Lever Pinch Screw
237740	16754	Needle Bar Rock Frame Driving Fork
		Lever Slide Block (two pieces)
210910	16755	Needle Bar Rock Frame Hinge Stud with 202277
202277	16755	Needle Bar Rock Frame Hinge Stud Oil
		Packing (wick)
2003 4 7C	16755	Needle Bar Rock Frame Hinge Stud Set
10.1/././	1/255	Screw
202666	16755	Needle Bar Rock Frame Position
20000012	16755	Bracket Needle Res Rook Esses Position
200098F	16755	Needle Bar Rock Frame Position Bracket Screw
202667	16754	
202667	16754 16754	Needle Bar Rock Frame Rock Shaft
210978	10134	202667 with 200387C and 210920
		LULUUT WITH LUUJOTO, AND LIVITAU

No.	Plate	Name
202668	16754	Needle Bar Rock Frame Slide Block
210920	16754	202668 with 201141C
201141C	16754	Needle Bar Rock Frame Slide Block Screw Stud
200387C	16754	Needle Bar Rock Frame Slide Block Screw Stud Set Screw
200141E	16755	Needle Set Screw
207072	16781	Presser Bar Bushing (2)
200352C	16781	" " Set Screw (2)
202671	16781	" " Lifter
200653C	16781	" Hinge Screw
239046	16781	" Lifting Releasing Lever
2,70.0	• 0 . 0 •	Bracket
200975E	16781	Presser Bar Lifting Releasing Lever Bracket Guide Screw
206608	16781	Presser Bar Lifting Releasing Lever
200000	10101	Bracket Spring
202337	16781	Presser Bar Position Guide
202338	16781	" " " Izver with
202336	10/01	200086F,
200086F	16781	Presser Bar Position Guide Lever Pinch Screw
200352C	16781	Presser Bar Position Guide 5et Screw
239069	16758	'' '' Spring (flat) 🖐
239048	16781	" " " Bracket with 200086C
200086C	16781	Screw " Hanch
350346C	16758	Presser Bar Spring Regulating Screw
200948F	16758	" " Support Screw
201954	17635	Roller Presser, 13/16 in. diam., 1/8 in.
		face, with 1528J, 201699C, \$\overline{9}\)50104C and twenty-eight 206417
203422	17635	Roller Presser Arm
237816	17635	" 203422 with 201954
233807	16781	u u Bracket
235088	16781	" Position
		Collar with 200362C
200117F	16781	Roller Presser Arm Bracket Position Collar Position Screw
200362C	16781	Roller Presser Arm Bracket Position Collar Set Screw
202558	16781	Roller Presser Arm Bracket Spring
202559	16781	n n n '' Stop
200141F	16781	
		Screw
2000961)	16781	Roller Presser Arm Screw
206417	17635	" Ball, 1/16 in. diameter
201699C	17635	" Cone
202557	16781	" Bar
350104C	17635	" Hinge Screw
1528J	17635	" " " Nut

No.	Plate	Name
237847	16781	Roller Presser and Bar complete, Nos.
		200096D, 200117F, 202557 to 202559,
		233807, 235088, 237816 and two
		2001 41 F
202068	16778	Spool Holder Base
200575H	16778	" Screw
204296	16778	" Wire
200079H	16778	" Hinge Screw
204297	16778	Spool Holder complete, Nos. 200079H,
		202068 and 204296
239049	16755	Take-up Lever
202399	16755	" Driving Stud with 202277
202277	16755	" " " Oil Packing
		(wick)
202400	16755	Take-up Lever Hinge Stud with 202423
202423	16755	" " " Oil Packing
		(wick)
200363C	16755	Take-up Lever Hinge Stud Set Screw
202401	16781	" Oiling Felt
200132E	16781	" Screw
244048	16757	Tension Disc (back)
239061	16757	" " (front)
210950	16757	" Release Driving Lever with
		200394C and 202676
202676	16781	Tension Release Driving Lever Pin
239050	16757	" " Slide
		Bar
239051	16757	Tension Release Driving Lever Pin Slide
		Bar 239050 with 200167E and 239055
202678	16757	Tension Release Driving Lever Pin Slide
		Bar Spring
200394C	16781	Tension Release Driving Lever Set
		Screw
239052	16757	Tension Release Washer
202407	16757	" Spring
263106	16757	Washer
200625F	16757	" Stud with 204925
200061C	16757	" Set Screw
204925	16757	" Washer
201572H	16757	" Thumb Nut
239053	16757	Tension complete, Nos. 200625F,
		201572H, 202407, 239052, 239054,
		239061, 244048 and 263106
239054	16757	Thread Controller Spring
239055	16757	
200167E	16757	
210955	16757	" Guide (upper)
200582H	16757	Sciew (2)
241755	16758	Edbiteator on the (1997)
237779	16758	" " " Holder " " Retainer
240439	16758	" Ketamer
239071	16758	'' '' Reservoir (left) Hand
		E T WE T OF

No.	Plate	Name
241759	16758	Thread Lubricator Oil Wick
350432X	C 16758	" Screw
201650H	16758	" Nut
214838	16758	" Washer
239072	16758	Thread Lubricator (left hand) complete,
		Nos. 214838, 237779, 239071, 240439,
		241755 and 241759
223710	16757	Thread Retainer Bracket with 200397H
200582H	16757	" Screw (2)
210960	16757	o Disc
210961	16757	" Plunger
210962	16757	" Spring
210993	16757	" Sleeve
239056	16757	" Socket
200397H	16757	'' '' Set Screw
223844	16757	" " Spring 💆
210957	16757	" Stud
210958	16757	" " Collar 💍
200397H	16757	" " Set Screw 🖁
223711	16757	Thread Retainer (lower) comple <mark>k</mark> , Nos.
		210957, 210958, 210993, 22371 <mark>©</mark> and
		223844
239057	16782	Throat Plate,53 elongated needlehole,
		for needle sizes 14 and 15 🛗
200577AI		Throat Plate Screw (2)
237744	16754	Vertical Shaft
237745	16754	'' Bevel Gear (lower) 🛜
205508	16754	n n n n Pesition
		Pin
235857	16754	Vertical Shaft Bevel Gear (upper⊬with 200374C and 200396C
200396C	16754	- Vertical Shaft Bevel Gear (upper FPosi
		tion Screw
200374C	16754	Vertical Shaft Bevel Gear (upper) Set
		Screw
237734	16754	Vertical Shaft Bushing (lower)
200346C	16754	" Set Screw
237746	16754	$^{\prime\prime} \hspace{0.5cm}^{\prime\prime} \hspace{0.5cm}$
200362C	16754	" " Set Screw
237747	16778	" Priving Gear with
		200374C and 200396C
200396C	16778	Vertical Shaft Driving Gear Position
		Screw
200374C	16778	Vertical Shaft Driving Gear Set Screw
237754	16754	" " Oil Leader (lower) (brass)
237755	16754	" " (upper) (brass)

ACCESSORIES

ACCESSORIES

No.	Plate	Name
203470	16780	Bobbin (2)
4822	17635	Roller Presser Hinge Screw Nut
		Wrench
228476	16783	Screw Driver (Bobbin Case)
16×4		Needles, three each, sizes 12 and 14
227104	16762	Drip Pan (cast iron, square) with one
		wood screw 1-1/2 in., No. 14, R. H. B.
51078	16783	Machine Bolt (4)
6055	16783	" Washer (4)
41401	16783	" Rest Pin (wood)
120342	16783	Oiler (copper plated) with 120343
120343	16783	" Spout, 3-1/2 in. long
225498	16783	Screw Driver (7-1/4 in. long)
225554	16783	Wrench (steel)

BOBBIN WINDER

(SWINGING AUTOMATIC, LEFT HAND)

227149	16761	Base
227209	16761	Frame with 200125F
227152	16761	" Hinge Pin
227153	16761	" Spring
200125F	16761	" Stop Screw
227154	16761	Pulley (large) with 200380C
200380C	16761	" Set Screw
227156	16761	Spindle
227157	16761	Stop Latch
227159	16761	" " Hinge Pin
227160	16761	" Spring
227048	16761	Bobbin Winder complete (large pulley)
		Nos. 227149, 227152 to 227154
		227156, 227157, 227159, 227160,
		227209 and two round head wood
		screws 3/4 in., No. 12,
202480	16761	Spool Holder Base with 200355H and
		202484
202481	16761	Spool Holder Base Spool Pin
202482	16761	" Tension Disc (lower or
		upper)
200011D	16761	Spool Holder Tension Disc Screw
200355H	16761	o o o o o o o o o o o o o o o o o o o
		Screw

	No.	\mathbf{Plate}	Name
2	02483	16761	Spool Holder Tension Disc Spring (brass)
2)	02484	16761	Spool Holder Tension Disc Thread Guide
20	02485	16761	Bobbin Winder Spool Holder complete, Nos. 200011D, 202480, 202481, 202483, two 202482 and one wood screw 1 in., No. 12
2.	27514	16761	Bobbin Winder and Spool Holder complete, Nos. 202485 and 227048

FOOT LIFTER

					2	
227952	16762	Foot Lifter	Lever	with 2	22795	
227678	16762	11 11	11	Chain	, 48 in	long,
		with 202	784		页	
227954	16762	Foot Lifter	Lever	Chain	Hooko(lower)
202784	16762	11 11	- 0	+1	· · · Z(,	apper)
225016	16762	11 11	1.1	Hing e	Pin 🔁	
227939	16762	11 11	11			o wood
		screws 1	in., N	0.12	and the	
227955	16762	Foot Lifter	Lever	compl	ete, Nos	s.225016,
		227678,2	27939	and 22	7952 芷	
	(Other	Foot Lifter pa	arts ar	e liste	d with ₽;	parts
of Machine Head)						
					ţŪ	

FEED REGULATING GEARS

239018	16779	Feed Regulating Gear, 23 teeth, with 200382C and 201220C
239019	16779	Feed Regulating Gear, 24 teeth, with 200382C and 201220C
239020	16779	Feed Regulating Gear, 25 teeth, with 200382C and 201220C
239021	16779	Feed Regulating Gear, 26 teeth, with 200382C and 201220C
239022	16779	Feed Regulating Gear, 27 teeth, with 200382C and 201220C
239023	16779	Feed Regulating Gear, 28 teeth, with 200382C and 201220C
239024	16779	Feed Regulating Gear, 29 teeth, with 200382C and 201220C
239025	16779	Feed Regulating Gear, 30 teeth, with 200382C and 201220C
239026	16779	Feed Regulating Gear, 31 teeth, with 200382C and 201220C

ROLLER PRESSERS

No.	Plate	Name		
201926	17635	Roller Presser, 13/16 in. diam., 5/32		
		in. face (fine) with 1528J, 201699C,		
		350104C and twenty-eight 206417		
201928	17688	Roller Presser, 1-1/4 in. diam., 3/16		
201720	17000	in. face (fine) with 1528J, 1766C,		
		50553C and twenty-four 16232		
201931	17688	Roller Presser, 1-1/4 in. diam., 1/8		
201931	17000	in. face (fine) with 1528J, 1766C,		
		50553C and twenty-four 16232		
201933	17688	Roller Presser, 1-1/4 in. diam., 1/16		
201773	11000	in. face (fine) with 1528J, 1766C,		
		50553C and twenty-four 16232		
201951	17635	Roller Presser, 13/16 in. diam., 3/16		
201751	11000	in. face (fine) with 1528J, 201699C,		
•		350104C and twenty-eight 206417		
201954	17635	Roller Presser, 13/16 in. diam., 1/8		
201,31	11000	in. face, with 1528J, 201699C,		
		350104C and twenty-eight 206417		
201971	17688	Roller Presser, 1-1/4 in. diam., 3/32 in.		
,	•	face (fine) with 1528J, 1766C, 50553C		
		and twenty-four 16232		
201963	17688	Roller Presser, 1-1/4 in. diam., 5/32 in.		
	1,000	in. face, with 1528J, 1766C, 50553C		
		and twenty-four 16232		
203422	17635	Roller Presser Arm		
203426	17688	" " Arm		
203423	17635	" 203422 with 201926		
203427	17688	" " 203426 with 201928		
203427	17688	" 203426 with 201931		
203430	17688	" 203426 with 201933		
203431	17635	" 203422 with 201951		
203434	17688	" 203422 with 201963		
237816	17635	" " 203422 with 201954		
238527	17688	" " 203426 with 201971		
233807	17681	" Bracket		
235088	17681	" " Position		
635088	17001	Collar with 200362C		
1001171	16781	Roller Presser Arm Bracket Position		
200 11 7F	10781	Collar Position Screw		
1002(36	1/701	Roller Presser Arm Bracket Position		
200362C	16781	Collar Set Screw		
103550	1/701			
202558	16781	Roller Presser Arm Bracket Spring		
202559	16781			
1001.41.5	1/701	Stop		
200141F	16781	Roller Presser Arm Bracket Spring		
10000/5	1/701	Stop Screw		
200096D	16781	Roller Presser Arm Screw		

No.	Plate	Name
16232	17688	Roller Presser Ball, 3/32 in. diameter
206417	17635	" " 1/16 in. diameter
1766C	17688	" Cone
201699C	17635	" Cone
202557	16781	" Bar
50553C	17688	" Hinge Screw
350104C	17635	" Screw
1528J	17635	" Nut
233808	16781	Roller Presser and Bar complete, Nos.
		200096D, 200117F, 202557 to 202559, 203427, 233807, 235088 and two 200141F
233843	16781	Roller Presser and Bar complete, Nos. 200096D, 200117F, 202557 to 202559, 203432, 233807, 235088 and two 200141F
237847	16781	Roller Presser and Bar complete, Nos. 200096D, 200117F, 202557 to 202559, 233807, 235088, 237816 and (wo 200141F)

WORK PLATE PLATFORM ijo

214013	17028	Work Plate
200990C	17028	"
201518E	17028	" " Nut 0
239067	17028	" " Slide (back) 💆
239066	17028	" " (front)
239064	17028	" "Yoke with 200729A 📙
200729A	17028	" " Screw
239065	17028	Work Plate complete, Nos. 214013,
		239064, 239066, 239067, four 200990C
		and eight 201518E

16754 - 1/3

SINCER Needles should be used in SINCER Machines These Needles and their Containers are marked with the Company's Trade Mark "SIMANCO.**"

Needles in Containers marked
"FOR SINGER MACHINES"
are NOT **SINGER** made needles. 2

