

SINGER
111W103

MACHINE NO. 111w103

2-21-61

240545

MACHINE NO. 111w103

*240173 Arm with 202135
240069 Arm Cap with 244071
244071 Arm Cap Oil Wick
200278X Arm Cap Screw
202248 Arm Cap Screw Washer
204235 Arm Position Pin (2)
200004E Arm Screw (3)
202005 Arm Screw Washer (3)
240102 Arm Shaft with 200357E and 224392
240802 Arm Shaft Bushing (back) with 202244
202244 Arm Shaft Bushing (back) Oil Packing (wick)
200338C Arm Shaft Bushing (back) Set Screw
207080 Arm Shaft Bushing (front) with 202244
202244 Arm Shaft Bushing (front) Oil Packing (wick)
200502X Arm Shaft Bushing (front) Oil Packing Thumb Screw
200338C Arm Shaft Bushing (front) Set Screw
224103 Arm Shaft Connection Belt
224104 Arm Shaft Connection Belt Pulley with 200327C, 200602C
and two 202253
200602E Arm Shaft Connection Belt Pulley Position Screw
200327C Arm Shaft Connection Belt Pulley Set Screw
202253 Arm Shaft Connection Belt Pulley Spring Flange
224113 Arm Shaft Connection Belt Timing Collar with 200113F
200113F Arm Shaft Connection Belt Timing Collar Set Screw
224139 Arm Shaft Connection Belt Timing Plate
200164X Arm Shaft Connection Belt Timing Plate Screw (2)

MACHINE NO. 111w103

224392 Arm Shaft Oil Packing (wick)
200357E Arm Shaft Oil Packing Thumb Screw
*240103 Bed
54897 Bed Oil Cup
240003 Bed Slide (back)
223811 Bed Slide (back) Stop
223812 Bed Slide (back) Stop Spring
240004 Bed Slide (front)
203470 Bobbin
*233764 Bobbin Case
203648 Bobbin Case Latch
*202056 Bobbin Case Latch Pin
203473 Bobbin Case Latch Plunger
203474 Bobbin Case Latch Spring
241674 Bobbin Case Oiling Felt
241675 Bobbin Case Oiling Felt Retainer
350405C Bobbin Case Oiling Felt Retainer Screw
224004 Bobbin Case Opener
224005 Bobbin Case Opener Lever with 201349C, 201542C and
203101
201349C Bobbin Case Opener Lever Driving Screw Stud
201542C Bobbin Case Opener Lever Driving Screw Stud Nut
203101 Bobbin Case Opener Lever Driving Screw Stud Oil Packing
(wick)
265088 Bobbin Case Opener Lever Hinge Stud with 202277
202277 Bobbin Case Opener Lever Hinge Stud Oil Packing (wick)

MACHINE NO. 111w103

200364C Bobbin Case Opener Lever Hinge Stud Set Screw
223623 Bobbin Case Opener Lever Link
200118D Bobbin Case Opener Screw
203214 Bobbin Case Tension Spring
200984C Bobbin Case Tension Spring Regulating Screw
200594C Bobbin Case Tension Spring Screw
203216 Bobbin Case Washer (cloth)
233765 Bobbin Case complete, Nos. 200594C, 200984C, 202056, 203214,
203216, 203473, 203474, 203648, 233764, 241674, 241675 and
two 350405C
240179 Face Plate with 201650X and 350432XC
202135 Face Plate Position Pin
200473X Face Plate Thumb Screw
240037 Feed Bar
240038 Feed Bar 240037 with 224052, 225837 and 350197E
350393C Feed Bar Hinge Screw (driving)
201518E Feed Bar Hinge Screw Nut
240112 Feed Dog, 40 needle hole, for needle sizes 20 and 22
200106E Feed Dog Screw (2)
237565 Feed Driving Connection with 200049D and 202330
201171C Feed Driving Connection Hinge Screw
201517E Feed Driving Connection Hinge Screw Nut
202277 Feed Driving Connection Hinge Screw Oil Packing (wick)
202330 Feed Driving Connection Oil Packing (wick)
200049D Feed Driving Connection Pinch Screw
237521 Feed Driving Eccentric Regulating Bracket

MACHINE NO. 111w103

237043 Feed Driving Eccentric Regulating Bracket 237521 with
224108 two each 200256C and 201535E

224108 Feed Driving Eccentric Regulating Bracket Flange with
200383C and 200437C

200437C Feed Driving Eccentric Regulating Bracket Flange Position
Screw

200383C Feed Driving Eccentric Regulating Bracket Flange Set
Screw

200256C Feed Driving Eccentric Regulating Bracket Hinge Screw

201525E Feed Driving Eccentric Regulating Bracket Hinge Screw
Nut

202301 Feed Driving Eccentric Regulating Bracket Plunger

237523 Feed Driving Eccentric Regulating Bracket Plunger Spring

200607C Feed Driving Eccentric Regulating Bracket Plunger Spring
Stop Screw

200256C Feed Driving Eccentric Regulating Bracket Stop Screw

201525E Feed Driving Eccentric Regulating Bracket Stop Screw
Nut

200429C Feed Driving Eccentric Regulating Screw

200383C Feed Driving Eccentric Regulating Screw Check Screw

223650 Feed Driving Rock Shaft

240031 Feed Driving Rock Shaft 223650 with 201518E, 240038 and
350393C

223655 Feed Driving Rock Shaft Crank with 200019E

200019E Feed Driving Rock Shaft Crank Pinch Screw

202625 Feed Driving Rock Shaft Stop Collar with two 200383C (2)

200383C Feed Driving Rock Shaft Stop Collar Set Screw

224154 Feed Lifting Cam with 201220C

224052 Feed Lifting Cam Fork with 200173D and 223655

350197E Feed Lifting Cam Fork Screw

MACHINE NO. 111w103

225837 Feed Lifting Cam Fork Screw Washer
223655 Feed Lifting Cam Oiling Felt
200173D Feed Lifting Cam Oiling Felt Screw
201220C Feed Lifting Cam Set Screw
224122 Feed Regulating Spindle with 202311, 202443 and 202619
*202311 Feed Regulating Spindle Head
202443 Feed Regulating Spindle Head Pin
202619 Feed Regulating Spindle Head Position Pin
*240041 Hook (sewing)
240042 Hook 240041 with 203525, 224025, two each 200590X and
201253F
240207 Hook and Bobbin Case complete, Nos. 233765 and 240042
224019 Hook Bushing (lower) (bronze)
200364C Hook Bushing (lower) Set Screw
224020 Hook Bushing (upper) (bronze)
200446C Hook Bushing (upper) Position Screw
223867 Hook Driving Gear (spiral) with 200362C and 201222C
201222C Hook Driving Gear Position Screw
200362C Hook Driving Gear Set Screw
240167 Hook Driving Pinion (spiral) with 200382C and 201220C
200382C Hook Driving Pinion Set Screw
201220C Hook Driving Pinion Set Screw
224022 Hook Driving Pinion Thrust Washer
240017 Hook Driving Shaft
224111 Hook Driving Shaft Bushing (back) with 202244
202244 Hook Driving Shaft Bushing Oil Packing (wick)

MACHINE NO. 111w103

237529	Hook Driving Shaft Bushing (front)
200327C	Hook Driving Shaft Bushing Set Screw (2)
*240045	Hook Driving Shaft Connection Belt Pulley with 202253 and 240049
*240046	Hook Driving Shaft Connection Belt Pulley Driving Flange with two 201254C
240047	Hook Driving Shaft Connection Belt Pulley Driving Flange Locking Plunger
240048	Hook Driving Shaft Connection Belt Pulley Driving Flange Locking Plunger Spring
240049	Hook Driving Shaft Connection Belt Pulley Driving Flange Locking Plunger Spring Socket
201254C	Hook Driving Shaft Connection Belt Pulley Driving Flange Set Screw
240050	Hook Driving Shaft Connection Belt Pulley Safety Clutch complete, Nos. 240045 and 240048
202253	Hook Driving Shaft Connection Belt Pulley Spring Flange
203525	Hook Gib
201253F	Hook Gib Screw
223850	Hook Saddle with 200009E
224024	Hook Saddle 223850 with 200364C, 200446C, 224019 and 224020
223681	Hook Saddle Bearing
200335C	Hook Saddle Bearing Set Screw
240018	Hook Saddle Oil Guard
240019	Hook Saddle Oil Guard Felt
200160D	Hook Saddle Oil Guard Screw (2)
200009E	Hook Saddle Pinch Screw
200006E	Hook Saddle Screw
225585	Hook Saddle Screw Washer

MACHINE NO. 111w103

240177 Hook Saddle complete, Nos. 200118D, 200364C, 223623, 224004,
224005, 224022, 224024, 240167, 240207 and 265088

224025 Hook Washer

200590X Hook Washer Screw

237837 Knee Lifter Connection Lever

200262X Knee Lifter Connection Lever Hinge Screw

223684 Knee Lifter Connection Lever Lifting Rod with 202302

202302 Knee Lifter Connection Lever Lifting Rod Cotter Pin

206628 Knee Lifter Connection Lever Lifting Rod Spring

227227 Knee Lifter Connection Lever Lifting Rod Spring Collar
with 200113F

200113F Knee Lifter Connection Lever Lifting Rod Spring Collar
Set Screw

240175 Knee Lifter Lifting Lever

200262X Knee Lifter Lifting Lever Hinge Screw

208545 Lifting Bell Crank

200996C Lifting Bell Crank Cap Screw

240125 Lifting Bell Crank Link

350172C Lifting Bell Crank Link Screw Stud

201524E Lifting Bell Crank Link Screw Stud Nut

240160 Lifting Eccentric with 200382C and 200398C

240126 Lifting Eccentric Connection

240171 Lifting Eccentric Connection Crank with 200029E and
210933

210933 Lifting Eccentric Connection Crank Oil Packing (wick)

200029E Lifting Eccentric Connection Crank Pinch Screw

200398C Lifting Eccentric Position Screw

MACHINE NO. 111w103

200382C Lifting Eccentric Set Screw
240135 Lifting Presser Foot, for cording and general upholstery
200074 Lifting Presser Foot Screw
240136 Lifting Rock Shaft with 201524E and 350172C
240174 Lifting Rock Shaft Bushing (2)
241561 Machine Pulley (disc) (belt groove 2-3/4 in. diam.) with
200382C and 200335C
200328C Machine Pulley Position Screw
200335C Machine Pulley Set Screw
240169 Needle Bar with 200125F, 200175D and 240170
202552 Needle Bar Connecting Link
264718 Needle Bar Connecting Link Oil Guard
200161D Needle Bar Connecting Link Oil Guard Screw
202333 Needle Bar Connecting Link Stud with 202254
202254 Needle Bar Connecting Link Stud Oil Packing (wick)
200374C Needle Bar Connecting Link Stud Set Screw
200383C Needle Bar Connecting Link Stud Set Screw
208552 Needle Bar Connecting Stud with 200086C and 202330
202330 Needle Bar Connecting Stud Oil Packing (wick)
200086C Needle Bar Connecting Stud Pinch Screw
202692 Needle Bar Crank with 200335C, 200374C, 200383C, 200428C
and 202333
240178 Needle Bar Crank 202692 with 202399, 202400, 202552, 208552
and 241518
203172 Needle Bar Crank Friction Washer
200428C Needle Bar Crank Position Screw
200335C Needle Bar Crank Set Screw

MACHINE NO. 111w103

240138 Needle Bar Rock Frame
210910 Needle Bar Rock Frame Hinge Stud with 202277
202277 Needle Bar Rock Frame Hinge Stud Oil Packing (wick)
200347C Needle Bar Rock Frame Hinge Stud Set Screw
202666 Needle Bar Rock Frame Position Bracket
200098F Needle Bar Rock Frame Position Bracket Screw
223690 Needle Bar Rock Frame Rock Shaft
223691 Needle Bar Rock Frame Rock Shaft 223690 with 200387C and
210920
223692 Needle Bar Rock Frame Rock Shaft Crank with 200029E
223693 Needle Bar Rock Frame Rock Shaft Crank Connection with
202277
200833C Needle Bar Rock Frame Rock Shaft Crank Connection Hinge
Screw
201522E Needle Bar Rock Frame Rock Shaft Crank Connection Hinge
Screw Nut
202277 Needle Bar Rock Frame Rock Shaft Crank Connection Oil
Packing (wick)
200029E Needle Bar Rock Frame Rock Shaft Crank Pinch Screw
202668 Needle Bar Rock Frame Slide Block
210920 Needle Bar Rock Frame Slide Block 202668 with 201141C
201141C Needle Bar Rock Frame Slide Block Stud
200387C Needle Bar Rock Frame Slide Block Stud Set Screw
240170 Needle Bar Thread Guide
200175D Needle Bar Thread Guide Screw
200125F Needle Set Screw
208566 Presser Bar with 200074F
241535 Presser Bar Bushing (lower)

MACHINE NO. 111w103

207072 Presser Bar Bushing (upper)
200352C Presser Bar Bushing Set Screw (2)
202554 Presser Bar Lifter
200653C Presser Bar Lifter Hinge Screw
208555 Presser Bar Lifting Bracket with 200054E
200975F Presser Bar Lifting Bracket Guide Screw
200054E Presser Bar Lifting Bracket Pinch Screw
202337 Presser Bar Position Guide
202338 Presser Bar Position Guide Lever with 200086F
200086F Presser Bar Position Guide Lever Pinch Screw
200352C Presser Bar Position Guide Set Screw
237836 Presser Bar Spring (flat)
210949 Presser Bar Spring Bracket with 200086C
200086C Presser Bar Spring Bracket Pinch Screw
201410F Presser Bar Spring Regulating Screw
200948F Presser Bar Spring Support Screw
241518 Take-up Lever
202399 Take-up Lever Driving Stud with 202277
202277 Take-up Lever Driving Stud Oil Packing (wick)
202400 Take-up Lever Hinge Stud with 202423
202423 Take-up Lever Hinge Stud Oil Packing (wick)
200363C Take-up Lever Hinge Stud Set Screw
240023 Tension Bracket with 201224X and 236060
200159F Tension Bracket Screw
234047 Tension Bracket Screw Socket

MACHINE NO. 111w103

200368X	Tension Bracket Screw Socket Set Screw
240024	Tension Bracket complete, Nos. 13710, 200978X, 201199F, 204271, 223703, 223704, 223706, 237174, 240023, two each 200309E, 201572X and 244048
244048	Tension Disc
236060	Tension Disc Position Pin
223703	Tension Release Lever
235576	Tension Release Lever Rod
200309E	Tension Release Lever Screw
223704	Tension Release Plunger
240141	Tension Release Slide
240142	Tension Release Slide Spring
204271	Tension Release Washer
13710	Tension Spring
201224X	Tension Stud
201572X	Tension Thumb Nut
223706	Thread Controller Disc
200978X	Thread Controller Disc Screw
237174	Thread Controller Spring
242117	Thread Controller Spring Stop
200132E	Thread Controller Spring Stop Screw
201199F	Thread Controller Stud with 204925
200061C	Thread Controller Stud Set Screw
201572X	Thread Controller Stud Thumb Nut
204925	Thread Controller Stud Washer
202412	Thread Guide
224040	Thread Guide

MACHINE NO. 111w103

210955 Thread Guide (upper)
200582X Thread Guide Screw (3)
241755 Thread Lubricator Oil Pad (felt)
237845 Thread Lubricator Oil Pad Holder
240439 Thread Lubricator Oil Pad Retainer
241758 Thread Lubricator Oil Reservoir
241759 Thread Lubricator Oil Wick
350432XC Thread Lubricator Screw
201650X Thread Lubricator Screw Nut
241838 Thread Lubricator Screw Washer
237846 Thread Lubricator complete, Nos. 214838, 237845, 240439,
241755, 241758 and 241759
240034 Thread Retainer
200355X Thread Retainer Set Screw
240145 Throat Plate
691F Throat Plate Screw (2)
208562 Vibrating Presser Bar
208563 Vibrating Presser Bar Connecting Link
202277 Vibrating Presser Bar Oil Packing (wick)
240158 Vibrating Presser Foot, 40 needle hole, with 201015F
201015F Vibrating Presser Foot Pinch Screw

ACCESSORIES

FOR

MACHINE NO. 111w103

200157X	Attachment Screw
200861D	Bed Slide (back) Locking Thumb Screw
203470	Bobbin (5)
225497	Bobbin Case Screw Driver
231337	Cloth Guide
200861D	Cloth Guide Thumb Screw
135x17	Needles six size 24
224121	Drip Pan
12361	Machine Hinge Connection (2)
41400	Machine Rest Pin (wood)
120342	Oiler
225498	Screw Driver complete
225554	Wrench
225382	Bobbin Winder complete
228298	Knee Lifter Rock Lever complete