

Form K6473
(Supersedes K6227)

ILLUSTRATED
LIST OF PARTS

FOR

SINGER*

MACHINES

Nos. 132K6 to 132K10
and 132K12

From the library of: Diamond Needle Corp



* A Trademark of THE SINGER MANUFACTURING COMPANY



86611







120342




From the library of: Diamond Needle Corp

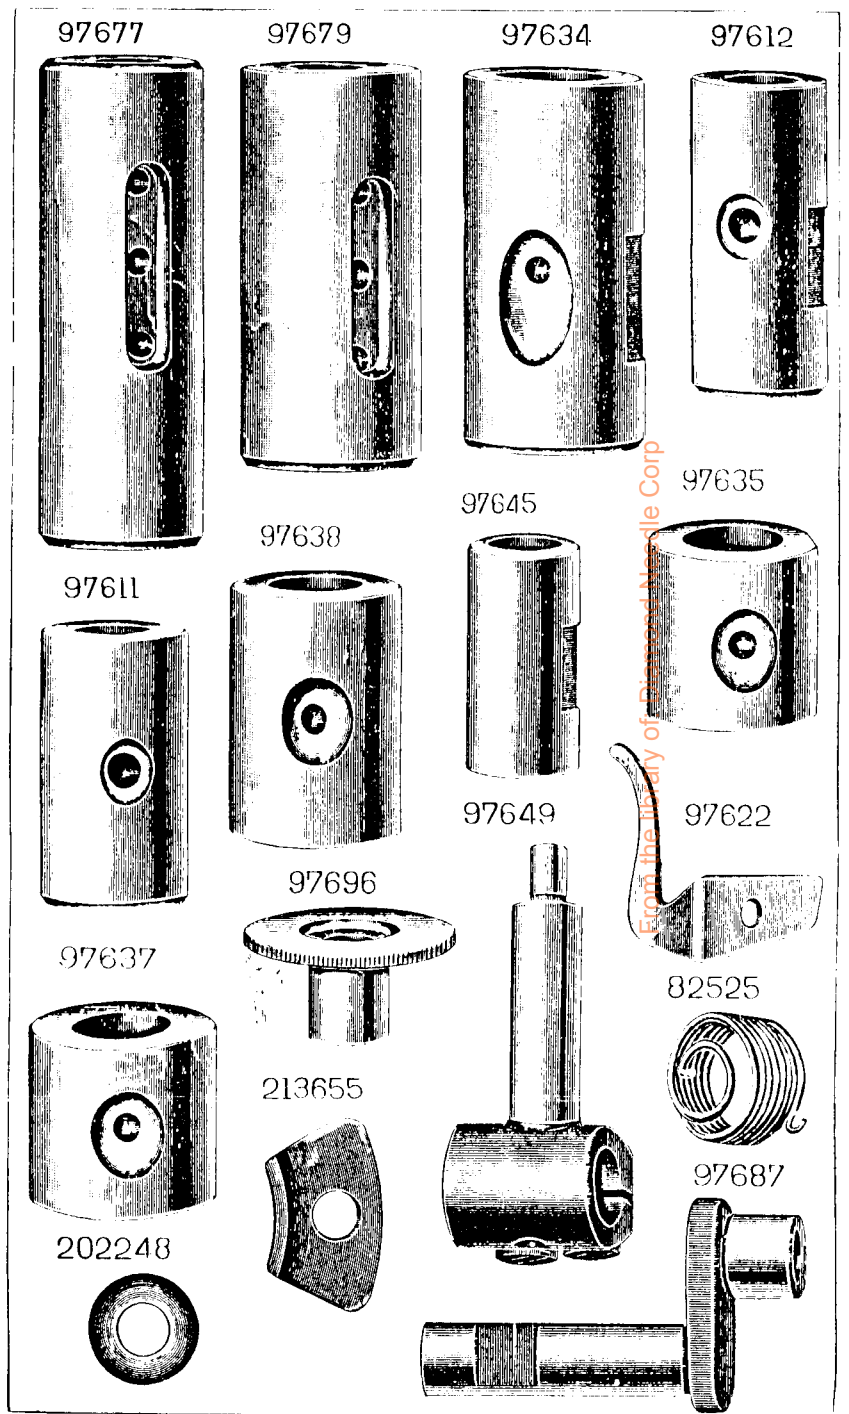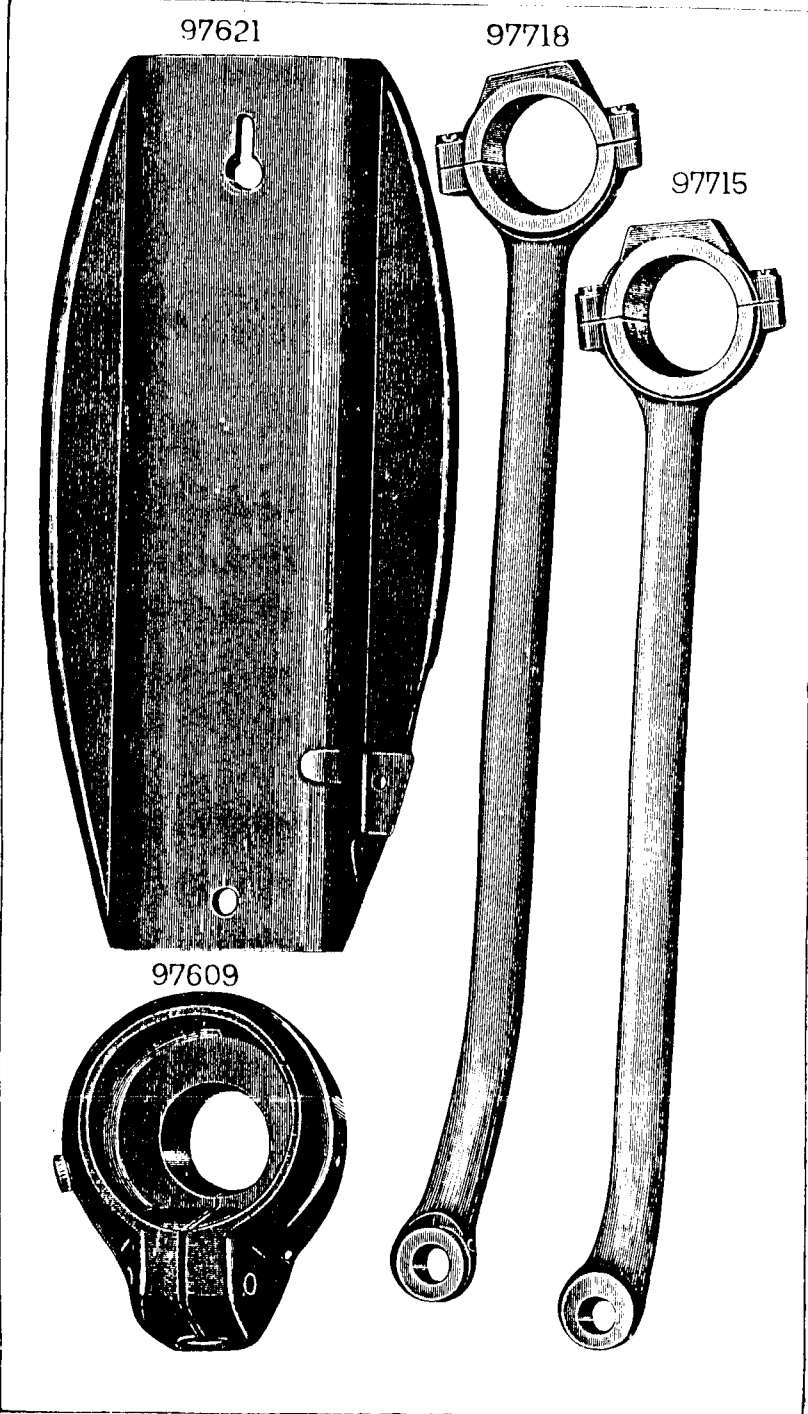

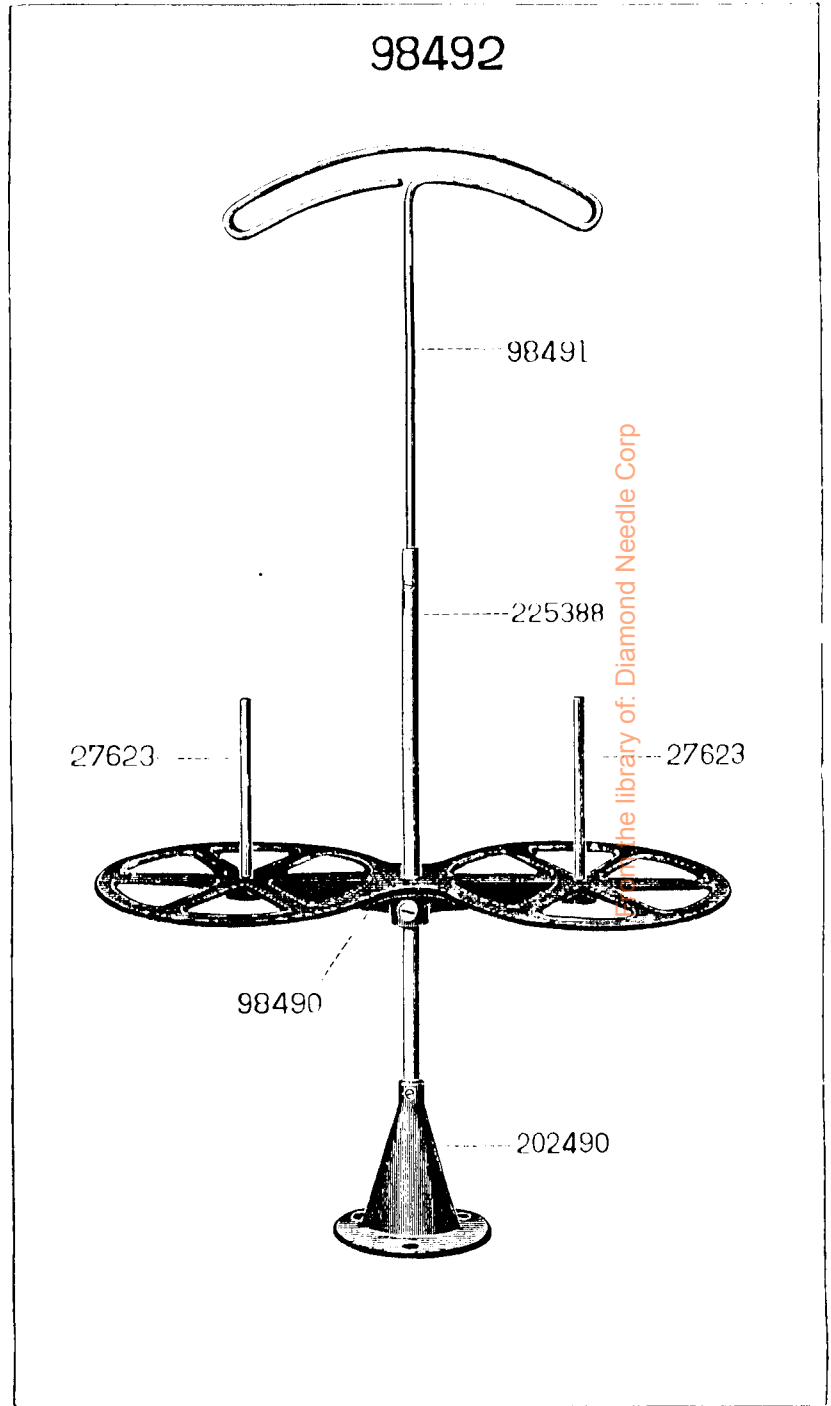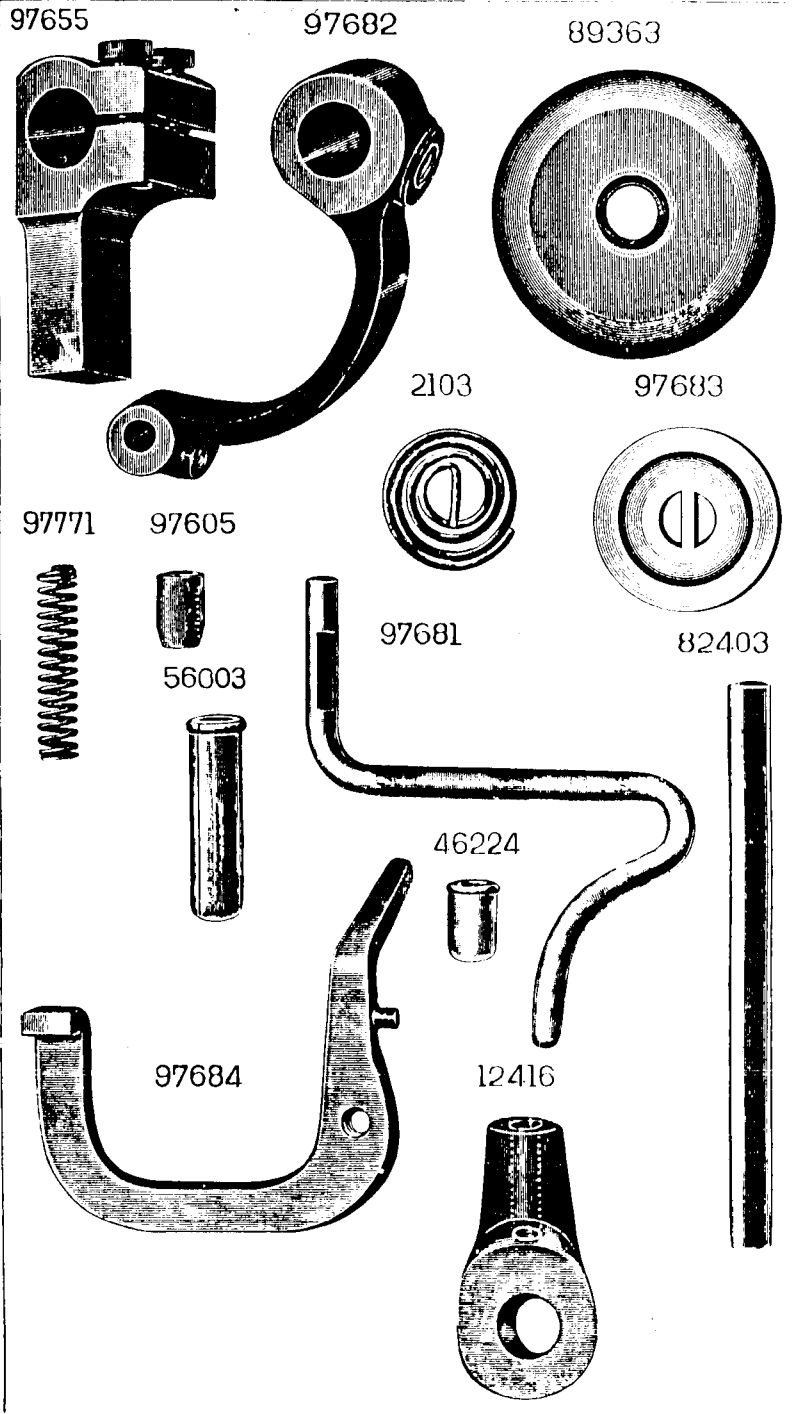


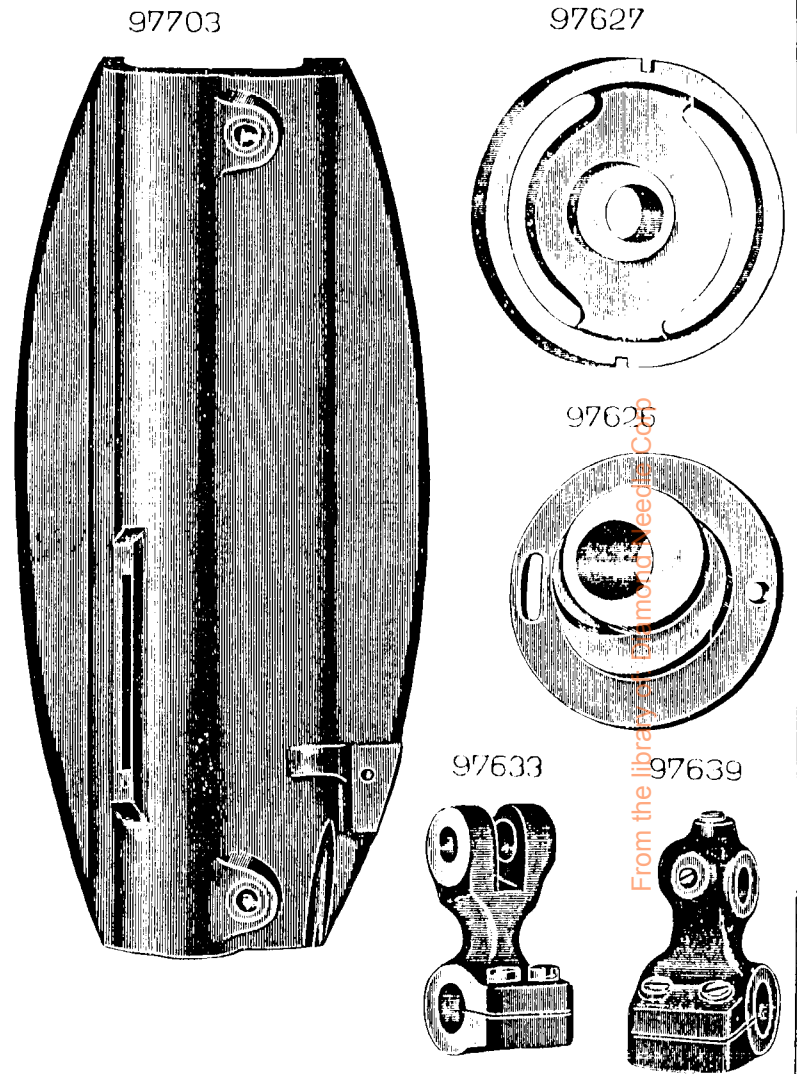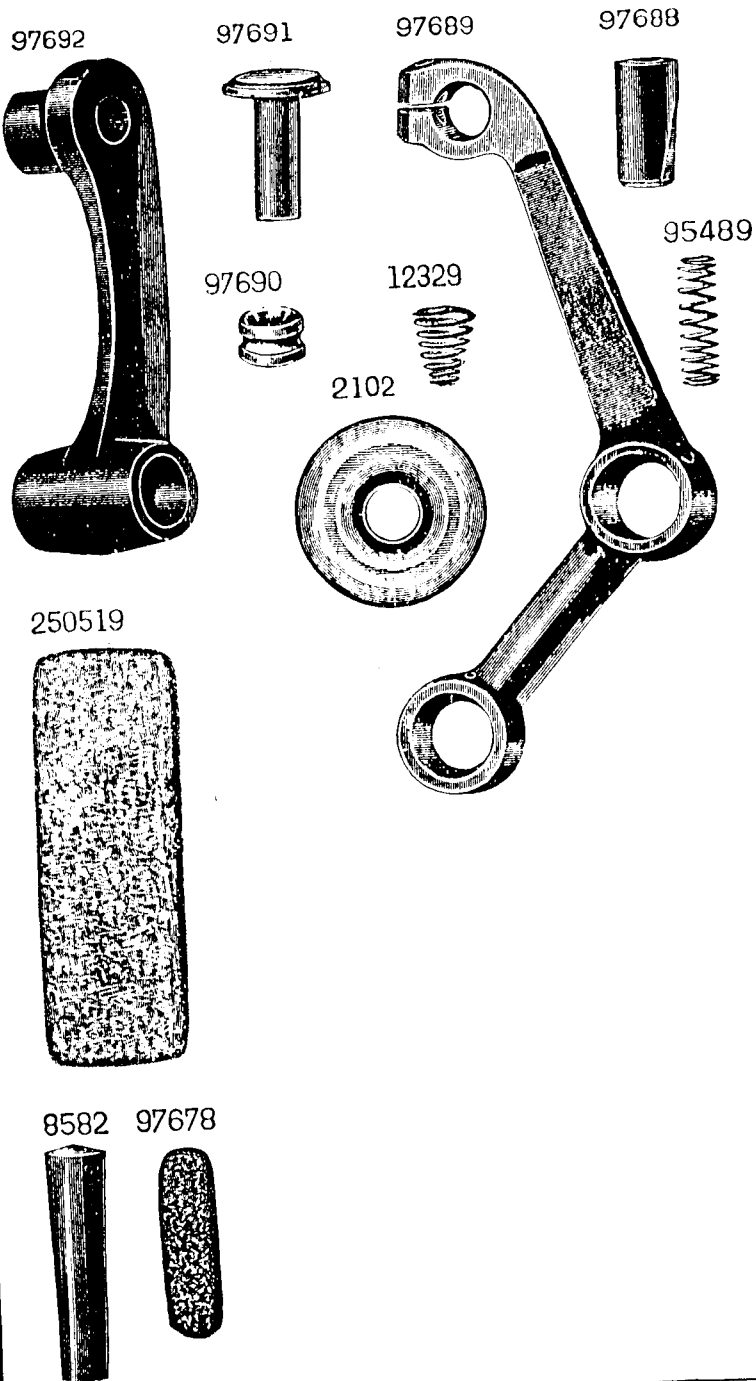


97781

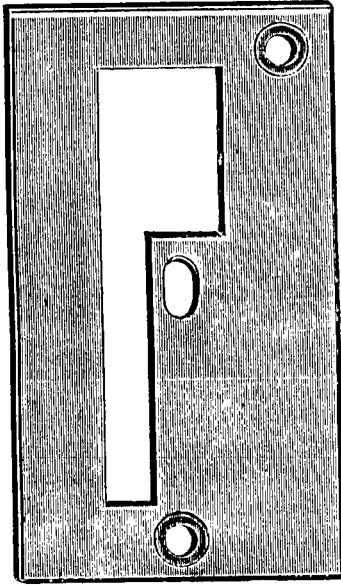


97702

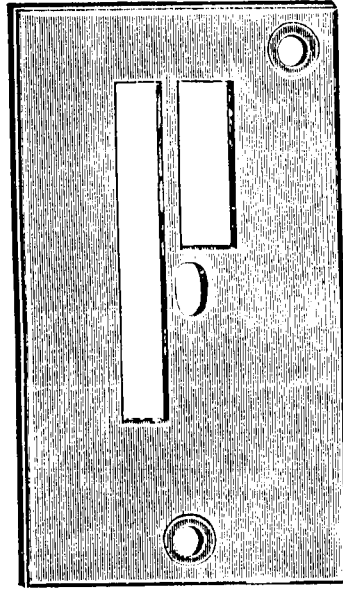 


97753

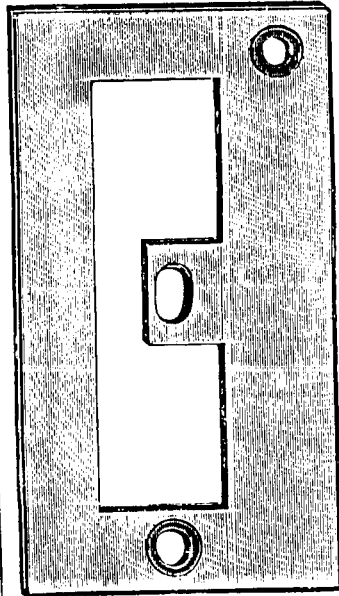


97764

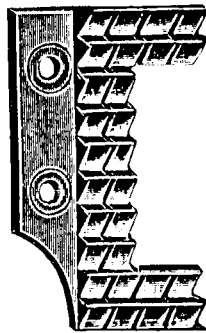


97779

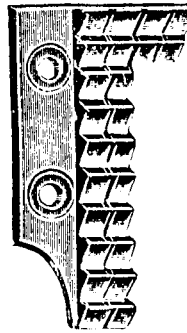


97704

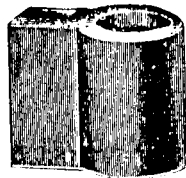 


97632

 


97766

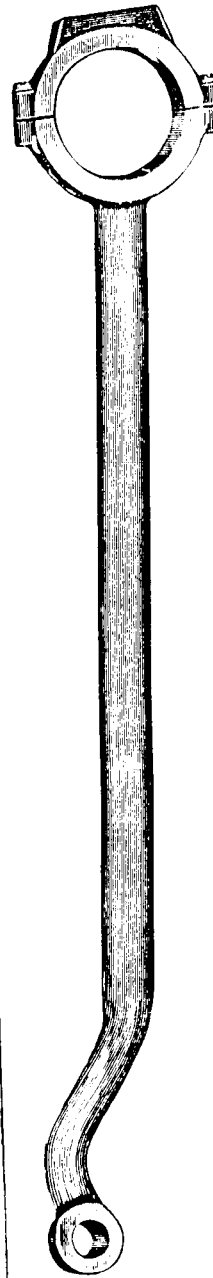


97642

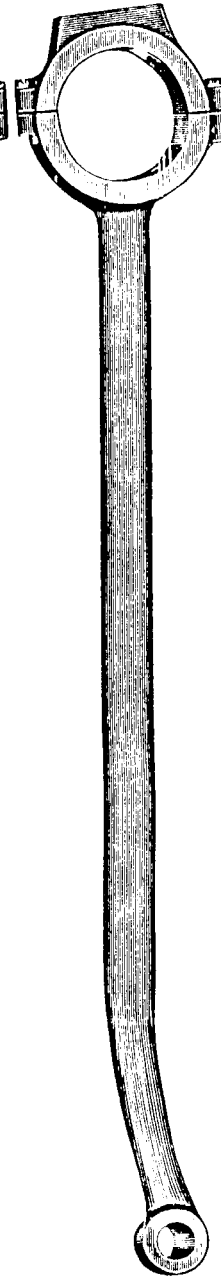


97631

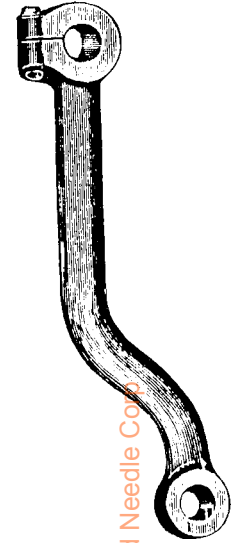 

97630

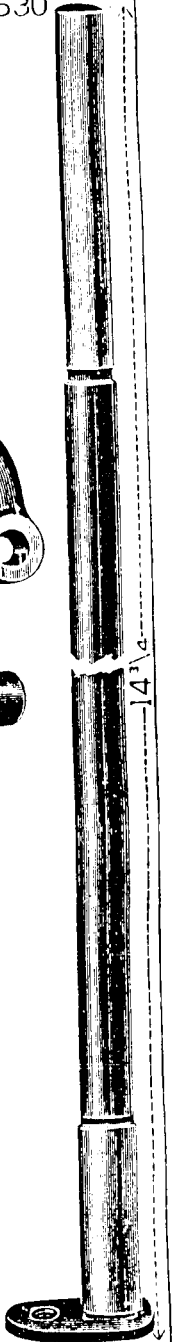


97623

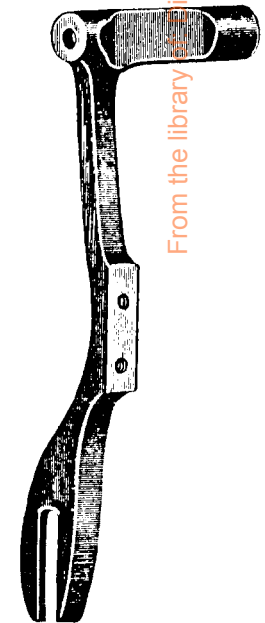


From the library of the Diamond Needle Corp.

14 1/2


97780

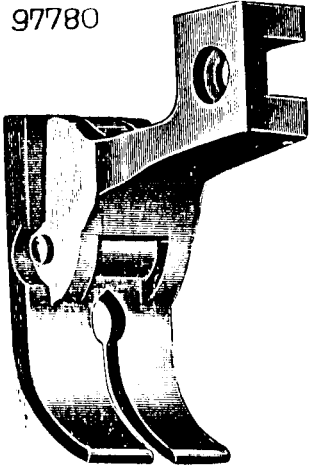


97707

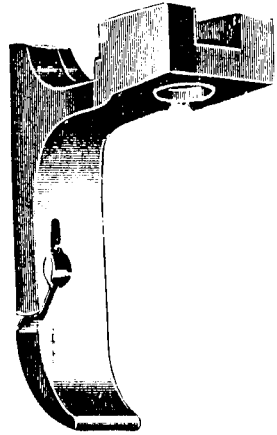


97708

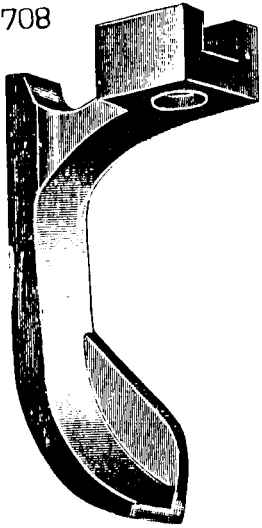 


97700

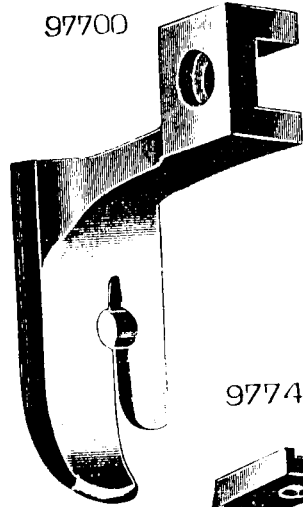 


97744

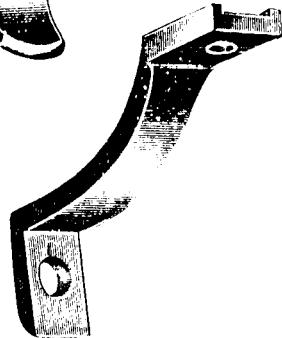 


97754

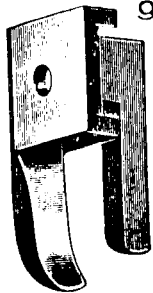 

97726

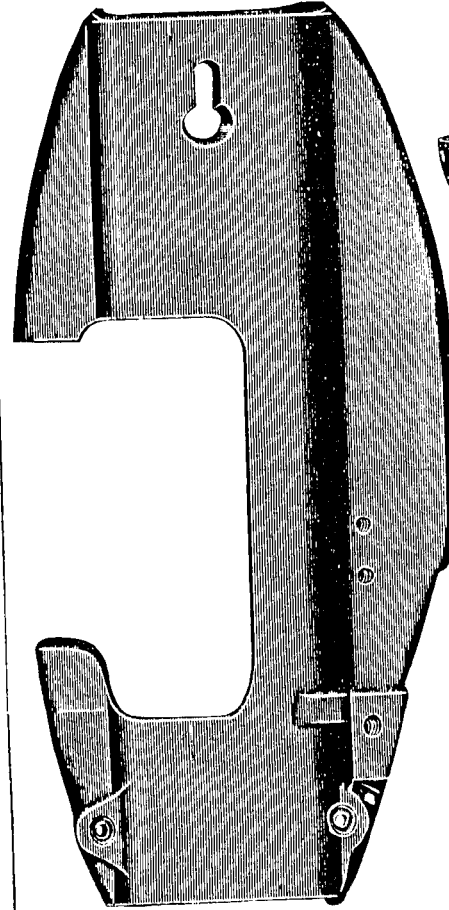 


97727

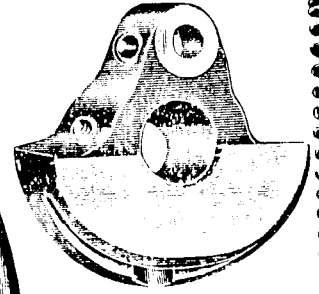

97706




97733

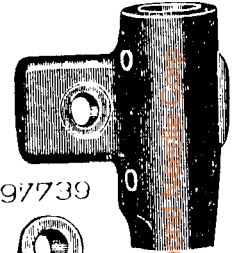


97739




 
97732


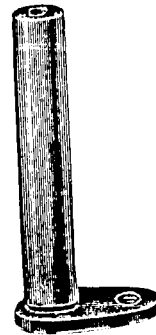


97735


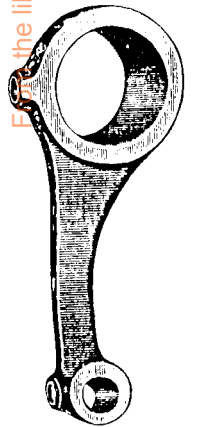




For the library of: Diam...

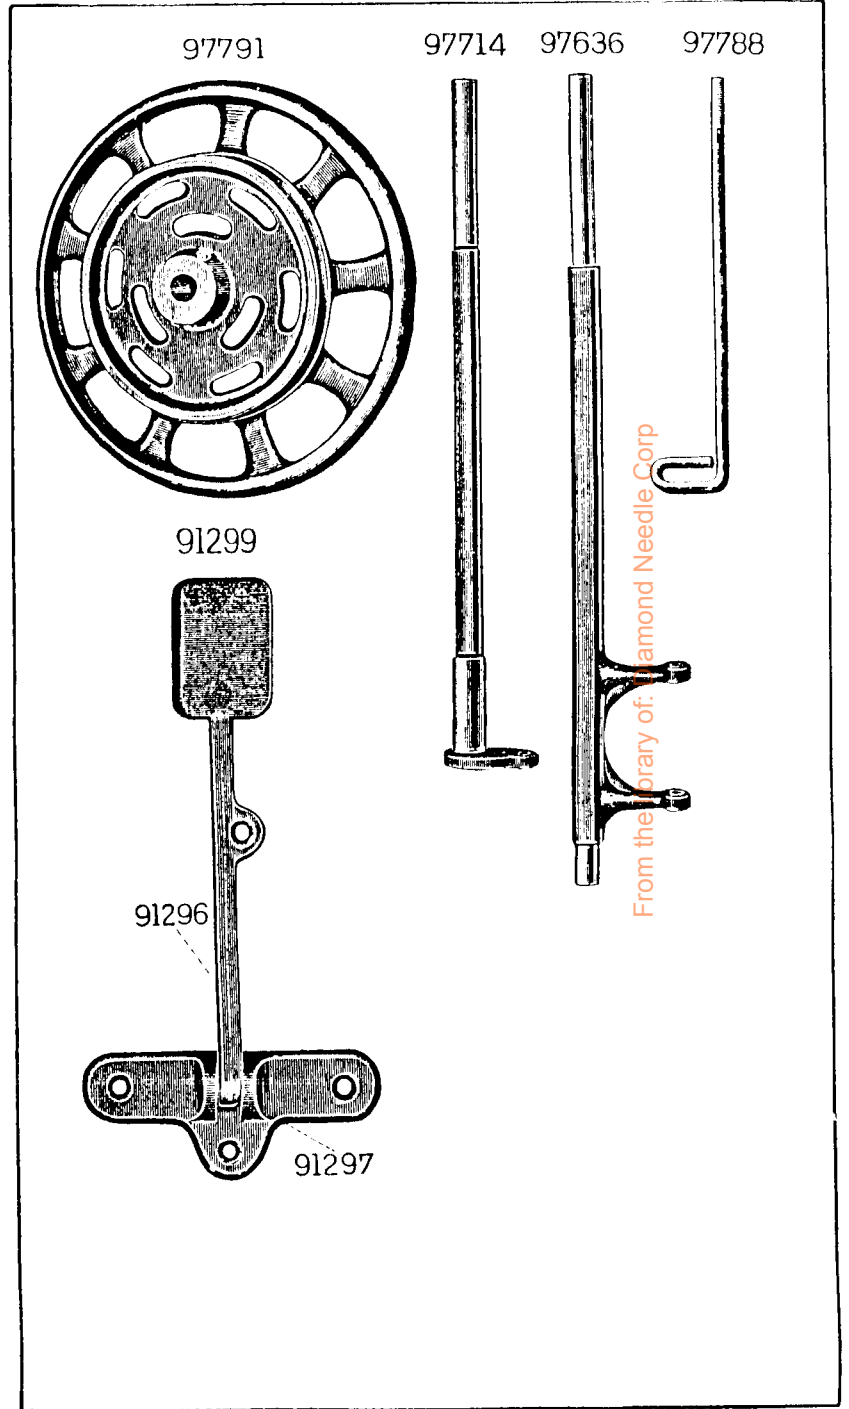
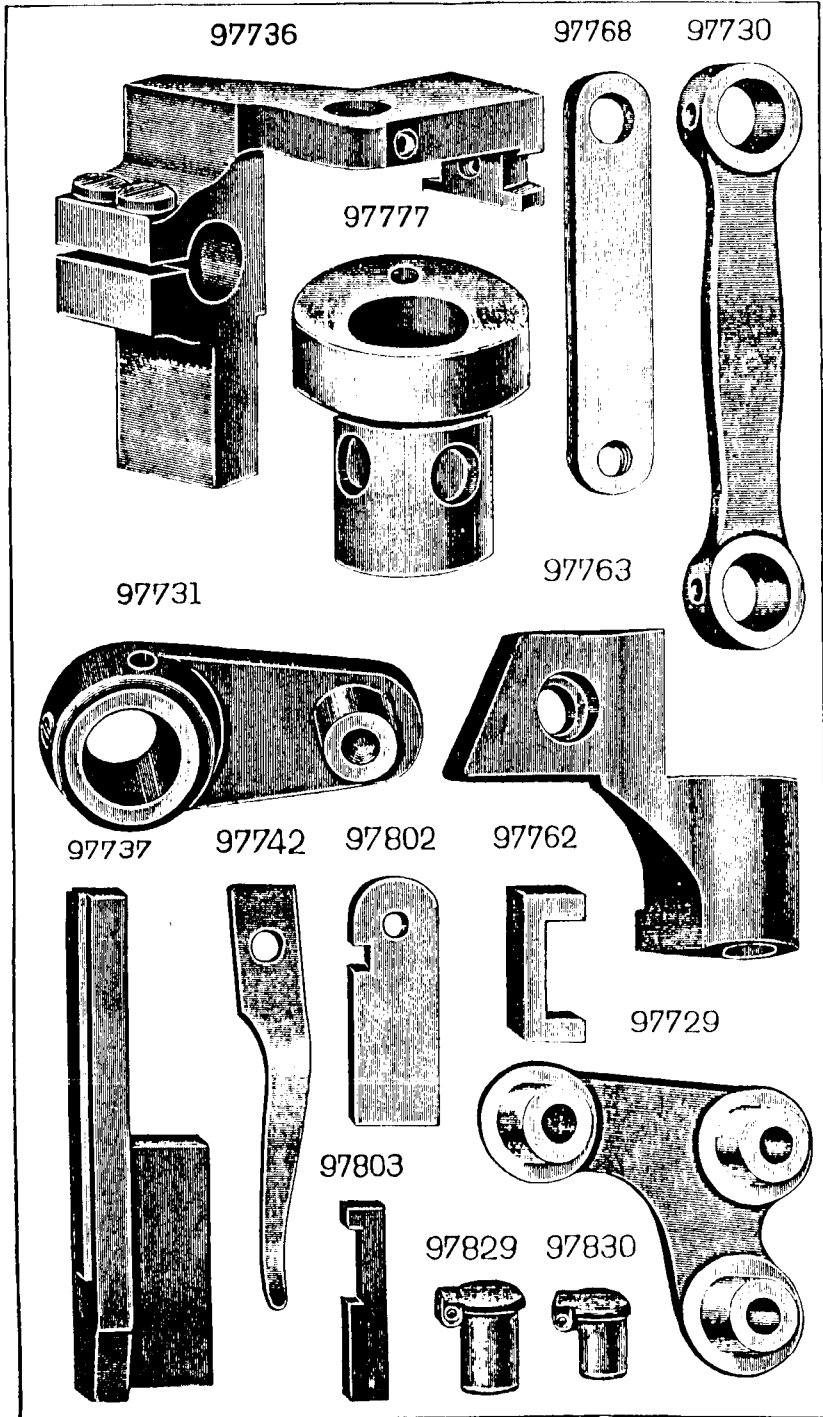


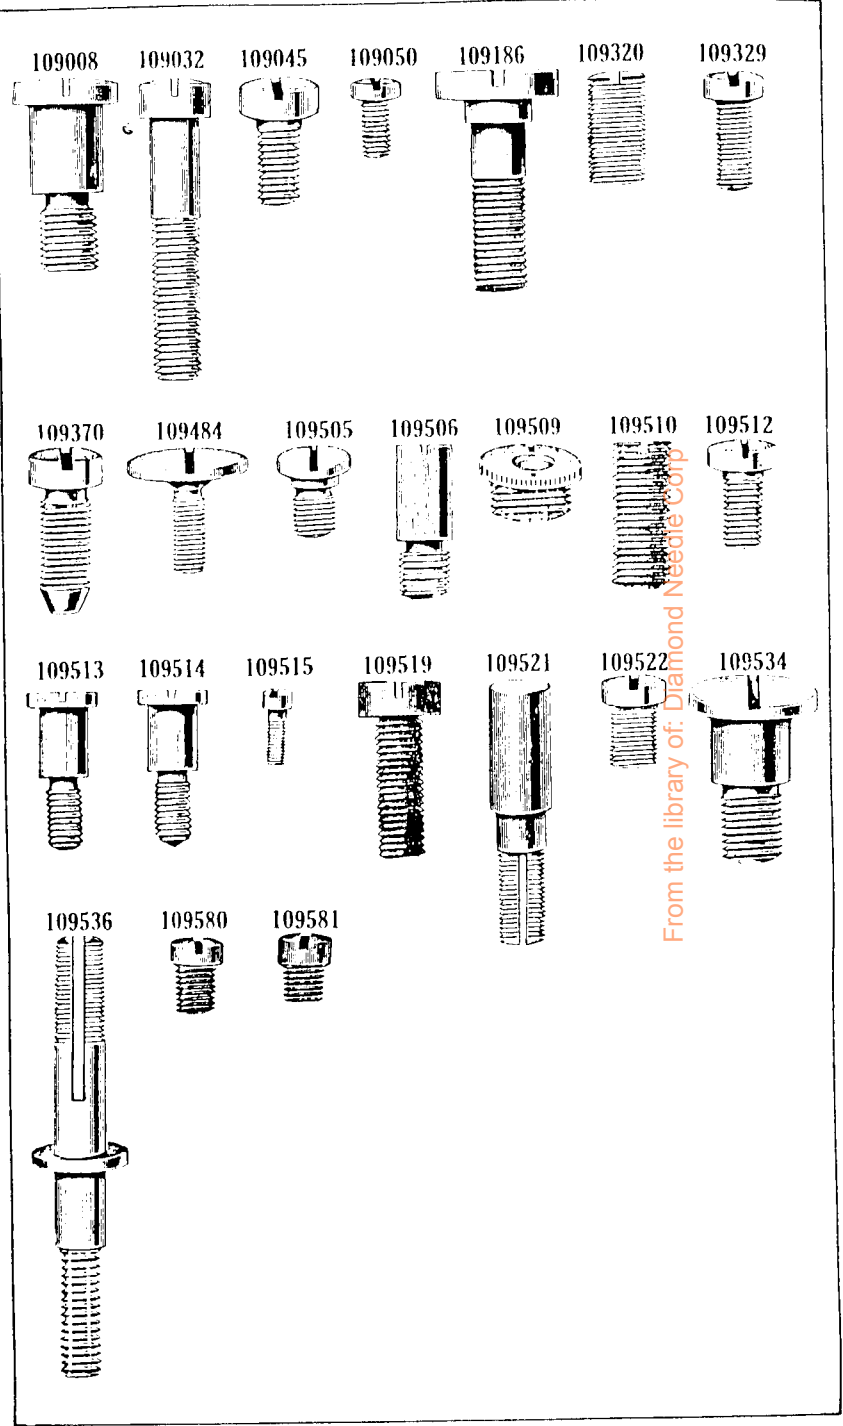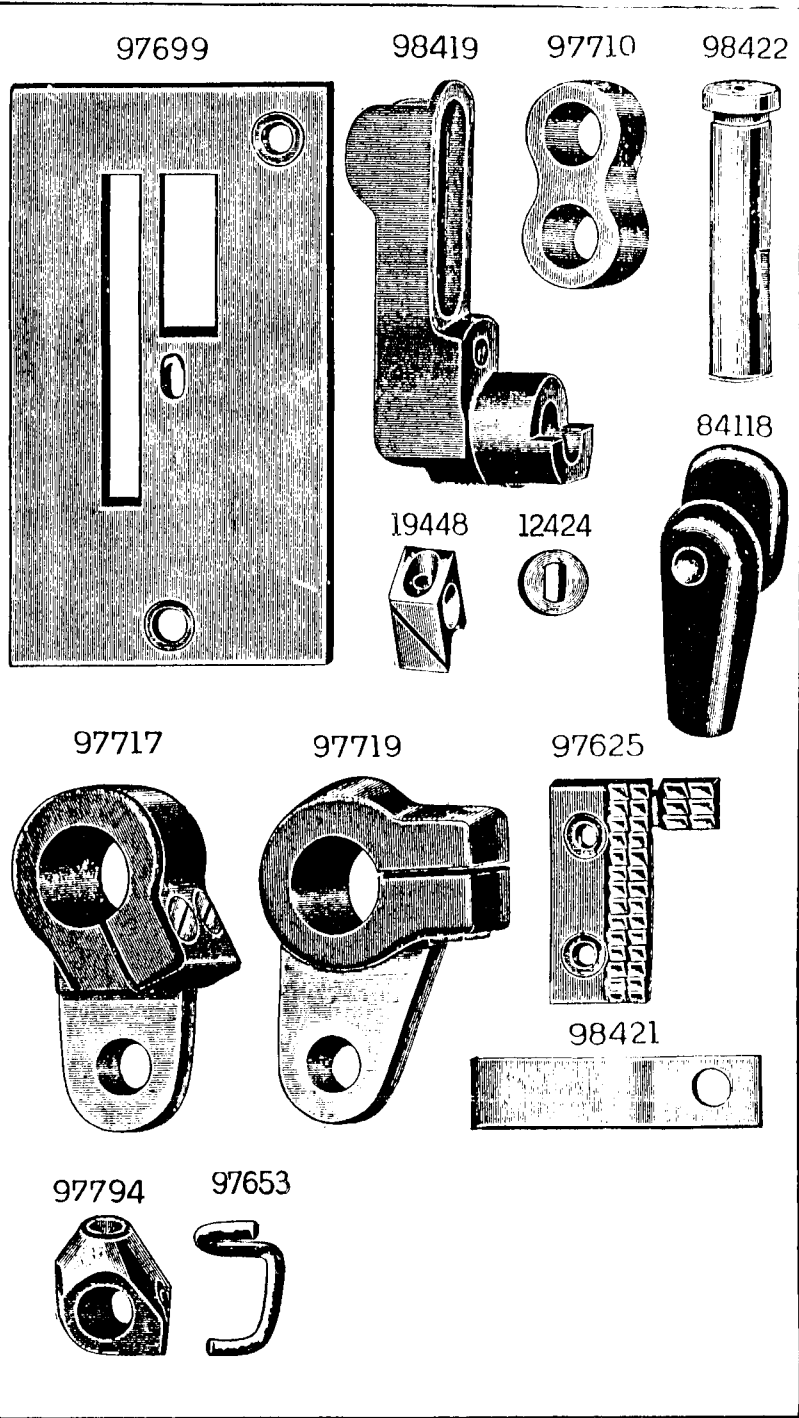


From the library of: Diamond Needle Corp

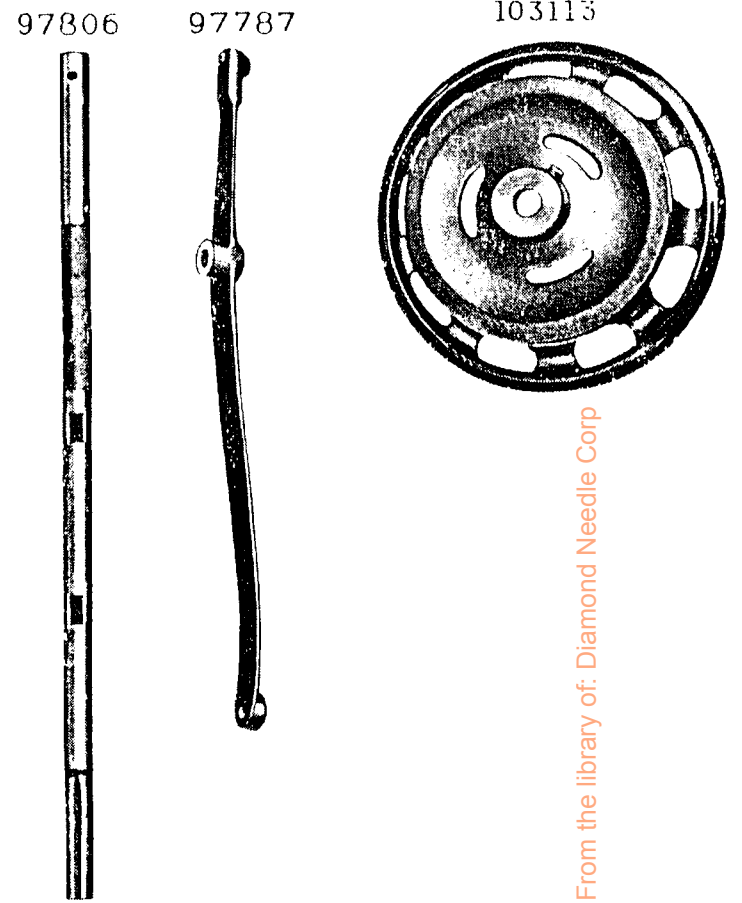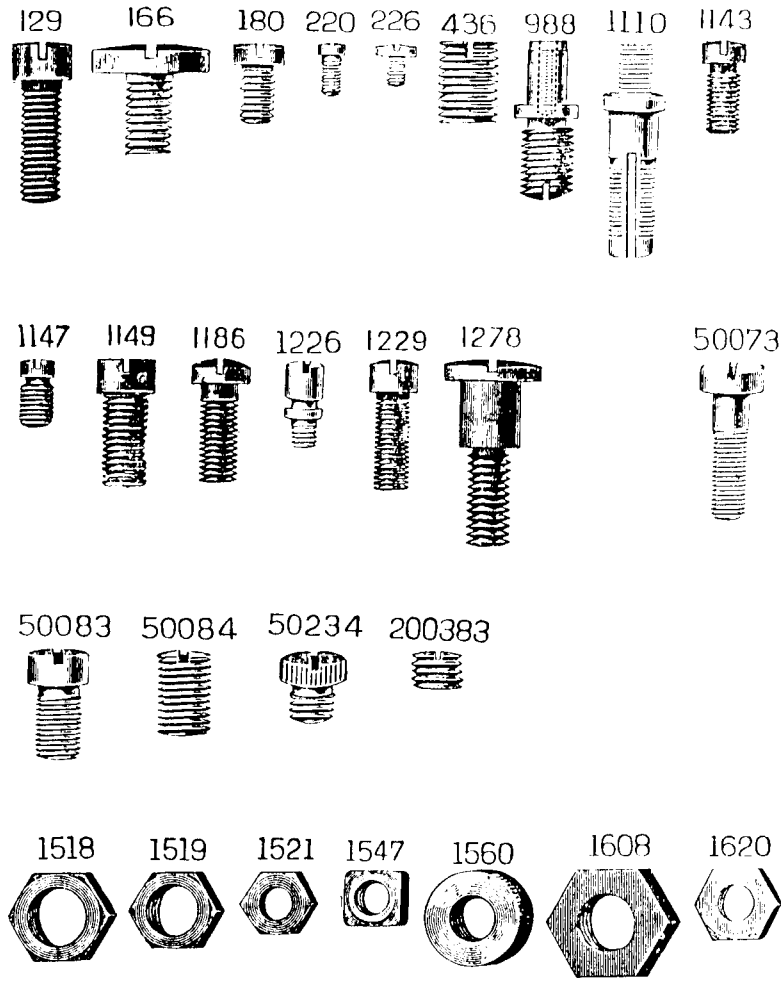

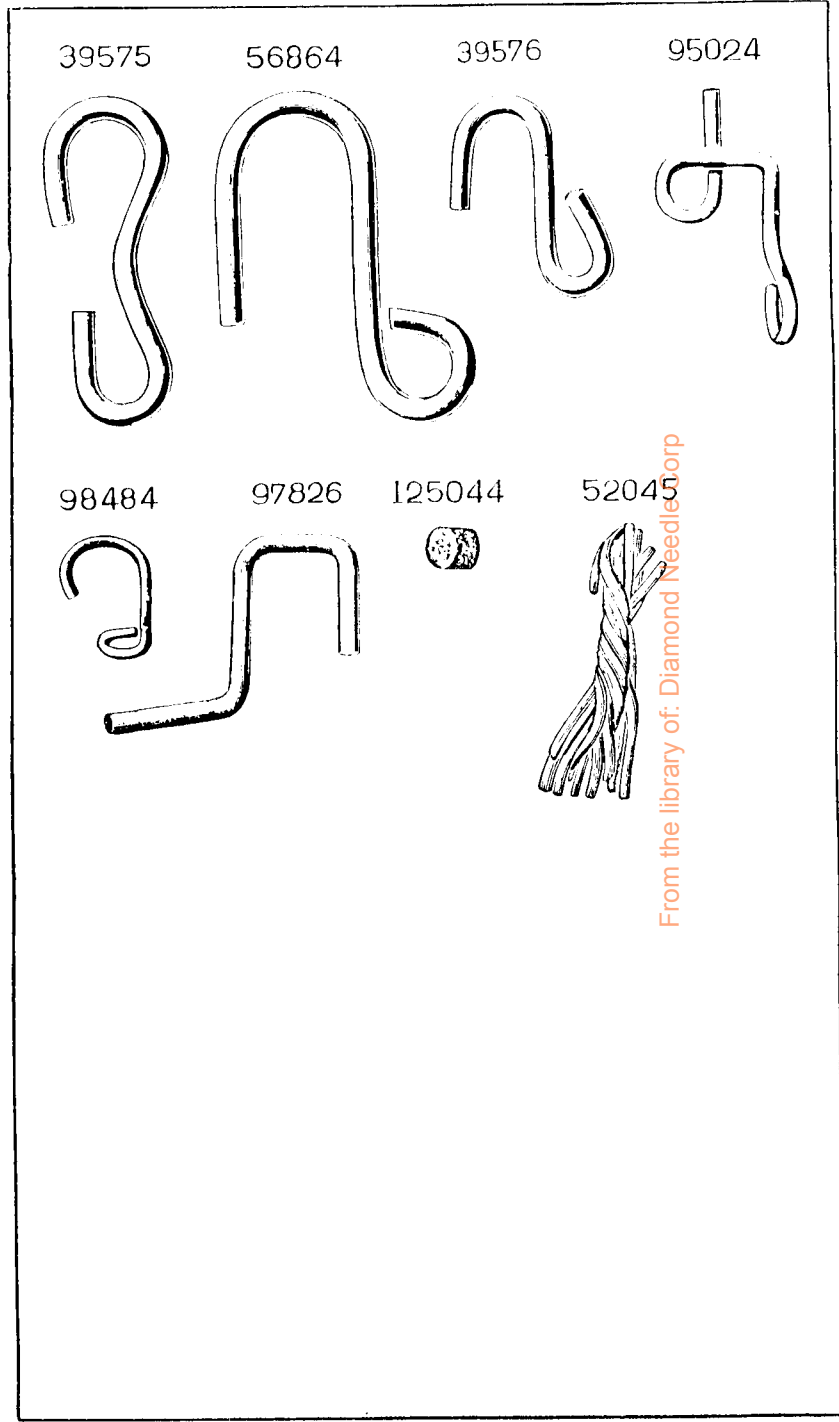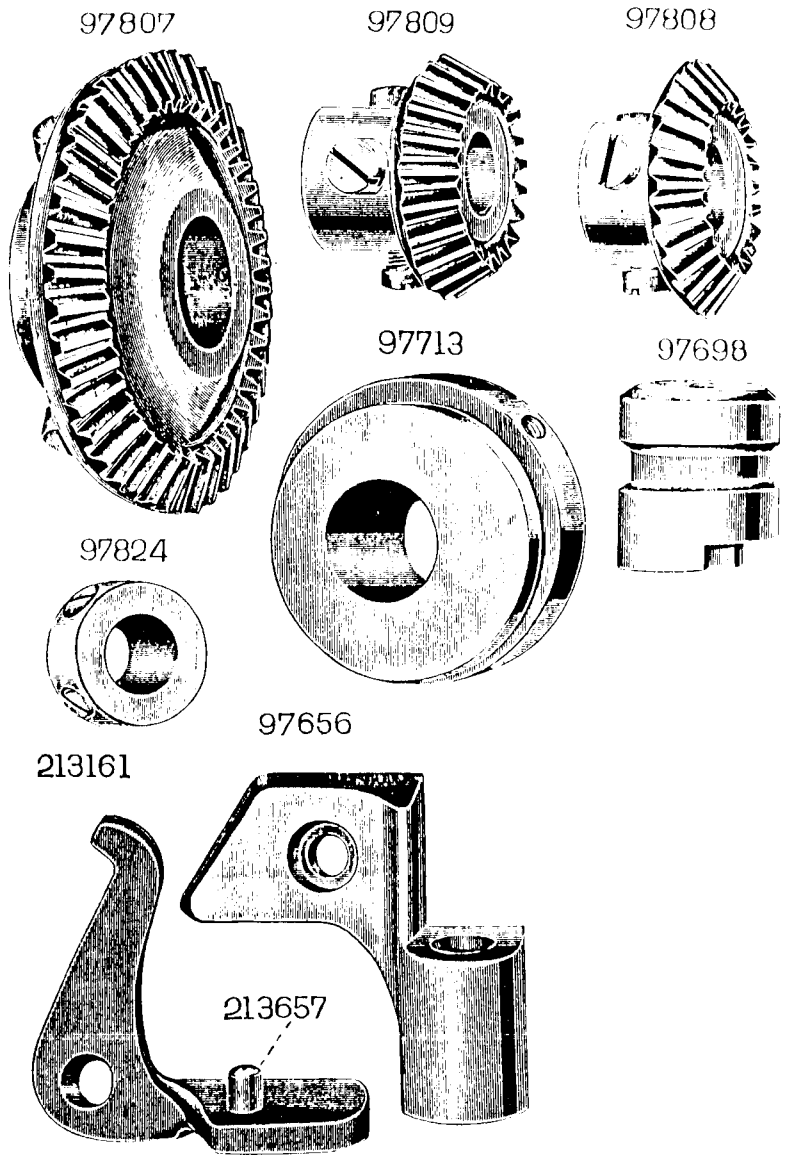


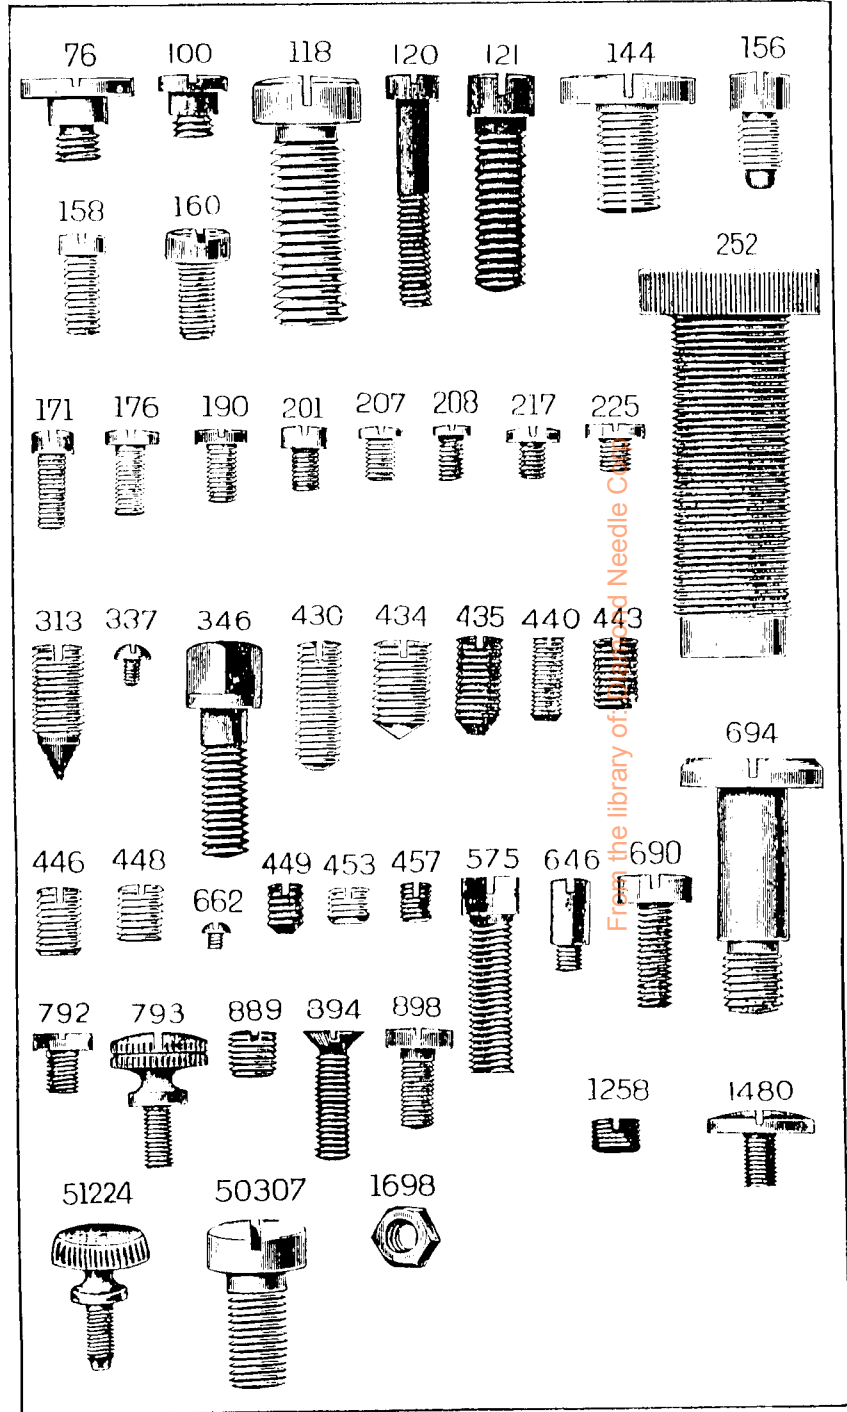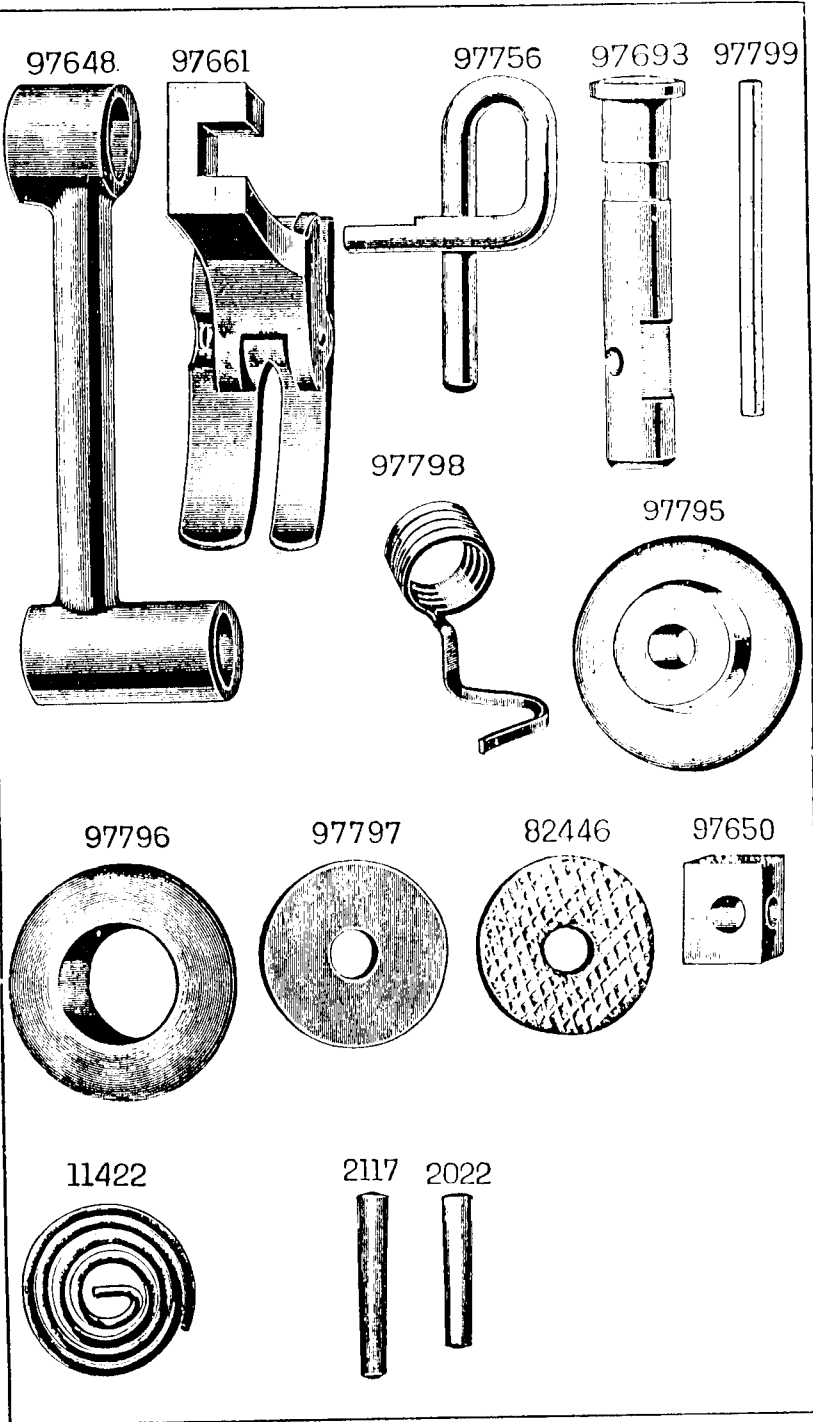

From the library of the Needle Company

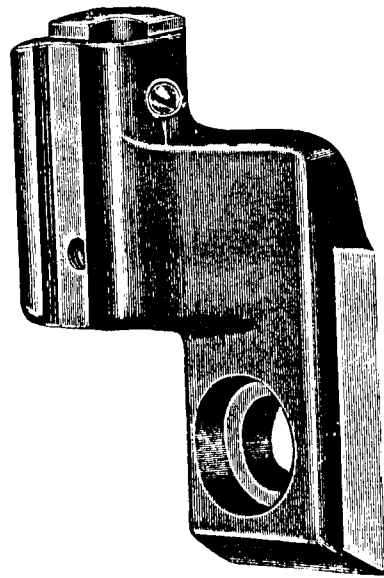

97819

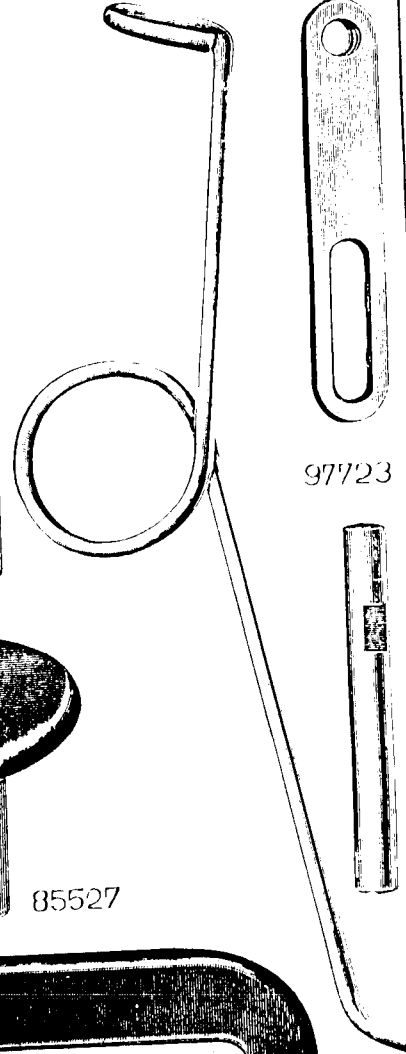


97767




97722

 
97723

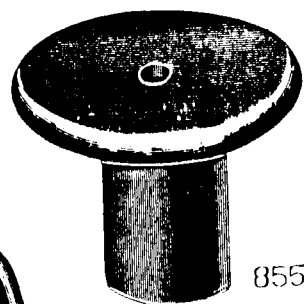

97616

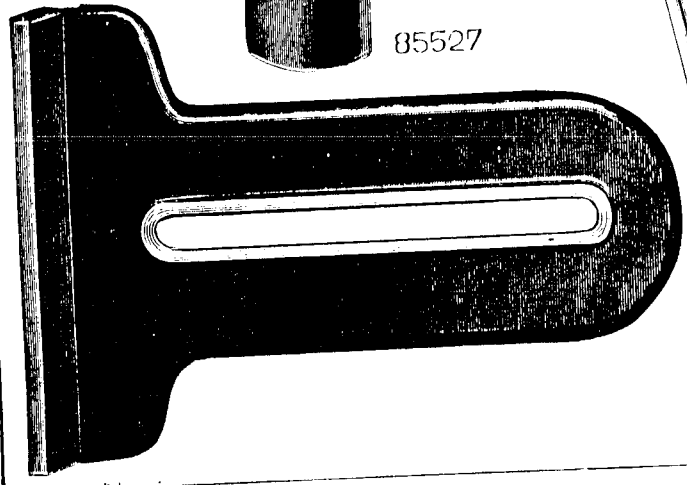


85527

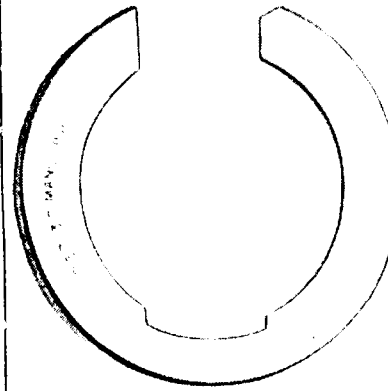


103013




103005

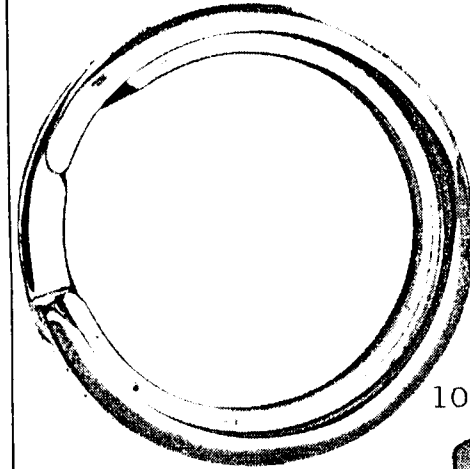


103016

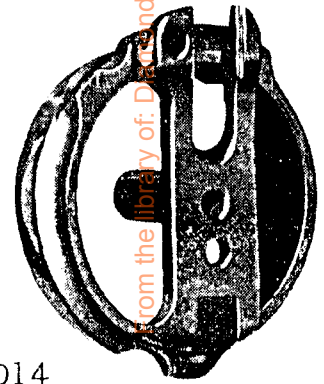

103004

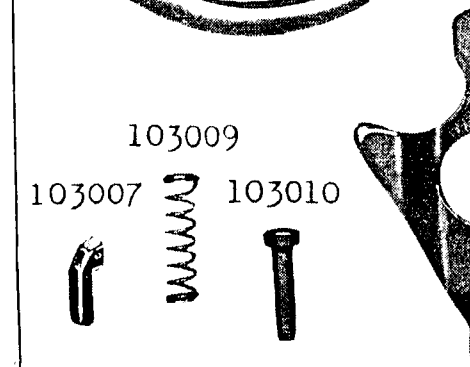


103007

 

103009



103010


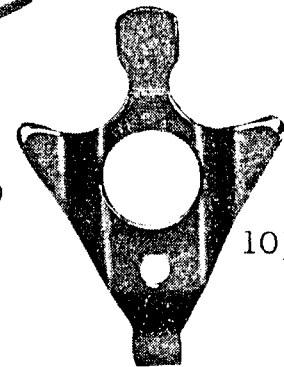







103015

103008





   from the library of: Discs and Needs.com

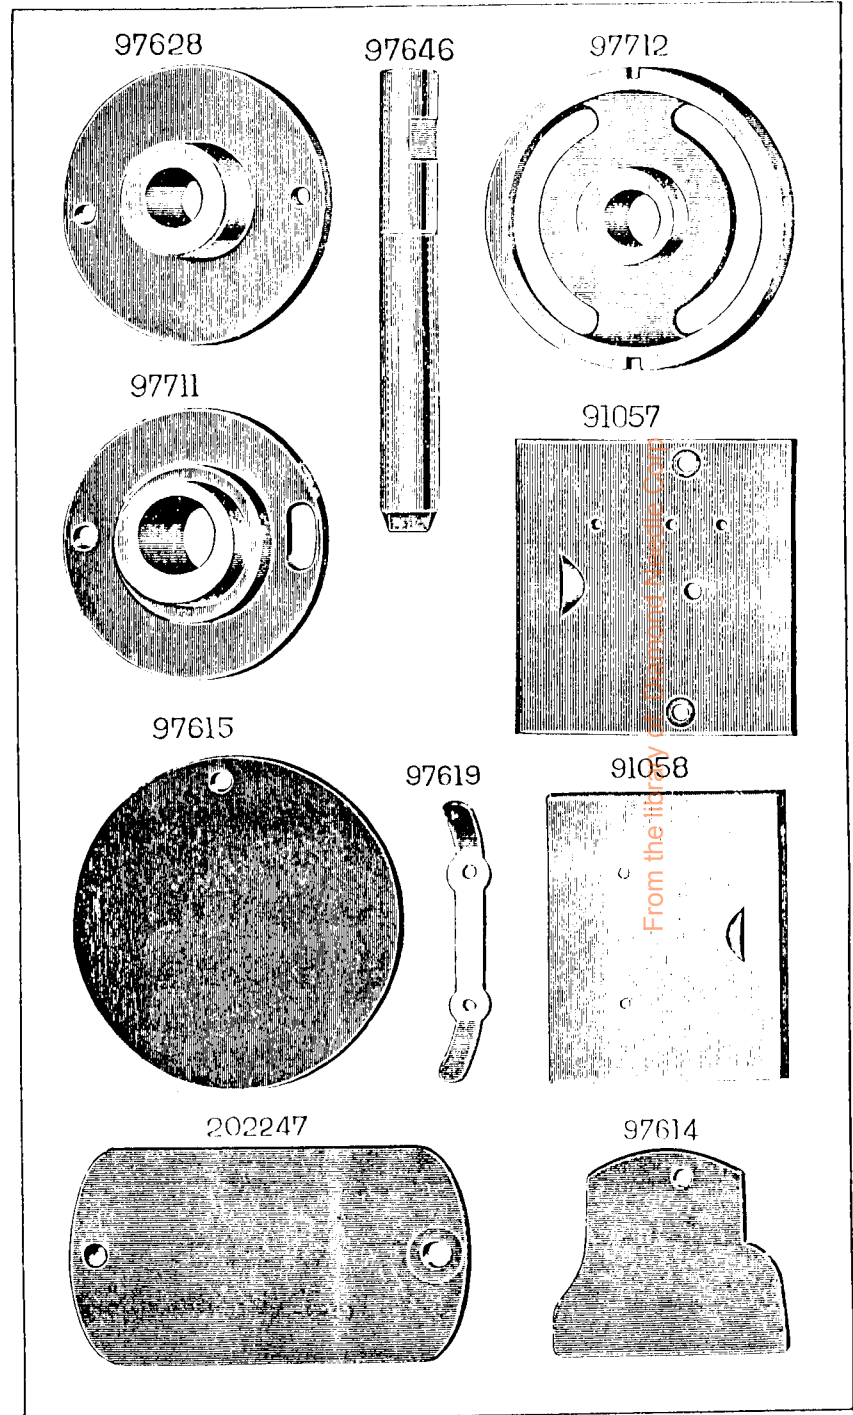
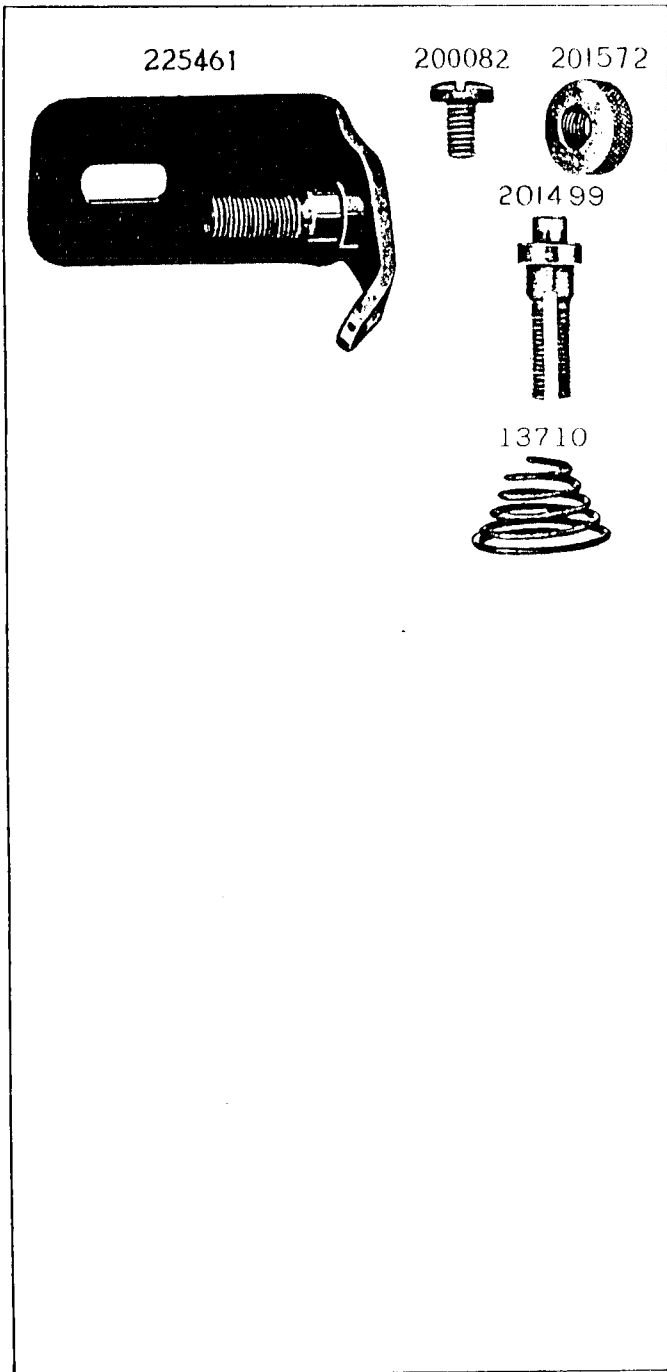


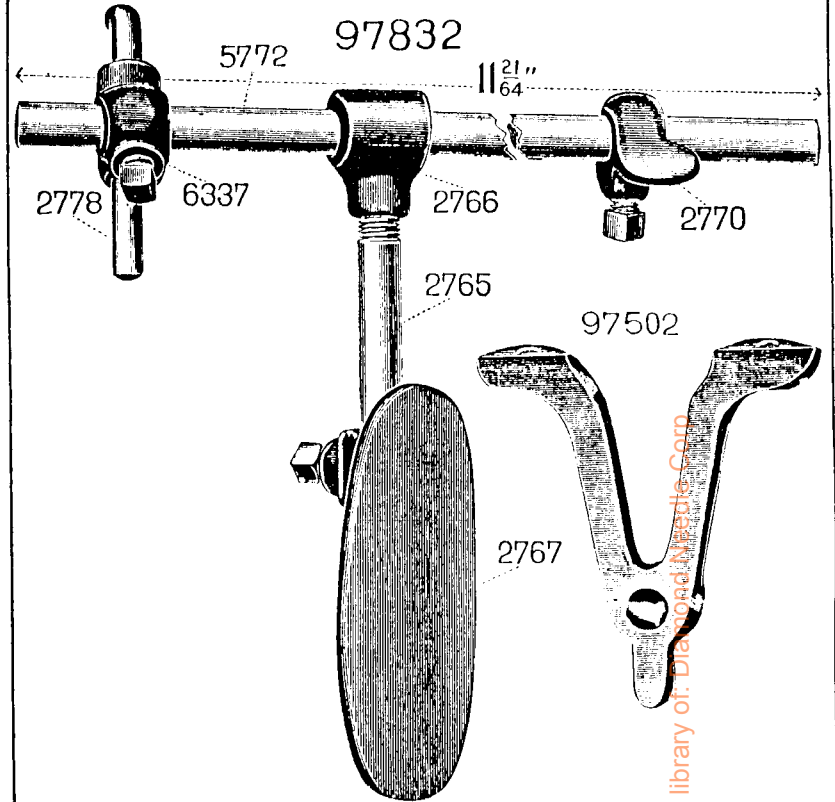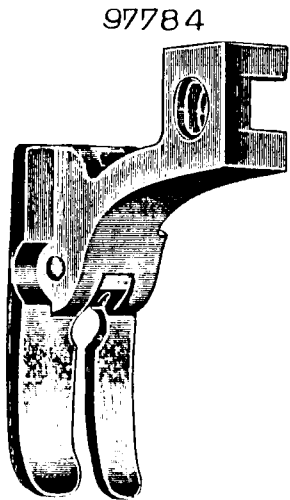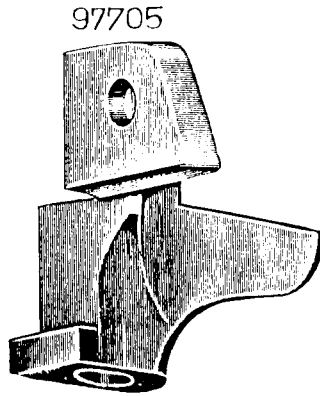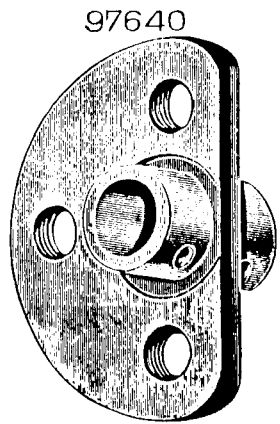


From the library of: Diamond Machine Corp

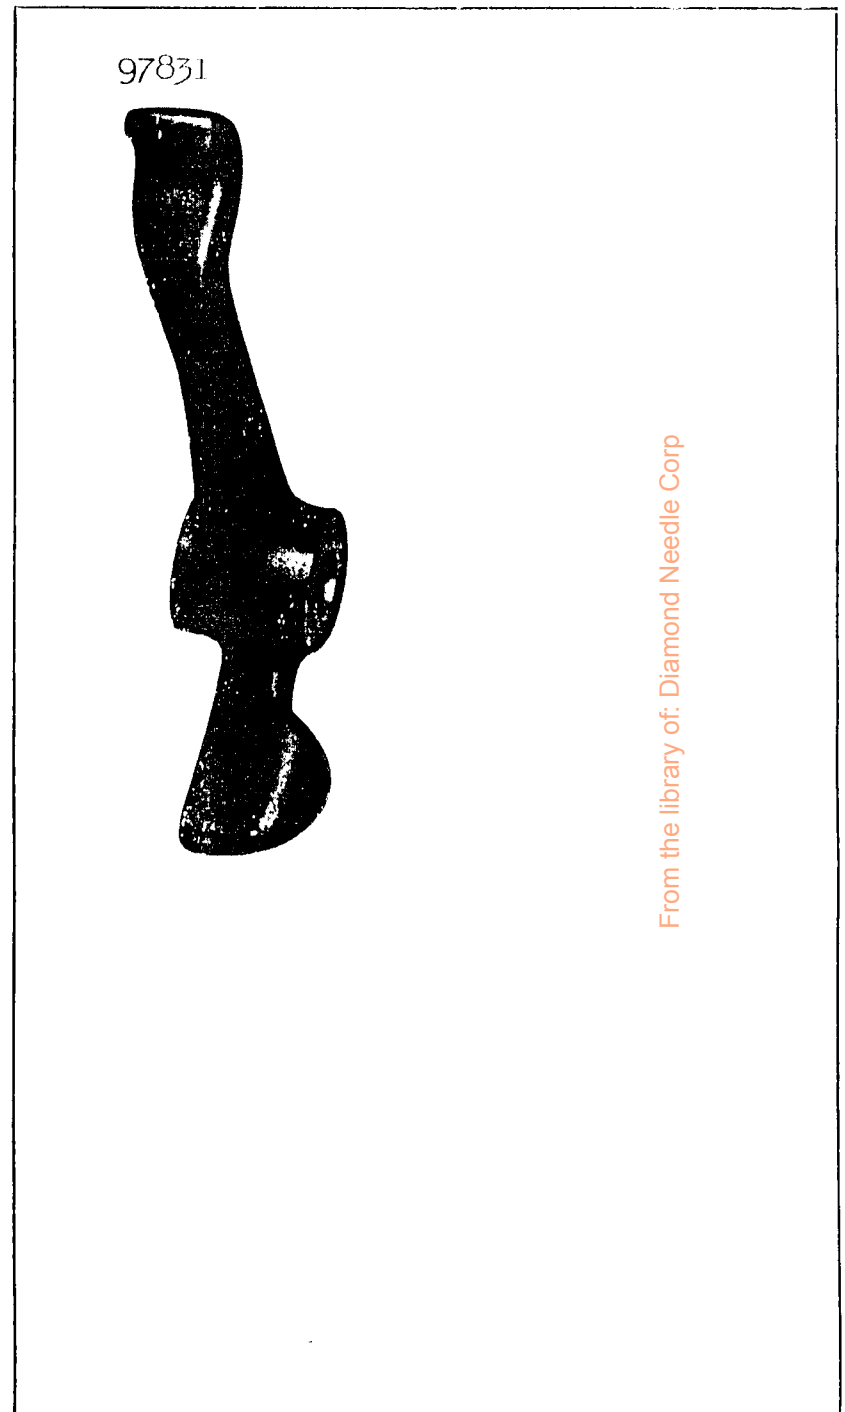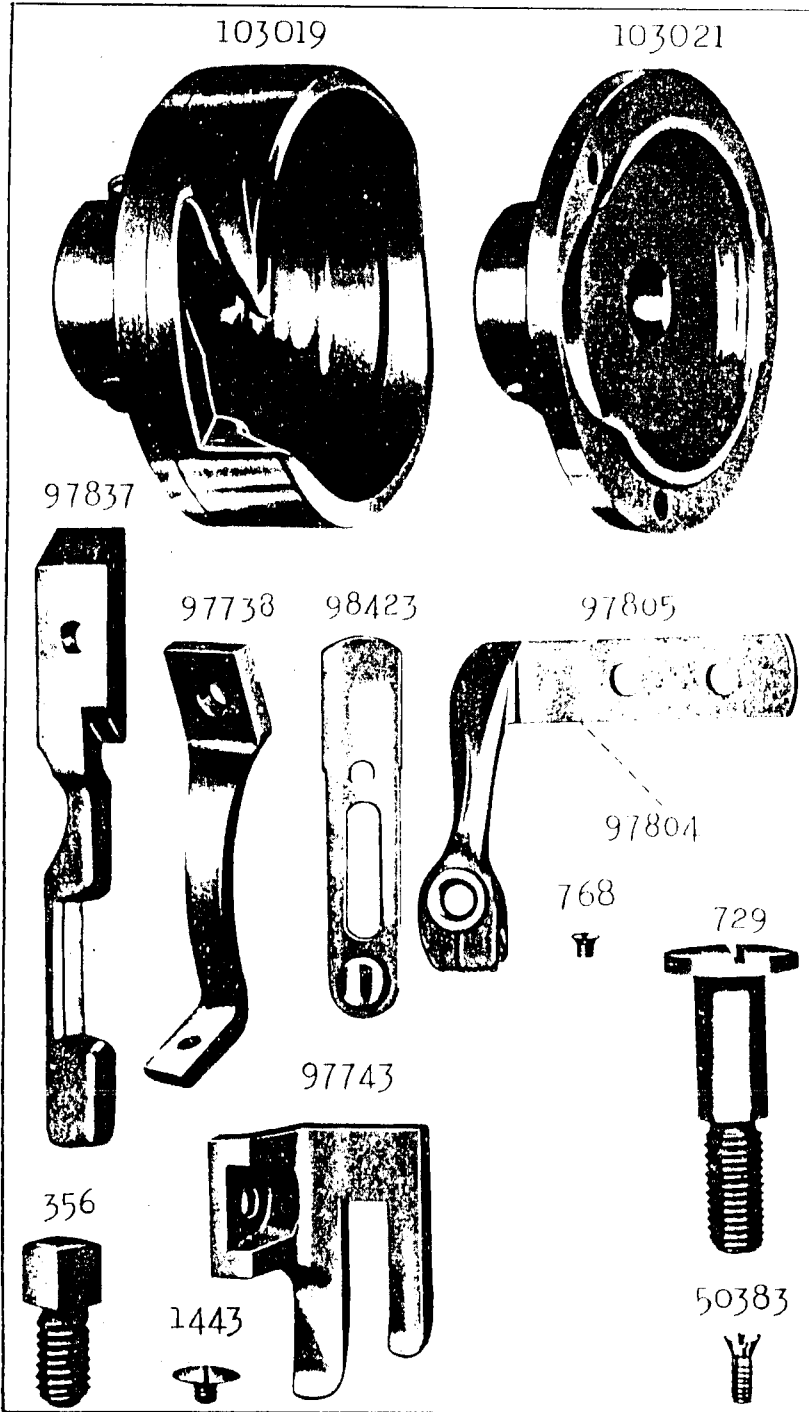

 From the library of: Diamond Needle Corp

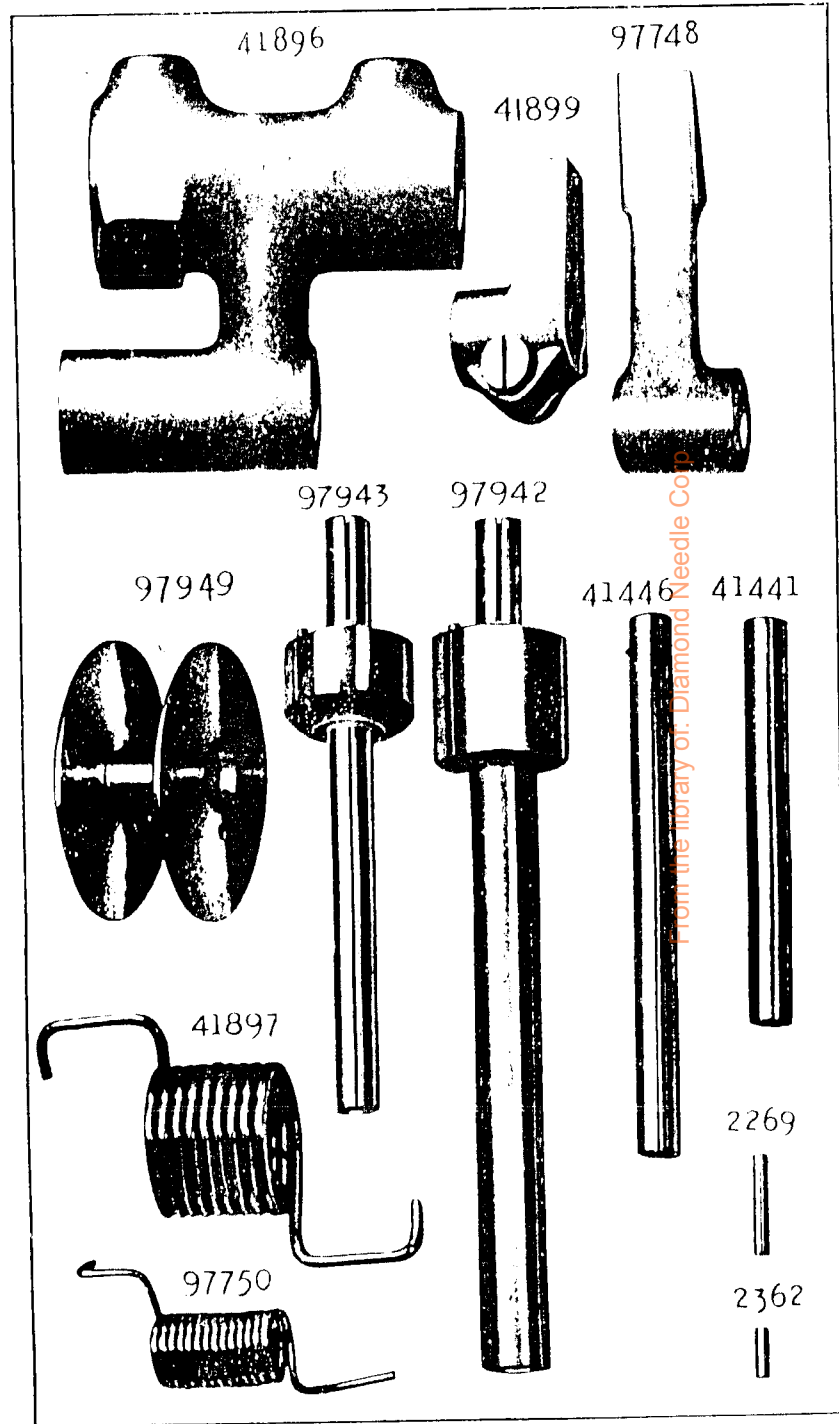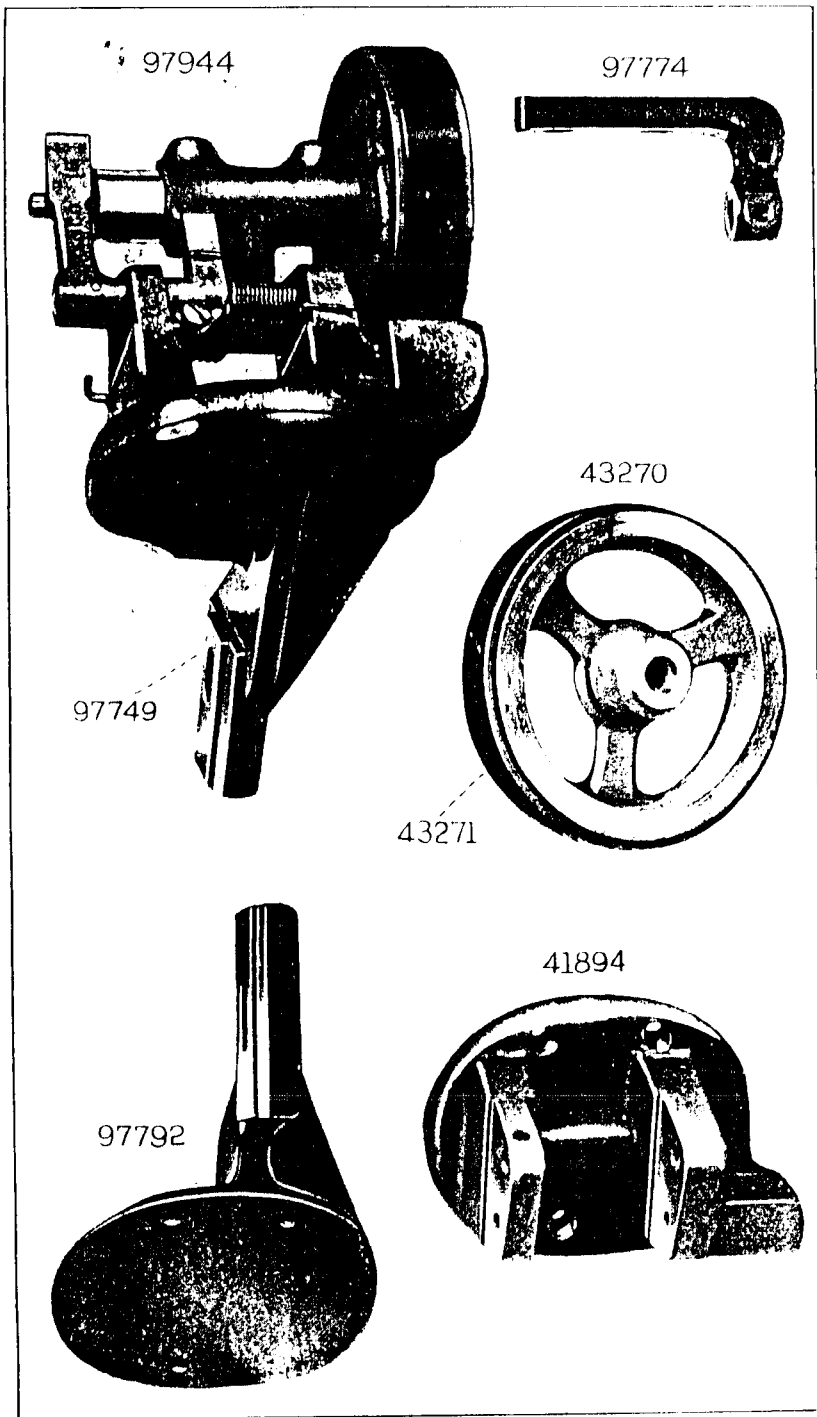


225433

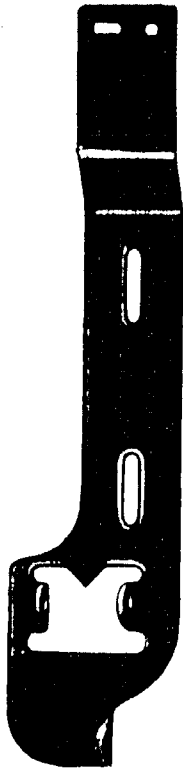 


202473



 97948

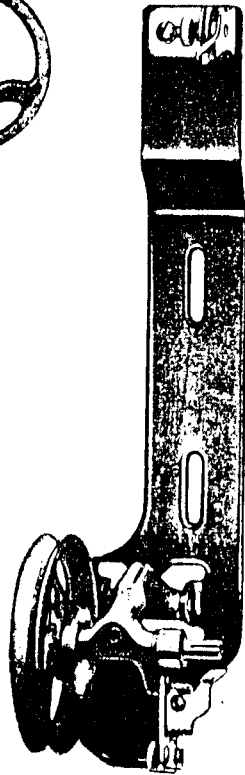

225453

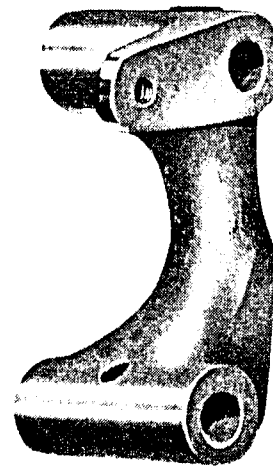 

225455



259660



200380



228026



225456



200056



225454




200299



From the library of: Diamond Needle Corp.

225458

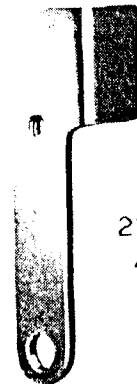


202478








225459



  
97921

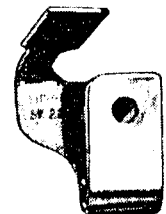

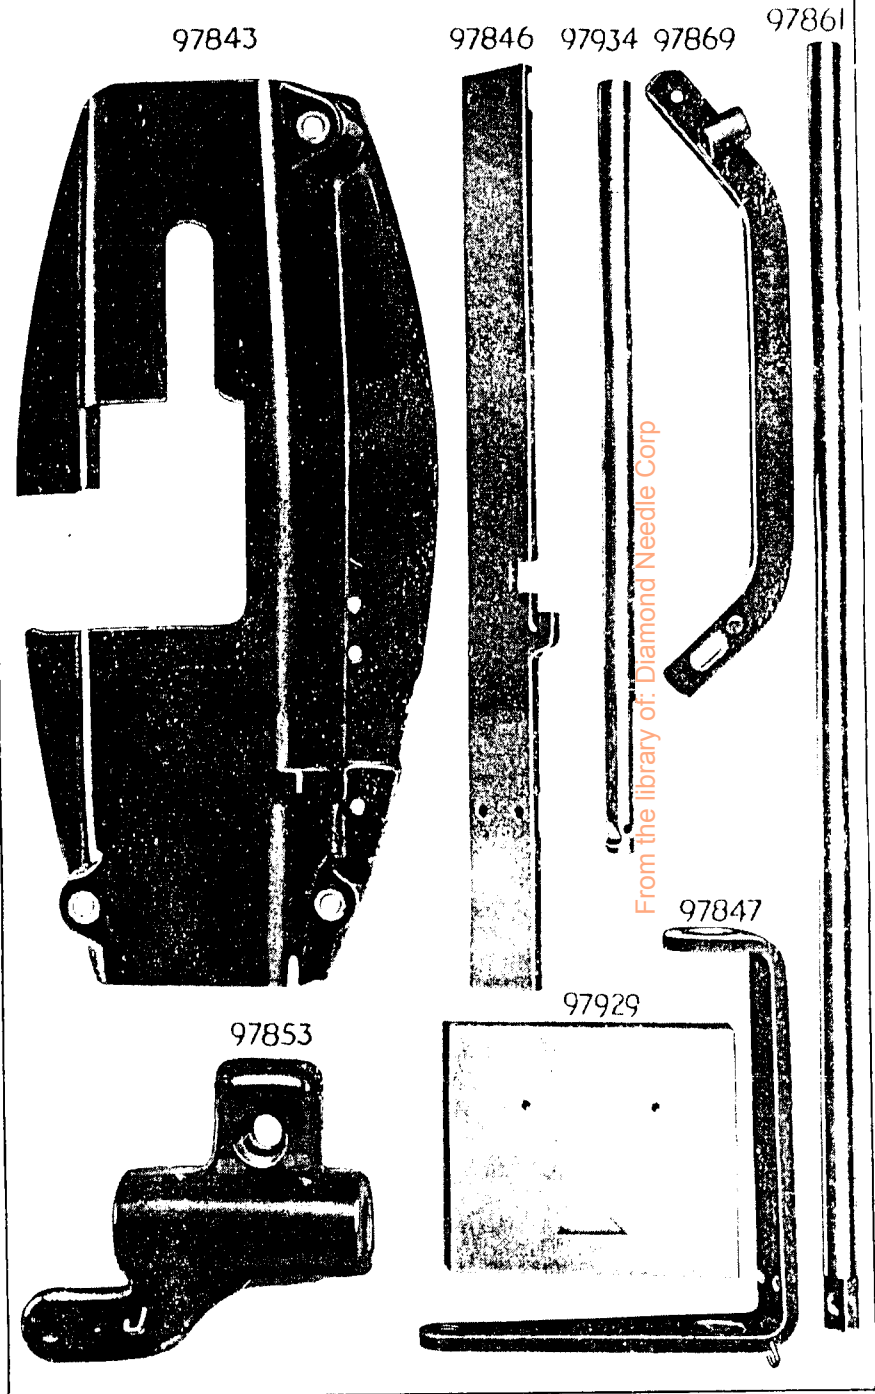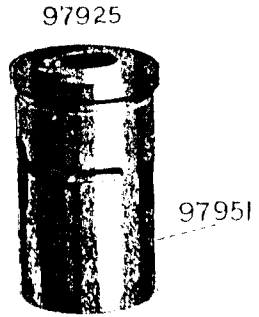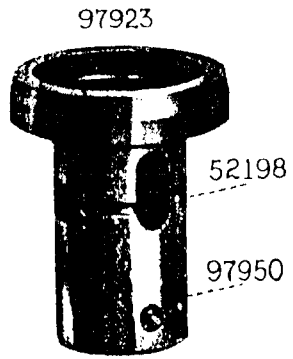


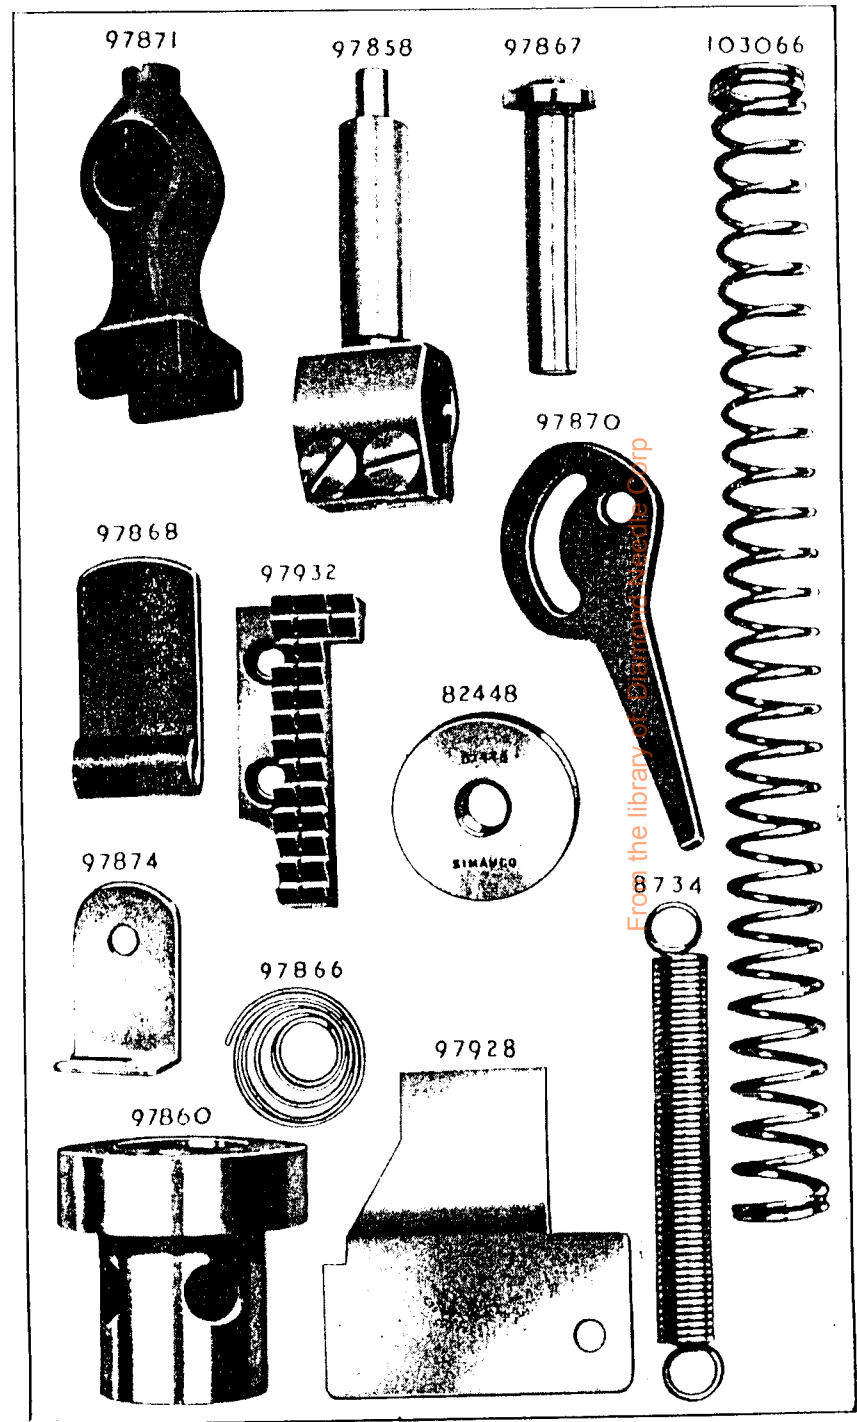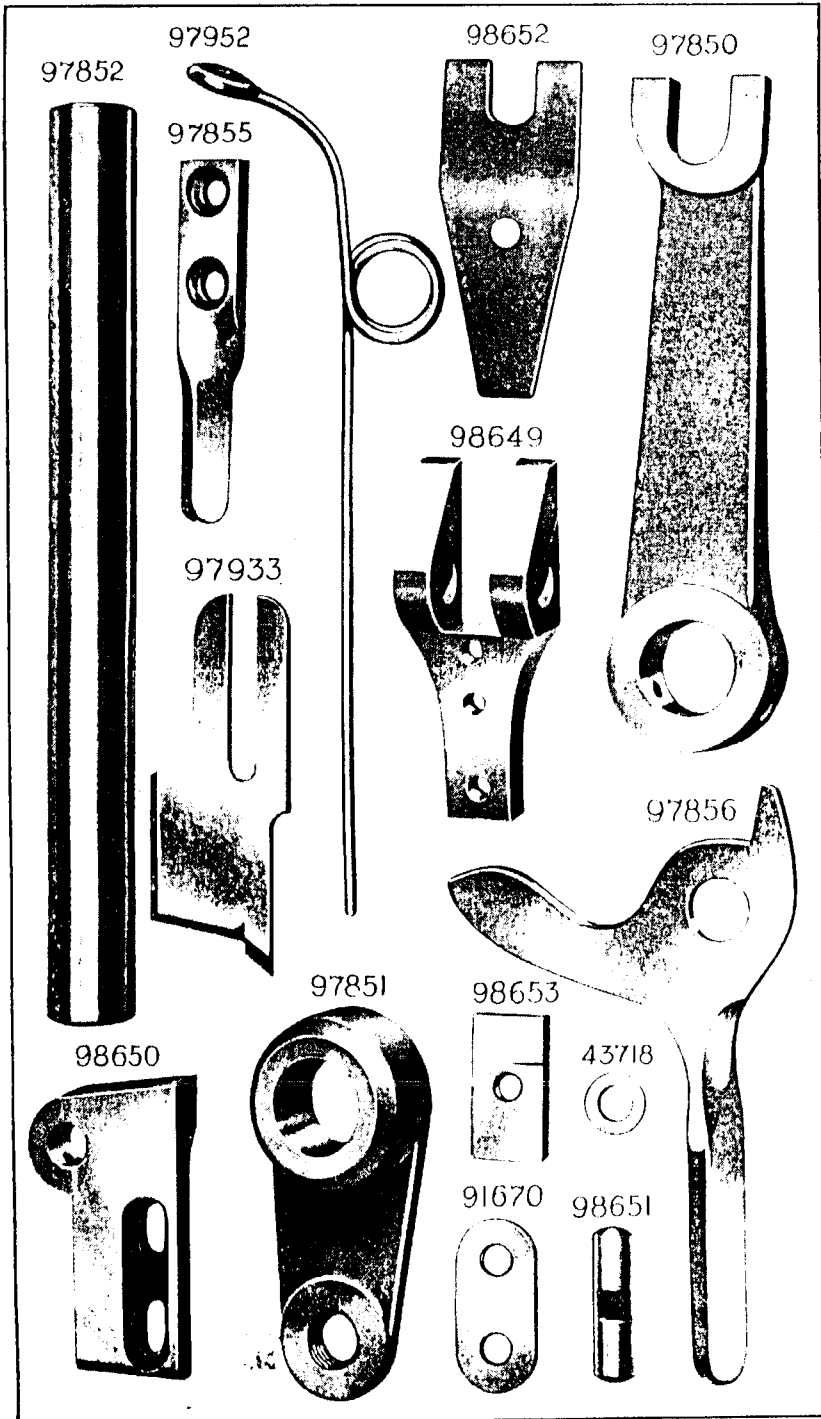


161 177 187 196 200 212 236 237

 


804 837 904 1423

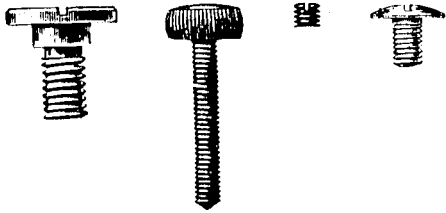 


109534 109625 109626 109627 109628

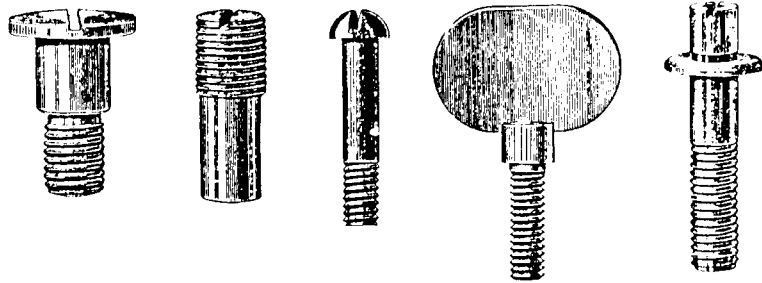


1592 1608 1623 1718

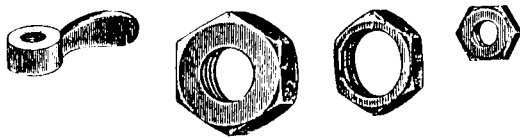

97939

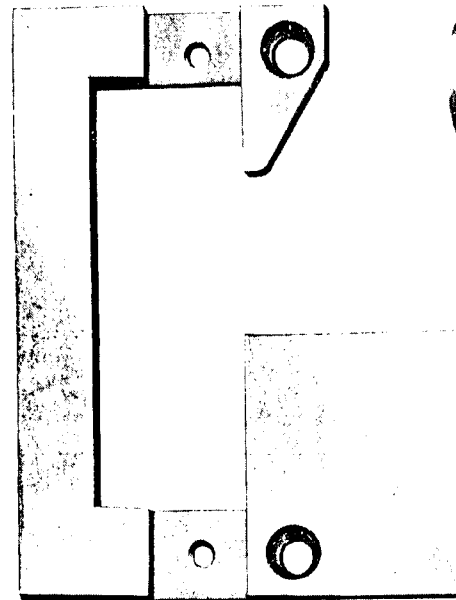


97862

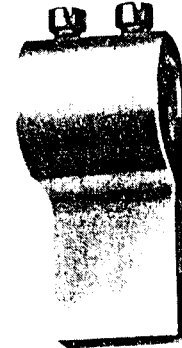 


97940



 
97931

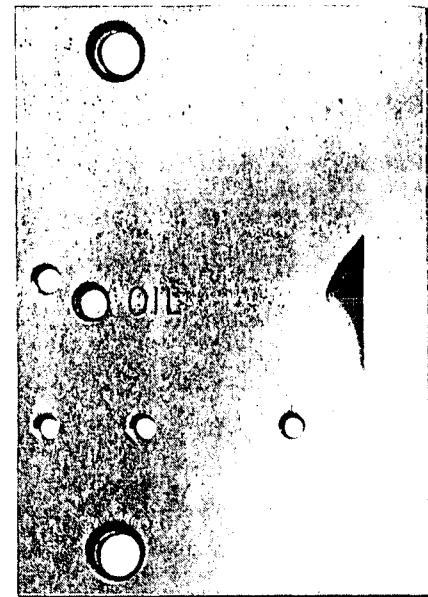

97938

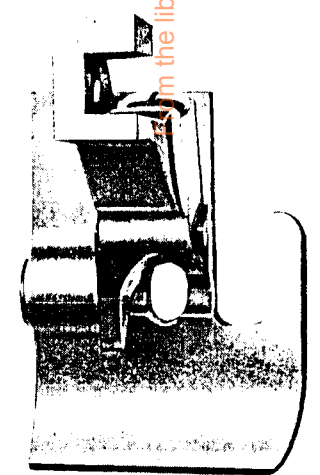

In the library of: Diamond Needle Corp

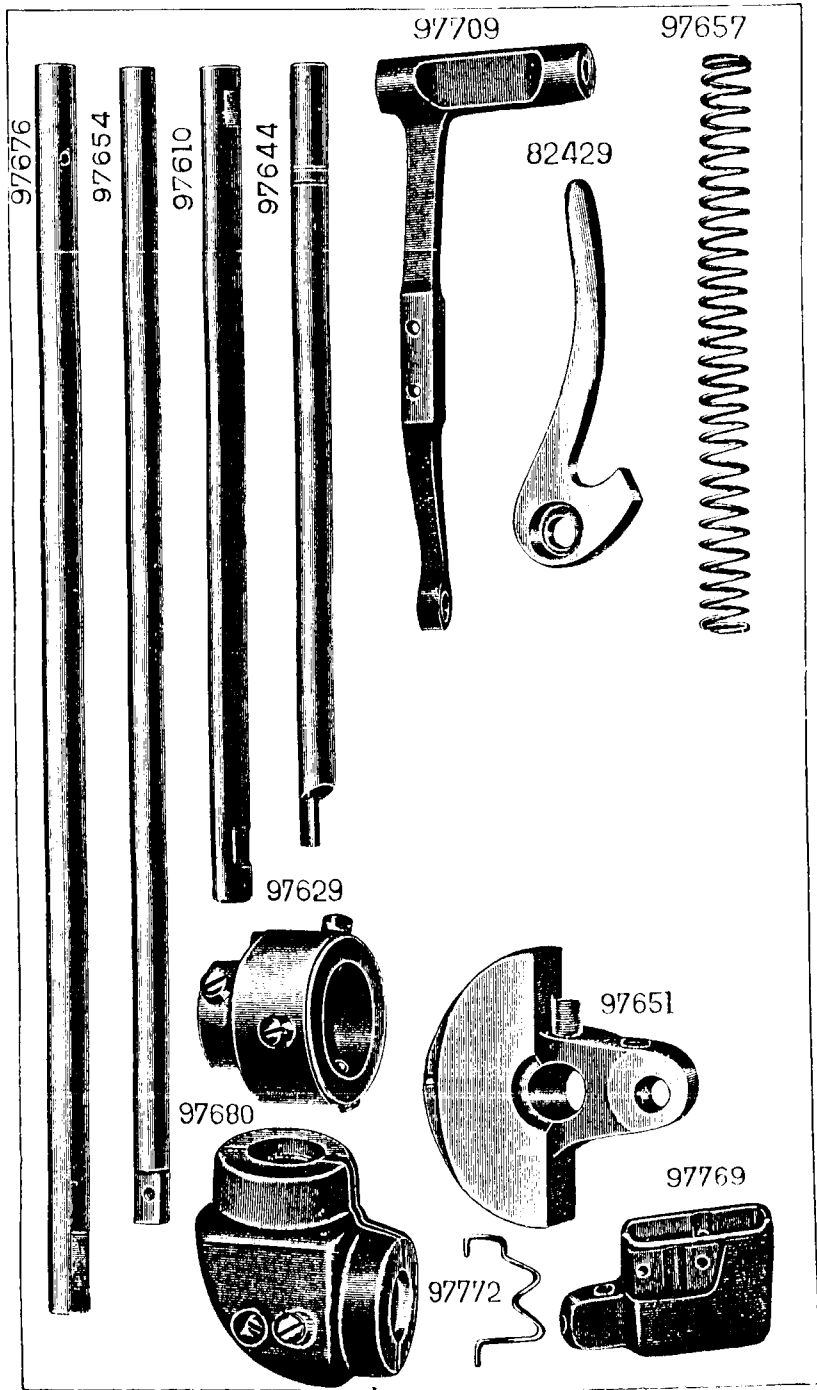

LIST OF PARTS

FOR

Machines

Nos. 132K6 to 132K10 and 132K12

From the library of: Diamond Needle Corp

CONTENTS

	Page
Parts complete for Machine 132K6	49
" Special to Machine 132K9	58
" complete for Machine 132K7	59
" Special to Machine 132K8	67
" complete for Machine 132K10... ..	68
" " " " 132K12... ..	76
Accessories	87
Bobbin Winders	88
Foot Lifters	91
Knee Lifters	92
Thread Unwinder... ..	93
Numerical List of Parts	95

INSTRUCTIONS FOR ORDERING

In ordering from this List, the part number MUST BE quoted exactly as shown in the first column.

A number always indicates the same part in whatever List it may appear, or for whatever machine.

The code numbers (where shown) indicate the style of finish, as follows:—

Code No.	Style of Finishes
801	Hardened, Polished, Nickel Plated and Buffed.
802	Polished, Nickel Plated and Buffed.
803	Hardened only.
804	Polished only.
805	Soft, not Polished.
806	Hardened and Polished.
807	Bright Rumbled and Nickel Plated.
808	Blued.
809	Nickel Plated only.
810	Hardened and Nickel Plated.
811	Brass Plated.
812	Oxidized.
813	Phosphate Coating Formed on Surface of Iron or Steel.
814	Cadmium Plated.
815	Copper Plated.
816	Zinc Plated.
817	Silver Plated.
818	Polished and Nickel Plated.
819	Black Oxide for Iron and Steel.
820	Black Nickel Plated only.
821	Chromium Plated.
822	Buffed and Chromium Plated.
823	Hardened, Polished, Buffed and Chromium Plated.
824	Hardened, Bright Rumbled and Nickel Plated.
825	Hardened, Bright Rumbled, Nickel Plated, Bright Rumbled and Chromium Plated.
826	Alumilite (Plain).
827	
828	Polished, Nickel Plated and Chromium Plated.
829	Hardened, Polished, Nickel Plated and Chromium Plated.
830	Heat Treated for Toughness.
831	Heat Treated for Toughness and Polished.
832	Heat Treated for Toughness and Nickel Plated.
833	Heat Treated for Toughness and Black Oxide.
834	Heat Treated for Toughness, Polished, Nickel Plated, Buffed and Chromium Plated.
835	
836	
837	
838	
839	Chrome Nickel, Satin Finish.
840	Hardened and Chrome Nickel, Satin Finish.
841	Hardened and Phosphate Coating Formed on Surface of Steel.
842	Hardened and Zinc Plated.
843	Hardened, Polished and Nickel Plated.
844	Hardened, Polished, Copper and Nickel Plated and Buffed.
845	Copper and Nickel Plated and Polished.
846	Copper and Nickel Plated only.
847	Hardened, Copper and Nickel Plated.
848	Copper and Brass Plated.

From the Library of: Diamond Needle Corp

{Continued over

INSTRUCTIONS FOR ORDERING—Continued.

Code No.	Style of Finishes.
849	Copper Plated and Oxidized.
850	Hardened and Black Oxide for Iron and Steel.
851	Hardened, Polished, Nickel Plated, Buffed and Chromium Plated.
852	Polished, Nickel Plated, Buffed and Chromium Plated.
853	Hardened and Chromium Plated.
854	Polished and Chromium Plated.
855	Bright Rumbled, Nickel Plated, Bright Rumbled and Chromium Plated.
856	Nickel and Chromium Plated.
857	Copper and Chromium Plated.
858	Heat Treated for Toughness, Nickel and Chromium Plated.
859	Heat Treated for Toughness, Copper Plated and Oxidized.
860	Nickel Plated and Buffed only.
861	Alumillite (dyed)—Black.
862	" (")—Light Almond Green.
863	" (")—Dark Brown.
864	" (")—Russet Brown.
865	" (")—Dark Green.
866	" (")—Medium Gold.
867	Nickel—Satin Finish.
868	Hardened and Nickel—Satin Finish.
869	Commercial Finish for Allen Type Screws.
870	Hard Coating on Aluminium.
871	Brass Plated and Clear Lacquered.

Code No.	Paint Colours	Code No.	Paint Colours
701	Gloss Black.	734	Pale Red.
702	Dull Black.	735	Emerald Green.
703	Brown.	736	Green Metallic.
704	Grey Wrinkle.	737	Light Beige Satin Matte.
705	Beige Wrinkle.	738	Copper Tan.
706	Black Wrinkle.	739	Buff.
707	Light Green.	740	White.
708	Dark Green.	741	Dark Fawn.
709	Dark Beige.	742	Plum.
710	Light Beige.	743	Birch Brown.
711	Oyster White.	744	Satin Black.
712		745	Gold-Buff.
713	Bright Cherry Red.	746	Blue-Grey.
714	Light Ivory.	747	Medium Gold.
715	Peacock Blue.	748	Sand.
716	Bright Yellow.	749	Khaki.
717	Slate Grey.	750	Flame Red.
718	Deep Brown.	751	Brite Green.
719		752	Sage Green.
720	Dark Brown.	753	Mist Green.
721	Aluminium.	754	Ice Green Metallic.
722	Dark Grey.	755	Dark Beige Metallic.
723	Light Grey Beige.	756	Shell Pink.
724	Rosewood Brown.	757	Surf Green.
725	Light Bisque.	758	Colonial Rose.
725	Light Fawn.	759	Cream.
727		760	Oak Brown.
728	Grey Metallic.	761	Deep Fawn.
729	Russet Brown.	762	Medium Green.
730	Pale Green.	763	Light Green Metallic.
731	Light Almond Green.	764	Light Gold.
732	Dusty Bisque.	765	Persimmon.
733	Chocolate Brown.	766	Mahogany Brown

Parts marked thus (‡) are furnished only when the repairs are made at Factory.

PARTS COMPLETE

FOR

MACHINE No. 132K6

Flat Bed, Compensating Drop Feed, Alternating Pressers, Needle Bar Link, Link Take-up, Rotating Hook Mechanism with replaceable bearing rings. Maximum length of stitch $\frac{1}{2}$ inch. For General Cloth, Canvas and Leather Work.

Part No.	Plate	Description
†‡97725	---	Arm with 56003 and two 97829
8582	1966	Arm Dowel Pin (2)
56003	1851	" Oil Tube with 52045
52045	2081	" " " Packing (felt)
118 (805)	2084	" Screw (4)
97806	2079	" Shaft (horizontal)
97950	2471	" " (") Flanged Bushing (back)
97923	2471	" " (") " " (") 97950 with 52198 and 97924
97605	1851	" " (") " Bushing (back) Drain Tube
97829	2073	" " (") " " (") Oiler ...
52198	2471	" " (") " " (") Oil Pad (outside, felt)
97924	---	" " (") " " (back) Oil Pad (inside, braided cotton)
446 (803)	2084	" " (") " Bushing (back) Set Screw
97951	2471	" " (") " " (front) ...
97925	2471	" " (") " " (") 97951 with 52198 and 97926
97829	2073	" " (") " Bushing (front) Oiler ...
52198	2471	" " (") " " (") Oil Pad (outside, felt)
97926	---	" " (") " " (front) Oil Pad (inside, braided cotton)
50084 (803)	2078	" " (") " Bushing (front) Set Screw
97807	2080	" " (") Gear with three 50083(803) ...
97609	1844	" " (") " Case (two pieces) with 121(805) and 50234(804)
50234 (804)	2078	" " (") " " Plug Screw

† when ordering state colour required.

From the library of the Hamand Needle Co.

Part No.	Plate	Description
121 (805)	2084	Arm Shaft (horizontal) Gear Case Screw
50083 (803)	2078	" " (") " Set Screw
144 (803)	2084	" " (") Screw
97610	2478	" " (upright)
97611	1849	" " (") Bushing (lower)
575 (803)	2084	" " (") " (") Set Screw
97612	1849	" " (") " (upper)
575 (803)	2084	" " (") " (") Set Screw
97808	2080	" " (") Gear (lower) with 109580(806) and two 109581(803)
109580 (806)	2077	" " (") " (") Position Screw
109581 (803)	2077	" " (") " (") Set Screw
97809	2080	" " (") " (upper) with 109580(806) and two 109581(803)
109580 (806)	2077	" " (") " (") Position Screw
109581 (803)	2077	" " (") " (") Set Screw
†97615	2317	" Side Cover
51224 (804)	2084	" " " Thumb Screw
82403	1851	" Spool Pin (2)
†97616	2089	" " " Bushing
†202247	2317	" Top Cover
109505 (808)	2077	" " " Screw
202248	1849	" " " Washer
†97618	—	Bed with two each 46224 and 97830

NOTE.—Due to the accuracy required for Gear alignment, Bed cannot be supplied separately and can only be sent out as a unit, Arm and Bed assembled.

91058	2317	Bed Slide (front)
97619	2317	" " (") Spring
337 (804)	2084	" " (") " Screw
97620	—	" " (") 91058 with 97619 and two 337(804)
91057	2317	" " (back)
180 (806)	2078	" " (") Screw (2)
†97726	2072	Face Plate
109779(806)	158 (806)	2084 r/c x " Screw (front)
120 (806)	2084	" " " (back)
109045 (806)	2077	" " " (upper)
97622	1849	" " Thread Guard
190 (804)	2084	" " " Screw
98484	2081	" " " Thread Retainer
97623	2089	Feed Bar
97624	2318	" " Oil Pad (felt)
220 (804)	2078	" " " Screw
313 (803)	2084	" " Screw Centre (2)
1519 (803)	2078	" " " Nut (2)

† when ordering state colour required.

Part No.	Plate	Description
97625	2076	Feed Dog
109050 (803)	2077	" " Screw (2)
97626	2067	Feed Eccentric
97627	2067	" " Adjusting Disc
97628	2317	" " Flange
97629	2478	" " Coupling with five 50083(803)
50083 (803)	2078	" " " " " Screw
213655	1849	" " Friction Spring Washer
109513 (805)	2077	" " " " " Screw
1521 (805)	2078	" " " " " Nut
109514 (805)	2077	" " Fulcrum Screw
1521 (805)	2078	" " " " " Nut
97630	2069	" Lifting Rock Shaft
97634	1849	" " " " Bushing (front)
46224	1851	" " " " (") Oiler
436 (803)	2078	" " " " (") Set Screw
97635	1849	" " " " (back)
97830	2073	" " " " (") Oiler
436 (803)	2078	" " " " (") Set Screw
97631	2069	" " " " Connecting Rod with 158(805)
109779(805)	158 (805)	2084 r/c x " " " Clamping Screw
97632	2068	" " " " " Hinge Pin
109008 (803)	2077	" " " " " " Screw
1518 (803)	2078	" " " " " " Nut
97633	2067	" " " " Crank with two 129(805)
129 (805)	2078	" " " " " Clamping Screw
166 (804)	2078	" " " " End Screw
173124	19448	2078 " " " Slide Block
226 (804)	2078	" " " " " Cap Screw
12424	2076	" " " " " " Washer
988 (803)	2078	" " " " " " Screw Stud
1518 (803)	2078	" " " " " " Nut
173124	19448	" " " " " " complete, Nos. 226(804), 988(803), 12424 and 19448
213161	2080	" Regulating Lever with 213657
109506 (803)	2077	" " " Hinge Screw
97771	1851	" " " Spring
213657	2080	" " " " Pin
97636	2075	Feed Rock Shaft
97637	1849	" " " Bushing (front)
46224	1851	" " " (") Oiler
109519 (803)	2077	" " " (") Set Screw
97638	1849	" " " (back)

From the library of Damon Needs Corp

109779(805) 158(805)

Part No.	Plate	Description
97830	2073	Feed Rock Shaft Bushing (back) Oiler
109519 (803)	2077	" " " " (") Set Screw
97766	2069	" " " Connecting Rod (front) with 97643 and two 1186(805)
109008 (803)	2077	" " " " " (") Hinge Screw
1518 (803)	2078	" " " " " (") " " Nut
97642	2069	" " " " " (back) with 97643 and two 1186(805)
109008 (803)	2077	" " " " " (") Hinge Screw
1518 (803)	2078	" " " " " (") " " Nut
†97643		" " " " " Cap
1186 (805)	2078	" " " " " Screw
97639	2067	" " " Crank with two each 435(803) and 109039(805)
109039 (805)	—	" " " Clamping Screw
97640	2318	" " " Rock Shaft
97641	2318	" " " " " Hinge Pin
435 (803)	2084	" " " " " Set Screw
166 (804)	2078	" " " End Screw
185527	2080	Guide ... 10/62
703 (804)	2084	" Thumb Screw (2) 10/62
97654	2478	Lifting Presser Bar
97729	2073	" " " Bell Crank
1480 (803)	2084	" " " " " Cap Screw (2)
97730	2073	" " " " " Connecting Link
1480 (803)	2084	" " " " " " " Cap Screw
97731	2073	" " " " " Driving Arm with 453(803)
97735	2072	" " " " " Eccentric Connection
109534 (803)	2077	" " " " " Eccentric Connection Hinge Screw
1608 (803)	2078	" " " " " Driving Arm Eccentric Connection Hinge Screw Nut
2117	2082	" " " " " Crank Driving Arm Pin
453 (803)	2084	" " " " " " " Set Screw
97732	2072	" " " " " " " Shaft
†97733	2072	" " " " " " " " " Bracket
50307 (804)	2084	" " " " " " " Shaft Bracket Screw

† when ordering state colour required.

Part No.	Plate	Description
97734	—	Lifting Presser Bar Bell Crank Driving Arm Shaft Bracket, complete, Nos. 2117 and 97731 to 97733
97736	2073	Lifting Presser Bar Guide Bracket with two 1186(803)
1186 (803)	2078	" " " " " Clamping Screw
97762	2073	" " " " " Gib
440 (803)	2084	" " " " " Adjusting Screw
1698 (803)	2084	" " " " " " " Nut
97737	2073	" " " " " Support
171 (805)	2084	" " " " " " Screw (2)
97738	2320	" " " Foot
109329 (806)	2077	" " " Screw
1547 (803)	2078	" " " " Nut
889 (803)	2084	Machine Hinge Connection Set Screw (2)
103113	2079	Machine Pulley, "V" belt groove (diam. of belt groove 4 1/4") with two 434(803)
97791	2075	" " 5 1/2" pulley (9" diam.) with two 434(803), for Foot Power
97835	—	" " (two-speed) with two 434(803)
434 (803)	2084	" " Set Screw
NOTE:—No. 103113 is sent with this machine unless otherwise specified on order, but Bobbin Winder No. 97915 must be used with Machine Pulley No. 97791.		
Catalogue 5011	—	Needle, size 25 (216 x 1)
97644	2478	Needle Bar (hollow)
97645	1849	" " Bushing (lower)
889 (803)	2084	" " " (") Set Screw
97646	2317	" " " (upper)
109509 (805)	2077	" " " (") Cap Screw
46224	1851	" " " (") Oiler
889 (803)	2084	" " " (") Set Screw
97648	2082	" " Connecting Link
97649	1849	" " " Stud with two 109512(803)
109512 (803)	2077	" " " " " Clamping Screw
97650	2082	" " " " " Slide Block
97727	2072	" " Crank
97777	2073	" " " Eccentric
2022	2082	" " " " Position Pin
97778	—	" " " 97727 with 2022, 97777, 109320(803) and 109370(803)
109370 (803)	2077	" " " Position Screw
109320 (803)	2077	" " " Set Screw

From the library of Lamson Speede Corp.

Part No.	Plate	Description
97794	2076	Needle Clamp
97652	—	" " 97794 with 156(806), 217(806) and 97653
156 (806)	2084	" " Screw
97653	2076	" " Thread Guide
217 (806)	2084	" " " " Screw
82429	2478	Presser Bar Lifter
109186 (806)	2077	" " " " Screw
1518 (803)	2078	" " " " Nut
97763	2073	" " Lifting and Releasing Lever Bracket
97706	2072	" " Spring
252 (805)	2084	Pressure Regulating Thumb Screw
103019	2320	Rotating Hook with 103016, 103021 and three 50383(805)
103020	—	" " 103019 with 103006 <i>No. Canceled 10/62</i>
103123	—	" " 103019 with 103119
103021	2320	" " Base with three 109522(803)
97949	2402	" " Bobbin
+103004	2290	" " " " Case
103090	—	" " " " 103004 with 103007 to 103010
<i>No. Canceled 10/62</i> 103005	2290	" " " " 103090 with 662(804), 768(806), 1443(806) and 103013 to 103015
<i>No. Canceled 10/62</i> 103006	—	" " Bobbin Case 103005 with 97949
103118	—	" " " " 103090 with 662(804), 768(806), 1443(806), 103014, 103015 and 103115
103119	—	" " Bobbin Case 103118 with 97949
103007	2290	" " " " Bobbin Retainer
103008	2290	" " " " " " Hinge Pin
103009	2290	" " " " " " Spring
103010	2290	" " " " " " " " Plunger
97837	2320	" " " " Position Bracket
109329 (805)	2077	" " " " " " Screw
98419	2076	" " " " Retainer
97819	2089	" " " " Bracket with 889(803)
50307 (804)	2084	" " " " " " Screw
98422	2076	" " " " Hinge Stud
889 (803)	2084	" " " " " " Set Screw
98421	2076	" " " " Position Spring
792 (805)	2084	" " " " " " Screw
98423	2320	" " " " Spring with 98468

Part No.	Plate	Description
+98468	—	Rotating Hook Bobbin Case Retainer Spring Pad
201 (806)	2084	" " " " " " Screw
103013	2290	" " " " Ring (Nylon) <i>(only supplied when specified on order)</i>
<i>No. Canceled 10/62</i> 103115	—	" " " " (Steel)
103014	2290	" " " " " " Spring
1443 (806)	2320	" " " " " " Screw
103015	2290	" " " " Tension Spring
768 (806)	2320	" " " " " " Adjusting Screw
662 (804)	2084	" " " " " " Screw
103016	2290	" " Ring
50383 (805)	2320	" " " " Screw
109522 (803)	2077	" " Screw
97676	2478	" " Shaft
97677	1849	" " Bushing (back)
97678	1966	" " " " (") Oil Pad
436 (803)	2078	" " " " (") Set Screw
97679	1849	" " " " (front)
97678	1966	" " " " (") Oil Pad
109510 (803)	2077	" " " " (") Set Screw
97824	2080	" " Collar with two 1258(803)
1258 (803)	2084	" " " " Set Screw
97808	2080	" " Gear with 109580(806) and two 109581(803)
97680	2478	" " " " Case (two pieces) with 121(805) and 50234(804)
50234 (804)	2078	" " " " Plug Screw
121 (805)	2084	" " " " Screw
109580 (806)	2077	" " " " Position Screw
109581 (803)	2077	" " " " Set Screw
97804	2320	Slack Thread Regulator
97805	2320	" " " " 97804 with 97690 and 109515(804)
97690	1966	" " " " Bushing
109515 (804)	2077	" " " " Clamping Screw
190 (804)	2084	" " " " Screw (2)
97795	2082	Tension Disc (inner)
97796	2082	" " (outer)
1560 (804)	2078	" " Regulating Thumb Nut
97683	1851	" " Releasing Disc
97684	1851	" " Lever
646 (804)	2084	" " Hinge Screw

For the Library of the Needle Corp.

Part No.	Plate	Description
12329	1966	Tension Releasing Lever Spring
97799	2082	" " Pin
109536 (804)	2077	" Screw Stud
11422	2082	" Spring
82446	2082	" Washer (felt)
97797	2082	" " (fibre)
97800	—	Tension (rotating) and Thread Take-up Spring, complete, Nos. 1560(804), 11422, 82446, 82525, 97683, 97696, 97698, 97795 to 97798 and 109536(804)
97756	2082	Thread Guard (side of arm)
1143 (803)	2078	" " Set Screw
†97769	2478	" Lubricating Cup
97770	—	" " " 97769 with 160(803), 97772 and 250519
250519	1966	" " " Oil Pad (felt)
160 (803)	2084	" " " Set Screw
97772	2478	" " " Thread Guide
89363	1851	" Retaining Disc
†1110 (805)	2078	" " Screw Stud
20972	—	" " " " 1110(805) with 1560(804)
1560 (804)	2078	" " " " Regulating Thumb Nut
2103	1851	" " Spring
97757	—	" Retainer, complete, Nos. 2103, 20972 and two 89363
95024	2081	" " Thread Eyelet
109050 (806)	2077	" " " " Screw
97687	1849	" Take-up Crank
✓109484 (805)	2077	" " " Cap Screw
97688	1966	" " " Cotter Pin
690 (803)	2084	" " " " " Screw
97689	1966	" " Lever
97690	1966	" " " Bushing
109515 (804)	2077	" " " " Clamping Screw
97691	1966	" " " Hinge Pin
97692 ✓	1966	" " " Link
97693	2082	" " " " Hinge Pin
457 (805)	2084	" " " " " End Screw
430 (830)	2084	" " " " " Set Screw
97694	—	" " " complete, Nos. 457(805), 97689 to 97693 and 109515(804)
82525	1849	" " Spring
97696	1849	" " Adjusting Sleeve
97798	2082	" " Lever
97698	2080	" " Regulator
443 (803)	2084	" " " " Set Screw

† when ordering state colour required.

Part No.	Plate	Description
97699	2076	Throat Plate
180 (806)	2078	" " Screw (2)
97739	2072	Vibrating Presser Bar
97802	2073	" " " Cap
1480 (803)	2084	" " " " Screw for 97739
207 (806)	2084	" " " " " 97802
97803	2073	" " " Cushion
97742	2073	" " " Spring
225 (804)	2084	" " " " Screw
97743	2320	" " Foot
898 (806)	2084	" " " Screw
1547 (803)	2078	" " " Nut
97834	—	Drip Pan with six wood screws ¼" No. 5

From the library of: Diamond Needle Corp.

PARTS SPECIAL
TO
MACHINE No. 132K9
(OBSOLETE)

Flat Bed, Compensating Drop Feed, Alternating Pressers, Needle Bar Link, Link Take-up Rotating Hook Mechanism with replaceable bearing rings. Maximum length of stitch $\frac{1}{2}$ inch. For Heavy Jute and Hemp Threads, for Sack Work.

This machine is the same as No. 132K6 with the following exceptions:—

Part No.	Plate	Description
97744	2070	Lifting Presser Foot
97702	2068	Throat Plate
97754	2070	Vibrating Presser Foot
Catalogue 5020	—	Needle, size 30 (216 × 3)

PARTS COMPLETE
FOR
MACHINE No. 132K7

Flat Bed, Compensating Drop Feed, Needle Bar Link, Link Take-up, Rotating Hook Mechanism with replaceable bearing rings. Maximum length of stitch $\frac{1}{2}$ inch. For General Cloth, Canvas and Leather Work.

Part No.	Plate	Description
†97601	---	Arm with 56003 and two 97829
<i>NOTE.—Due to the accuracy required for Gear alignment, Arm cannot be supplied separately and can only be sent out as a unit, Arm and Brd assembled.</i>					
8582	1966	Arm Dowel Pin (2)
56003	1851	" Oil Tube with 52015
52045	2081	" " " Packing (felt)
118 (805)	2084	" Screw (4)
97806	2079	" Shaft (horizontal)
97950	2471	" " (") Flanged Bushing (back)
97923	2471	" " (") " " (") 97950
		with 52198 and 97924
97605	1851	" " (") " Bushing (back) Drain
		Tube
97829	2073	" " (") " " (") Oiler
52198	2471	" " (") " " (") Oil Pad
		(outside, felt)
97924	---	" " (") " " (back) Oil Pad
		(inside, braided cotton)
446 (803)	2084	" " (") " Bushing (back) Set
		Screw
97951	2471	" " (") " " (front)
97925	2471	" " (") " " (") 97951
		with 52198 and 97926
97829	2073	" " (") " Bushing (front) Oiler
52198	2471	" " (") " " (") Oil Pad
		(outside, felt)
97926	---	" " (") " " (front) Oil Pad
		(inside, braided cotton)
50084 (803)	2078	" " (") " Bushing (front) Set
		Screw
97807	2080	" " (") Gear with three 50083(803)
97609	1844	" " (") " Case (two pieces) with
		121 (805) and 50234(804)
50234 (804)	2078	" " (") " " Plug Screw
121 (805)	2084	" " (") " " Screw

† when ordering state colour required.

Part No.	Plate	Description
50083 (803)	2078	Arm Shaft (horizontal) Gear Set Screw
144 (803)	2084	" " (") Screw
97610	2478	" " (upright)
97611	1849	" " (") Bushing (lower)
575 (803)	2084	" " (") " (") Set Screw
97612	1849	" " (") " (upper)
575 (803)	2084	" " (") " (") Set Screw
97808	2080	" " (") Gear (lower) with 109580(806) and two 109581(803)
109580 (806)	2077	" " (") " (") Position Screw
109581 (803)	2077	" " (") " (") Set Screw
97800	2080	" " (") " (upper) with 109580(806) and two 109581 (803)
109580 (806)	2077	" " (") " (") Position Screw
109581 (803)	2077	" " (") " (") Set Screw
97614	2317	" Side Cap
1226 (804)	2078	" " " Screw
†97615	2317	" " Cover
51224 (804)	2084	" " " Thumb Screw
82403	1851	" Spool Pin (2)
†97616	2089	" " " Bushing
†202247	2317	" Top Cover
109505 (808)	2077	" " " Screw
202248	1849	" " " Washer
†*97618	—	Bed with two each 46224 and 97830

NOTE.—Due to the accuracy required for Gear alignment, Bed cannot be supplied separately and can only be sent out as a unit, Arm and Bed assembled.

91058	2317	Bed Slide (front)
97619	2317	" " (") Spring
337 (804)	2084	" " (") " Screw
97620	—	" " (") 91058 with 97619 and two 337(804)
91057	2317	" " (back)
180 (806)	2078	" " (") Screw (2)
†97621	1844	Face Plate
109045 (808)	2077	" " Screw (2)
97622	1849	" " Thread Guard
190 (804)	2084	" " " Screw
98484	2081	" " " Thread Retainer
97623	2069	Feed Bar
97624	2318	" " Oil Pad (felt)
220 (804)	2078	" " " Screw
313 (803)	2084	" " Screw Centre (2)
1519 (803)	2078	" " " Nut (2)

† when ordering state colour required.

Part No.	Plate	Description
97625	2076	Feed Dog
109050 (803)	2077	" " Screw (2)
97626	2067	" Eccentric
97627	2067	" " Adjusting Disc
97628	2317	" " " Flange
97629	2478	" " " Coupling with five
		50083 (803)
50083 (803)	2078	" " " " Screw
213655	1849	" " Friction Spring Washer
109513 (805)	2077	" " " " Screw
1521 (805)	2078	" " " " Nut
109514 (805)	2077	" " Fulcrum Screw
1521 (805)	2078	" " " Nut
97630	2069	" Lifting Rock Shaft
97634	1849	" " " Bushing (front)
46224	1851	" " " " (") Oiler
436 (803)	2078	" " " " (") Set Screw
97635	1849	" " " " (back)
97830	2073	" " " " (") Oiler
436 (803)	2078	" " " " (") Set Screw
97631	2069	" " " Connecting Rod with 158(805)
109779 (Pos)	458 (805)	2084 1/2" " " Clamping Screw
97632	2068	" " " " Hinge Pin
109008 (803)	2077	" " " " Screw
1518 (803)	2078	" " " " Nut
97633	2067	" " " Crank with two 129(805)
129 (805)	2078	" " " Clamping Screw
166 (804)	2078	" " " End Screw
173887	19448	2076 " " " Slide Block
226 (804)	2078	" " " " Cap Screw
12424	2076	" " " " Washer
988 (803)	2078	" " " Screw Stud
1518 (803)	2078	" " " " Nut
173887	40449	— " " " complete, Nos
		226(804), 988(803), 12424 and 19448
213161	2080	" Regulating Lever with 213657
109506 (803)	2077	" " Hinge Screw
97771	1851	" " Spring
213657	2080	" " Pin
97636	2075	Feed Rock Shaft
97637	1849	" " Bushing (front)
46224	1851	" " " (") Oiler
109519 (803)	2077	" " " (") Set Screw
97638	1849	" " " (back)
97830	2073	" " " (") Oiler
109519 (803)	2077	" " " (") Set Screw

Part No.	Plate	Description
97766	2069	Feed Rock Shaft Connecting Rod (front) with 97643 and two 1186(805)
109008 (803)	2077	" " " " (") Hinge Screw ...
1518 (803)	2078	" " " " (") " " "
		Nut
97642	2060	" " " " (back) with 97643 and two 1186(805)
109008 (803)	2077	" " " " (") Hinge Screw ...
1518 (803)	2078	" " " " (") " " "
		Nut
†97043	---	" " " " " Cap ...
1186 (805)	2078	" " " " " Screw ...
97639	2067	" " " " Crank with two each 435(803) and 109039(805)
109039 (805)	---	" " " " " Clamping Screw ...
97640	2318	" " " " " Rock Shaft ...
97641	2318	" " " " " Hinge Pin ...
435 (803)	2084	" " " " " " " " " " " Set Screw
166 (804)	2078	" " " " " End Screw ...
185527	2080	Guide 10/42 ...
799 (804)	2084	" Thumb Screw (2) 10/42 ...
889 (803)	2084	Machine Hinge Connection Set Screw (2) ...
103113	---	Machine Pulley , "V" belt groove (diam. of belt groove 4 1/4") with two 434(803)
97791	2076	" " " 5 1/4" Pulley (9" diam.), with two 434(803) for Foot Power
97835	---	" " (two-speed) with two 434(803) ...
434 (803)	2084	" " Set Screw ...

NOTE.—No. 103113 is sent with this machine unless otherwise specified on order, but Bobbin Winder No. 97945 must be used with Machine Pulley No. 97791.

Catalogue 5011	---	Needle, size 25 (216 × 1)
97644	2478	Needle Bar (hollow) ...
97645	1849	" " Bushing (lower) ...
889 (803)	2084	" " " " (") Set Screw ...
97646	2317	" " " " (upper) ...
109509 (805)	2077	" " " " (") Cap Screw ...
46224	1851	" " " " (") Oiler ...
889 (803)	2084	" " " " (") Set Screw ...
97648	2082	" " " " Connecting Link ...
97649	1849	" " " " Stud with two 109512(803)
109512 (803)	2077	" " " " " " Clamping Screw ...

† when ordering state colour required.

Part No.	Plate	Description
97650	2082	Needle Bar Connecting Link Stud Slide Block ...
97651	2478	" " " Crank with 109320(803) and 109370(803) ...
109370 (803)	2077	" " " " Position Screw ...
109320 (803)	2077	" " " " Set Screw ...
97794	2076	Needle Clamp ...
97652	---	" " 97794 with 156(806), 217(806) and 97653
156 (806)	2084	" " Screw ...
97653	2076	" " Thread Guide ...
217 (806)	2084	" " " " Screw ...
97654	2178	Presser Bar ...
97655	1851	" " Guide Bracket with two 1186(803)
1186 (803)	2078	" " " " Clamping Screw ...
82429	2478	" " Lifter ...
109186 (806)	2077	" " " " Screw ...
1518 (803)	2078	" " " " Nut ...
97656	2080	" " Lifting and Releasing Lever Bracket ...
97657	2478	" " Spring ...
8554	---	Presser Foot Hinge Pin ...
97658	---	" " Plate ...
97659	---	" " Shank ...
95489	1966	" " Spring ...
97661	2082	" " (hinged), complete, Nos. 8554, 95489, 97658 and 97659
109329 (806)	2077	" " Screw ...
1547 (803)	2078	" " " Nut ...
252 (805)	2084	Pressure Regulating Thumb Screw ...
103019	2320	Rotating Hook with 103016, 103021 and three 50383(805)
103020	---	" " 103019 with 103006 <i>No. Canceled 1/12</i>
103123	---	" " 103019 with 103119 ...
103021	2320	" " Base with three 109522(803) ...
97949	2402	" " Bobbin ...
†103004	2290	" " " Case ...
103090	---	" " " " 103004 with 103007 to 103010
103005	2290	" " " " 103090 with 662(804), 768(806), 1443(806) and 103013 to 103015
<i>No. Canceled 1/12</i>	103006	" " " Case 103005 with 97949 ...
103118	---	" " " " 103090 with 662(804), 768(806), 1443(806), 103014, 103015 and 103115
103119	---	" " Bobbin Case 103118 with 97949 ...

From the library of: Diamond Needle Corp.

Part No.	Plate	Description
103007	2290	Rotating Hook Bobbin Case Bobbin Retainer ...
103008	2290	" " " " " " " Hinge Pin ...
103009	2290	" " " " " " " Spring ...
103010	2290	" " " " " " " Plunger
97837	2320	" " " " " " " Position Bracket ...
109329 (805)	2077	" " " " " " " Screw ...
98419	2076	" " " " " " " Retainer ...
97819	2089	" " " " " " " Bracket with 889(803)
50307 (804)	2084	" " " " " " " Screw ...
98422	2076	" " " " " " " Hinge Stud ...
889 (803)	2084	" " " " " " " " " Set Screw
98421	2076	" " " " " " " Position Spring ...
792 (805)	2084	" " " " " " " " " Screw
98423	2320	" " " " " " " Spring with 98468
†98468	---	" " " " " " " " " Pad
201 (806)	2084	" " " " " " " " " Screw ...
<i>On Canulet 1/1/12</i> 103013	2290	" " " " " " " Ring (Nylon) (<i>only supplied when specified on order</i>)
103115	---	" " " " " " " (Steel) ...
103014	2290	" " " " " " " Spring ...
1443 (806)	2320	" " " " " " " " " Screw ...
103015	2290	" " " " " " " Tension Spring ...
768 (806)	2320	" " " " " " " " " Adjusting Screw
602 (804)	2084	" " " " " " " " " Screw ...
103016	2290	" " " " " " " Ring ...
50383 (805)	2320	" " " " " " " " " Screw ...
109522 (803)	2077	" " " " " " " " " Screw ...
97676	2478	" " " " " " " Shaft ...
97677	1849	" " " " " " " Bushing (back) ...
97678	1966	" " " " " " " (") Oil Pad ...
436 (803)	2078	" " " " " " " (") Set Screw ...
97679	1849	" " " " " " " (front) ...
97678	1966	" " " " " " " (") Oil Pad ...
109510 (803)	2077	" " " " " " " (") Set Screw ...
97824	2080	" " " " " " " Collar with two 1258(803) ...
1258 (803)	2084	" " " " " " " " " Set Screw ...
97808	2080	" " " " " " " Gear with 109580(806) and two 109581(803)
97680	2478	" " " " " " " Case (two pieces) with 121(805) and 50234(804)
50234 (804)	2078	" " " " " " " Plug Screw ...
121 (805)	2084	" " " " " " " " " Screw ...

Part No.	Plate	Description
109580 (806)	2077	Rotating Hook Shaft Gear Position Screw ...
109581 (803)	2077	" " " " " " " Set Screw ...
97681	1851	Slack Thread Regulator ...
97682	1851	" " " " " " " Bracket ...
448 (803)	2084	" " " " " " " " " Set Screw ...
1147 (803)	2078	" " " " " " " " " Set Screw ...
97795	2082	Tension Disc (inner) ...
97796	2082	" " " " (outer) ...
1560 (804)	2078	" " " " " " " Regulating Thumb Nut ...
97683	1851	" " " " " " " Releasing Disc ...
97684	1851	" " " " " " " Lever ...
646 (804)	2084	" " " " " " " " " Hinge Screw ...
12329	1966	" " " " " " " " " Spring ...
97799	2082	" " " " " " " " " Pin ...
109536 (804)	2077	" " " " " " " " " Screw Stud ...
11422	2082	" " " " " " " " " Spring ...
82446	2082	" " " " " " " " " Washer (felt) ...
97797	2082	" " " " " " " " " (fibre) ...
97800	---	Tension (rotating) and Thread Take-up Spring, complete, Nos. 1560(806), 11422, 81416, 82525, 97683, 97696, 97698, 97795 to 97798 and 109536(804) ...
97756	2082	Thread Guard (side of arm) ...
1143 (803)	2078	" " " " " " " " " Set Screw ...
†97769	2478	" " " " " " " " " Lubricating Cup ...
97770	---	" " " " " " " " " 97769 with 160(803), 97772 and 250519
250519	1966	" " " " " " " " " Oil Pad (felt) ...
160 (803)	2084	" " " " " " " " " Set Screw ...
97772	2478	" " " " " " " " " Thread Guide ...
86363	1851	" " " " " " " " " Retaining Disc ...
†1110 (805)	2078	" " " " " " " " " Screw Stud ...
20972	---	" " " " " " " " " 1110(805) with 1560(804)
1560 (804)	2078	" " " " " " " " " Regulating Thumb Nut ...
2103	1851	" " " " " " " " " Spring ...
97757	---	" " " " " " " " " Retainer, complete, Nos. 2103, 20972 and two 89363
95024	2081	" " " " " " " " " Thread Eyelet ...
109050 (806)	2077	" " " " " " " " " " " Screw ...
97687	1819	" " " " " " " " " Take-up Crank ...
109484 (805)	2077	" " " " " " " " " Cap Screw ...
97688	1966	" " " " " " " " " Cotter Pin ...
690 (803)	2084	" " " " " " " " " " " Screw ...
97689	1966	" " " " " " " " " Lever ...
97690	1966	" " " " " " " " " Bushing ...

† when ordering state colour required.

Part No.	Plate	Description
109515 (804)	2077	Thread Take-up Lever Bushing Clamping Screw ...
97691	1966	" " " Hinge Pin ...
97692	1966	" " " Link ...
97393	2082	" " " " Hinge Pin ...
457 (805)	2084	" " " " " End Screw ...
430 (830)	2084	" " " " " Set Screw ...
97694	---	" " " complete, Nos. 457 (805), 97689 to 97693 and 109515 (804)
82525	1849	" " Spring ...
97696	1849	" " Adjusting Sleeve ...
97798	2082	" " Lever ...
97698	2080	" " Regulator ...
443 (803)	2084	" " Set Screw ...
97699	2076	Throat Plate ...
180 (806)	2078	" " Screw (2) ...
97834	---	Drip Pan with six wood screws $\frac{1}{2}$ " No. 5 ...

PARTS SPECIAL TO MACHINE No. 132K8

Flat Bed, Compensating Drop Feed, Needle Bar Link, Link Take-up, Rotating Hook Mechanism with replaceable bearing rings. Maximum length of stitch $\frac{1}{2}$ inch. For Heavy Jute and Hemp Threads, for Sack Work.

This machine is the same as No. 132K7 with the following exceptions:

Part No.	Plate	Description
97779	2068	Feed Dog ...
Catalogue 5020	---	Needle , size 30 (216 x 3) ...
97765	---	Presser Foot Plate ...
97784	2318	" " (hinged), complete, Nos. 8554, 95489, 97659 and 97765
8575	---	" " Hinge Pin ...
97782	---	" " Plate ...
97783	---	" " Shank ...
97780	2070	" " (hinged), complete, Nos. 8575, 95489, 97782 and 97783
97700	2070	" " (plain) ...
97702	2068	Throat Plate for 97625 ...
97781	2068	" " " 97779 ...

NOTE: Feed Dog 97779, Presser Foot 97780 and Throat Plate 97781 are sent with this machine unless otherwise specified on order.

Special Parts for Double Presser Feet for Bag Hemming for Machines 132K7 and 132K8

Part No.	Plate	Description
97703	2067	Face Plate ...
109032 (806)	2077	" " Screw (2) ...
97764	2068	Feed Dog ...
97654	2478	Presser Bar ...
97704	2068	" " Guide Bracket with two 1229 (803) ...
1229 (803)	2078	" " " " Set Screw ...
97705	2318	" " Lifting and Releasing Lever Bracket ...
97706	2072	" " Spring ...
97707	2070	" Foot (right) ...
97708	2070	" " (left) ...
109329 (806)	2077	" " (") Screw ...
1547 (803)	2078	" " (") " Nut ...
252 (805)	2084	Pressure Regulating Thumb Screw (for Face Plate)
97753	2068	Throat Plate ...

PARTS COMPLETE

FOR

MACHINE No. 132K10

(OBSOLETE)

Flat Bed, Drop Feed, Needle Bar Link, Link Take-up, Rotating Hook Mechanism with replaceable bearing rings. Maximum length of stitch $\frac{1}{2}$ inch. For General Cloth, Canvas and Leather Work.

Part No.	Plate	Description
✚97601	—	Arm with 56003 and two 97829
<i>NOTE.—Due to the accuracy required for Gear alignment, Arm cannot be supplied separately and can only be sent out as a unit, Arm and Bed assembled.</i>		
8582	1966	Arm Dowel Pin (2)
56003	1851	" Oil Tube with 52045
52045	2081	" " " Packing (felt)
118 (805)	2084	" Screw (4)
97806	2079	" Shaft (horizontal)
97950	2471	" " (") Flanged Bushing (back)
97923	2471	" " (") " " (") 97950 with 52198 and 97924
97605	1851	" " (") " Bushing (back) Drain Tube
97829	2073	" " (") " " (") Oiler
52198	2471	" " (") " " (") Oil Pad (outside, felt)
97924	—	" " (") " " (back) Oil Pad (inside, braided cotton)
446 (803)	2084	" " (") " Bushing (back) Set Screw
97951	2471	" " (") " " (front)
97925	2471	" " (") " " (") 97951 with 52198 and 97926
97829	2073	" " (") " Bushing (front) Oiler
52198	2471	" " (") " " (") Oil Pad (outside, felt)
97926	—	" " (") " " (front) Oil Pad (inside, braided cotton)
50084 (803)	2078	" " (") " Bushing (front) Set Screw
97807	2080	" " (") Gear with three 50083(803)
97609	1844	" " (") " Case (two pieces) with 121(805) and 50234(804)
50234 (804)	2078	" " (") " " Plug Screw
121 (805)	2084	" " (") " " Screw
50083 (803)	2078	" " (") " Set Screw
144 (803)	2084	" " (") " Screw

Part No.	Plate	Description
97610	2478	Arm Shaft (upright)
97611	1849	" " (") Bushing (lower)
575 (803)	2084	" " (") " (") Set Screw
97612	1849	" " (") " (upper)
575 (803)	2084	" " (") " (") Set Screw
97808	2080	" " (") Gear (lower) with 109580(806) and two 109581(803)
109580 (806)	2077	" " (") " (") Position Screw
109581 (803)	2077	" " (") " (") Set Screw
97809	2080	" " (") " (upper) with 109580(806) and two 109581(803)
109580 (806)	2077	" " (") " (") Position Screw
109581 (803)	2077	" " (") " (") Set Screw
97614	2317	" Side Cap
1226 (804)	2078	" " " Screw
97615	2317	" " Cover
51224 (804)	2084	" " " Thumb Screw
82403	1851	" Spool Pin (2)
97616	2089	" " " Bushing
202247	2317	" Top Cover
109505 (808)	2077	" " " Screw
202248	1849	" " " Washer
✚97618	—	Bed with two each 46224 and 97830
<i>NOTE.—Due to the accuracy required for Gear alignment, Bed cannot be supplied separately and can only be sent out as a unit, Arm and Bed assembled.</i>		
91058	2317	Bed Slide (front)
97619	2317	" " (") Spring
337 (804)	2084	" " (") " Screw
97620	—	" " (") 91058 with 97619 and two 337(804)
91057	2317	" " (back)
180 (806)	2078	" " (") Screw (2)
97621	1844	Face Plate
109045 (806)	2077	" " Screw (2)
97622	1849	" " Thread Guard
190 (804)	2084	" " " " Screw
98484	2081	" " " " Thread Retainer
97709	2478	Feed Bar
97710	2076	" " Lifting Link
1278 (803)	2078	" " " " Hinge Screw (2)
1620 (803)	2078	" " " " " Nut (2)
313 (803)	2084	" " Screw Centre (2)
1519 (803)	2078	" " " " Nut (2)

Part No.	Plate	Description
97625	2076	Feed Dog
109050 (803)	2077	" " Screw (2)
97711	2317	" Eccentric
97712	2317	" " Adjusting Disc
97628	2317	" " " Flange
97629	2478	" " " " Coupling with five 50083(803)
50083 (803)	2078	" " " " " Screw
213655	1849	" " Friction Spring Washer
109513 (805)	2077	" " " " " Screw
1521 (805)	2078	" " " " " Nut
109514 (805)	2077	" " Fulcrum Screw
1521 (805)	2078	" " " " Nut
97713	2080	" Lifting Eccentric with two 446-803
446 (803)	2084	" " " Set Screw
97714	2075	" " Rock Shaft
97634	1849	" " " " Bushing (front)
46224	1851	" " " " " (") Oiler
436 (803)	2078	" " " " " (") Set Screw
97635	1849	" " " " " (back)
97830	2073	" " " " " (") Oiler
436 (803)	2078	" " " " " (") Set Screw
97715	1844	" " " " Connecting Rod with 97716 and two 1186(805)
✦97716	—	" " " " " Cap
1186 (805)	2078	" " " " " Screw
109534 (803)	2077	" " " " " Hinge Screw
1608 (803)	2078	" " " " " " " Nut
97717	2076	" " " " Crank with two 1186(803)
1186 (803)	2078	" " " " " Clamping Screw
166 (804)	2078	" " " " " End Screw
213161	2080	" Regulating Lever with 213657
109506 (803)	2077	" " " Hinge Screw
97771	1851	" " " Spring
213657	2080	" " " Pin
97636	2075	Feed Rock Shaft
97637	1849	" " " Bushing (front)
46224	1851	" " " " (") Oiler
109519 (803)	2077	" " " " (") Set Screw
97638	1849	" " " " (back)
97830	2073	" " " " (") Oiler
109519 (803)	2077	" " " " (") Set Screw
97718	1844	" " " " Connecting Rod with 97716 and two 1186(805)
✦97716	—	" " " " " Cap
1186 (805)	2078	" " " " " Screw

Part No.	Plate	Description
97719	2076	Feed Rock Shaft Connecting Rod Crank with two 1186(803)
1186 (803)	2078	" " " " " Clamping Screw
109534 (803)	2077	" " " " " Hinge Screw
1608 (803)	2078	" " " " " Nut
166 (804)	2078	" " " " End Screw
85527	2089	Guide ... 10/6.2
793 (804)	2084	Thumb Screw (2) ... 10/6.2
889 (803)	2084	Machine Hinge Connection Set Screw (2)
103113	2079	Machine Pulley , "V" belt groove (diam. of belt groove 4 1/4") with two 434(803)
97791	2075	" " 5 1/2" pulley (9" diam.), with two 434(803) for Foot Power
97835	—	" " (two speed) with two 434(803)
434 (803)	2084	" " Set Screw
<i>NOTE: No. 103113 is sent with this machine unless otherwise specified on order, but Bobbin Winder No. 97945 must be used with Machine Pulley No. 97791.</i>		
Catalogue 5011	—	Needle , size 25 (216 x 1)
97644	2478	Needle Bar (hollow)
97645	1849	" " Bushing (lower)
889 (803)	2084	" " " (") Set Screw
97646	2317	" " " " (upper)
109509 (805)	2077	" " " " (") Cap Screw
46224	1851	" " " " (") Oiler
889 (803)	2084	" " " " (") Set Screw
97648	2082	" " " Connecting Link
97649	1849	" " " " Stud with two 109512(803)
109512 (803)	2077	" " " " " Clamping Screw
97650	2082	" " " " " Slide Block
97651	2478	" " " Crank with 109320(803) and 109370(803)
109370 (803)	2077	" " " " Position Screw
109320 (803)	2077	" " " " Set Screw
97794	2076	Needle Clamp
97652	—	" " 97794 with 156(806), 217(806) and 97653
156 (806)	2084	" " " Screw
97653	2076	" " " Thread Guide
217 (806)	2084	" " " " Screw
97654	2478	Presser Bar
97655	1851	" " Guide Bracket with two 1186(803)
1186 (803)	2078	" " " " Clamping Screw
82429	2478	" " Lifter

Part No.	Plate	Description
109186 (806)	2077	Presser Bar Lifter Screw ...
1518 (803)	2078	" " " " Nut ...
97656	2080	" " Lifting and Releasing Lever Bracket ...
97657	2478	" " Spring ...
8554	—	Presser Foot Hinge Pin ...
97658	—	" " Plate ...
97659	—	" " Shank ...
95489	1966	" " Spring ...
97661	2082	" " (hinged), complete, Nos. 8554, 95489, 97658 and 97659
109329 (806)	2077	" " Screw ...
1547 (803)	2078	" " " " Nut ...
252 (805)	2084	Pressure Regulating Thumb Screw ...
103019	2320	Rotating Hook with 103016, 103021 and three 50383(805)
103020	—	" " 103019 with 103006 <i>No. Canceled 10/12</i>
103123	—	" " 103019 with 103119 ...
103021	2320	" " Base with three 109522(803) ...
97949	2402	" " Bobbin ...
†103004	2290	" " " " Case ...
103090	—	" " " " 103004 with 103007 to 103010
<i>No. Canceled 10/12</i> 103005	2290	" " " " 103090 with 662(804), 768(806), 1443(806) and 103013 to 103015
<i>No. Canceled 11/12</i> 103006	—	" " " " 103005 with 97949 ...
103118	—	" " " " 109090 with 662(804), 768(806), 1443(806), 103014, 103015 and 103115
103119	—	" " " " 103118 with 97949 ...
103007	2290	" " " " Bobbin Retainer ...
103008	2290	" " " " " " Hinge Pin ...
103009	2290	" " " " " " Spring ...
103010	2290	" " " " " " Plunger
97837	2320	" " " " Position Bracket ...
109329 (805)	2077	" " " " " " Screw ...
98419	2076	" " " " Retainer ...
97819	2089	" " " " Bracket with 889(803)
50307 (804)	2084	" " " " " " Screw ...
98422	2076	" " " " Hinge Stud ...
889 (803)	2084	" " " " " " Set Screw
98421	2076	" " " " Position Spring ...

Part No.	Plate	Description
792 (805)	2084	Rotating Hook Bobbin Case Retainer Position Spring Screw
98423	2320	" " " " " " Spring with 98468
†98468	—	" " " " " " Pad ...
201 (806)	2084	" " " " " " Screw ...
<i>No. Canceled 10/12</i> 103013	2290	" " " " Ring (Nylon) (<i>only supplied when specified on order</i>)
103115	—	" " " " (Steel) ...
103014	2290	" " " " Spring ...
1443 (806)	2320	" " " " " " Screw ...
103015	2290	" " " " Tension Spring ...
768 (806)	2320	" " " " " " Adjusting Screw
662 (804)	2084	" " " " " " Screw ...
103016	2290	" " Ring ...
50383 (805)	2320	" " " " Screw ...
109522 (803)	2077	" " " " Screw ...
97676	2478	" " Shaft ...
97677	1849	" " " " Bushing (bar key) ...
97678	1966	" " " " (") Oil Pad ...
436 (803)	2078	" " " " (") Set Screw ...
97679	1849	" " " " (front) ...
97678	1966	" " " " (") Oil Pad ...
109510 (803)	2077	" " " " (") Set Screw ...
97824	2080	" " " " Collar with two 1258(803) ...
1258 (803)	2084	" " " " Set Screw ...
97808	2080	" " " " Gear with 109580(806) and two 109581(803)
97680	2478	" " " " Case (two pieces) with 121(805) and 50234(804)
50234 (804)	2078	" " " " Plug Screw ...
121 (805)	2084	" " " " " " Screw ...
109580 (806)	2077	" " " " Position Screw ...
109581 (803)	2077	" " " " Set Screw ...
97681	1851	Slack Thread Regulator ...
97682	1851	" " " " Bracket ...
448 (803)	2084	" " " " " " Set Screw ...
1147 (803)	2078	" " " " " " Set Screw ...
97795	2082	Tension Disc (inner) ...
97796	2082	" " (outer) ...
1560 (804)	2078	" " Regulating Thumb Nut ...
97683	1851	" " Releasing Disc ...
97684	1851	" " Lever ...
646 (804)	2084	" " " " Hinge Screw ...
12329	1966	" " " " Spring ...

From the Library of Ishiyama Needle Corp

Part No.	Plate	Description
97799	2082	Tension Releasing Pin
109536 (804)	2077	" Screw Stud
11422	2082	" Spring
82446	2082	" Washer (felt)
97797	2082	" " (fibre)
97800	—	Tension (rotating) and Thread Take-up Spring, complete, Nos. 1560(804), 11422, 82446, 82525, 97683, 97696, 97698, 97795 to 97798 and 109536(804)
97750	2082	Thread Guard (side of arm)
1143 (803)	2078	" " Set Screw
97769	2478	" Lubricating Cup
97770	—	" " " 97769 with 160(803), 97772 and 250519
250519	1966	" " " Oil Pad (felt)
160 (803)	2084	" " " Set Screw
97772	2478	" " " Thread Guide
89363	1851	" Retaining Disc
†1110 (805)	2078	" " Screw Stud
20972	—	" " " " 1110(805) with 1560(804)
1560 (804)	2078	" " " " Regulating Thumb Nut
2103	1851	" " Spring
97757	—	" Retainer, complete, Nos. 2103, 20972 and two 89363
95024	2081	" " Thread Eyelet
109050 (806)	2077	" " " " Screw
97687	1849	" Take-up Crank
109484 (805)	2077	" " " Cap Screw
97688	1966	" " " Cotter Pin
690 (803)	2084	" " " " " Screw
97689	1966	" " Lever
97690	1966	" " " Bushing
109515 (804)	2077	" " " " Clamping Screw
97691	1966	" " " Hinge Pin
97692	1966	" " " Link
97693	2082	" " " " Hinge Pin
457 (805)	2084	" " " " " End Screw
430 (830)	2084	" " " " " Set Screw
97694	—	" " " " complete, Nos. 457(805), 97689 to 97693 and 109515(804)
82525	1849	" " Spring
97696	1849	" " " Adjusting Sleeve
97798	2082	" " " Lever
97698	2080	" " " Regulator
443 (803)	2084	" " " " Set Screw

Part No.	Plate	Description
97699	2076	Throat Plate
180 (806)	2078	" " Screw (2)
97834	—	Drip Pan with six wood screws $\frac{1}{2}$ " No. 5

PARTS COMPLETE

FOR

MACHINE No. 132K12

Flat Bed, Drop Feed, Needle Bar Link, Link Take-up, High Lift Vertical Trimmer, Trimming Knife on hinged holder controlled by spring pressure, Rotating Hook Mechanism with replaceable bearing rings and automatic Variable Tension. Maximum length of stitch $\frac{1}{4}$ inch. For Stitching and Trimming Soft Shoulder Pads (Arm Scye Work).

Part No.	Plate	Description
†97838	—	Arm with 56003 and two 97829
8582	1966	Arm Dowel Pin (2)
56003	1851	" Oil Tube with 52045
52045	2081	" " " Packing (felt)
118 (805)	2084	" Screw (4)
97806	2079	" Shaft (horizontal)
97950	2471	" " (") Flanged Bushing (back)
97923	2471	" " (") " " (") 97950 with 52198 and 97924
97805	1851	" " (") " Bushing (back) Drain Tube
97829	2073	" " (") " " (") Oiler ...
52198	2471	" " (") " " (") Oil Pad (outside, felt)
97924	—	" " (") " " (back) Oil Pad (inside, braided cotton)
446 (803)	2084	" " (") " Bushing (back) Set Screw
97951	2471	" " (") " " (front) ...
97925	2471	" " (") " " (") 97951 with 52198 and 97926
97829	2073	" " (") " Bushing (front) Oiler ...
52198	2471	" " (") " " (") Oil Pad (outside, felt)
97926	—	" " (") " " (front) Oil Pad (inside, braided cotton)
50084 (803)	2078	" " (") " Bushing (front) Set Screw

† when ordering state colour required.

Part No.	Plate	Description
97807	2080	Arm Shaft (horizontal) Gear with three 50083(803) ...
97609	1844	" " (") " Case (two pieces) with 121(805) and 50234(804)
50234 (804)	2078	" " (") " " Plug Screw
121 (805)	2084	" " (") " " Screw
50083 (803)	2078	" " (") " " Set Screw
144 (803)	2084	" " (") " Screw
97610	2478	" " (upright)
97611	1849	" " (") Bushing (lower)
575 (803)	2084	" " (") " (") Set Screw
97612	1849	" " (") " (upper)
575 (803)	2084	" " (") " (") Set Screw
97808	2080	" " (") Gear (lower) with 109580(806) and two 109581(803)
109580 (806)	2077	" " (") " (") Position Screw
109581 (803)	2077	" " (") " (") Set Screw
97809	2080	" " (") " (upper) with 109580(806) and two 109581(803)
109580 (806)	2077	" " (") " (") Position Screw
109581 (803)	2077	" " (") " (") Set Screw
†97615	2317	" Side Cover
51224 (804)	2084	" " " Thumb Screw
82403	1851	" Spool Pin (2)
†97616	2089	" " " Bushing
†202247	2317	" Top Cover
109505 (808)	2077	" " " Screw
202248	1849	" " " " Washer
†97839	—	Bed with two each 46224 and 97830
<i>NOTE.—Due to the accuracy required for Gear alignment, Bed cannot be supplied separately and can only be sent out as a unit, Arm and Bed assembled.</i>		
97929	2472	Bed Slide (front)
97930	—	" " (") 97929 with 97619 and two 337(804)
97619	2317	" " (") Spring
337 (804)	2084	" " (") " Screw
97931	2476	" " (back)
97927	—	" " (") 97931 with 236(805) and 97928
97928	2474	" " (") Extension
236 (805)	2475	" " (") " Screw
180 (806)	2078	" " (") Screw (2)
†97843	2472	Face Plate
109279(806)	158(807)	2084 1/2/20 " Screw (front)
120 (806)	2084	" " " (back)
120 (806)	2084	" " " (upper)
97622	1849	" " " Thread Guard

† when ordering state colour required.

Part No.	Plate	Description
190 (804)	2084	Face Plate Thread Guard Screw ...
98484	2081	" " " " Thread Retainer ...
97709	2478	Feed Bar ...
97710	2076	" " Lifting Link ...
1278 (803)	2078	" " " " Hinge Screw (2) ...
1620 (803)	2078	" " " " " " Nut (2) ...
313 (803)	2084	" " Screw Centre (2) ...
1519 (803)	2078	" " " " Nut (2) ...
97932	2474	Feed Dog ...
109050 (803)	2077	" " Screw (2) ...
97711	2317	" Eccentric ...
97712	2317	" " Adjusting Disc ...
97628	2317	" " " Flange ...
97629	2478	" " " " Coupling with five 50083 (803)
50083 (803)	2078	" " " " " " Screw ...
213655	1849	" " Friction Spring Washer ...
109513 (805)	2077	" " " " " " Screw ...
1521 (805)	2078	" " " " " " Nut ...
109514 (805)	2077	" " Fulcrum Screw ...
1521 (805)	2078	" " " " " " Nut ...
97713	2080	" Lifting Eccentric with two 446(803) ...
446 (803)	2084	" " " " Set Screw ...
97714	2075	" " Rock Shaft ...
97634	1849	" " " " Bushing (front) ...
46224	1851	" " " " " (") Oiler ...
436 (803)	2078	" " " " " (") Set Screw ...
97635	1849	" " " " " (back) ...
97830	2073	" " " " " (") Oiler ...
436 (803)	2078	" " " " " (") Set Screw ...
97715	1844	" " " " " Connecting Rod with 97716 and two 1186(805)
†97716	—	" " " " " " Cap ...
1186 (805)	2078	" " " " " " " Screw ...
109534 (803)	2077	" " " " " " Hinge Screw ...
1608 (803)	2078	" " " " " " " " " " Nut
97717	2076	" " " " " Crank with two 1186(803) ...
1186 (803)	2078	" " " " " " Clamping Screw ...
166 (804)	2078	" " " " " End Screw ...
213161	2080	" Regulating Lever with 213657 ...
109506 (803)	2077	" " " " Hinge Screw ...
97771	1851	" " " " Spring ...
213657	2080	" " " " Pin ...

Part No.	Plate	Description
97636	2075	Feed Rock Shaft ...
97637	1849	" " " Bushing (front) ...
46224	1851	" " " " (") Oiler ...
109519 (803)	2077	" " " " (") Set Screw ...
97638	1849	" " " " (back) ...
97830	2073	" " " " (") Oiler ...
109519 (803)	2077	" " " " (") Set Screw ...
97718	1844	" " " " Connecting Rod with 97716 and two 1186(805)
†97716	—	" " " " " " Cap ...
1186 (805)	2078	" " " " " " " Screw ...
97719	2076	" " " " " " Crank with two 1186(803)
1186 (803)	2078	" " " " " " Clamping Screw ...
109534 (803)	2077	" " " " " " Hinge Screw ...
1608 (803)	2078	" " " " " " " Nut ...
166 (804)	2078	" " " " " End Screw ...
97933	2473	Knife ($\frac{9}{16}$ ") ...
97846	2472	" Bar ...
97847	2472	" " Crank with 97848 ...
109625 (803)	2475	" " " Screw Stud ...
1623 (803)	2475	" " " " " Nut ...
8734	2474	" " " Spring ...
97848	—	" " " " Hook ...
97952	2473	" " Draw-up Spring ...
161 (805)	2475	" " " " " Screw ...
43718	2473	" " " " " Washer ...
97850	2473	" " Driving Arm with 453(803) ...
97735	2072	" " " " Eccentric Connection ...
97851	2473	" " " " " " Crank with 453(803)
2117	2082	" " " " " " Pin ...
453 (803)	2084	" " " " " " Set Screw
109534 (803)	2475	" " " " " " Hinge Screw
1608 (803)	2475	" " " " " " " " " " Screw Nut
2117	2082	" " " " " Pin ...
453 (803)	2084	" " " " " Set Screw ...
97852	2473	" " " " " Shaft ...
97853	2472	" " " " " " Bracket with 2269 and 97848
50307 (804)	2084	" " " " " " " Screw ...

Part No.	Plate	Description
97854	—	Knife Bar Driving Arm Shaft Bracket , complete, Nos. 161(805), 804(803), 1623(803), 8734, 43718, 97847, 97850 to 97853, 97856, 97952, 109625(803) and two 2117
97855	2473	Knife Bar Handle
201 (804)	2084	" " " Screw (2)
97856	2473	" " Releasing Lever
804 (803)	2475	" " " " Hinge Screw
2269	2402	" " " " Stop Pin
98649	2473	Knife Holder (hinged)
98650	2473	" " Carrier with 904(803)
207 (806)	2084	" " " Screw (2)
91670	2473	" " Gland
190 (803)	2084	" " " Screw (2)
98651	2473	" " Hinge Stud
904 (803)	2475	" " " " Set Screw
98652	2473	" " Spring
190 (803)	2084	" " " Regulating Screw
98653	2473	" " Stop Plate
187 (803)	2475	" " " " Screw
98654	—	" " complete, Nos. 187(803), 190(803) and 98649 to 98653
889 (803)	2084	Machine Hinge Connection Set Screw (2)
103113	2079	Machine Pulley , "V" belt groove (diam. of belt groove 4 $\frac{1}{4}$ ") with two 434(803)
97791	2075	" " 5 $\frac{1}{2}$ " pulley (9" diam.), with two 434(803), for Foot Power
97835	—	" " (two speed) with two 434(803)
434 (803)	2084	" " Set Screw
<i>NOTE.—No. 103113 is sent with this machine unless otherwise specified on order, but Bobbin Winder No. 97945 must be used with Machine Pulley No. 97791.</i>		
Catalogue 5011	—	Needle , size 25 (216 × 1)
97934	2472	Needle Bar (hollow)
97645	1849	" " Bushing (lower)
889 (803)	2084	" " " (") Set Screw
97646	2317	" " " (upper)
109509 (805)	2077	" " " (") Cap Screw
46224	1851	" " " (") Oiler
889 (803)	2084	" " " (") Set Screw
97648	2082	" " Connecting Link
97858	2474	" " " " Stud with two 109512(803)
109512 (803)	2077	" " " " Clamping Screw

Part No.	Plate	Description	
97650	2082	Needle Bar Connecting Link Stud Slide Block	
97727	2072	" " Crank	
97859	—	" " " 97727 with 2022, 97860, 109320(803) and 109370(803)	
97860	2474	" " " Eccentric	
2022	2082	" " " " Position Pin	
109370 (803)	2077	" " " Position Screw	
109320 (803)	2077	" " " Set Screw	
196 (806)	2475	" " Needle Clamping Screw	
97861	2472	Presser Bar	
97862	2476	" " Guide Bracket with two 200-803	
200 (803)	2475	" " " " Set Screw	
82429	2478	" " Lifter	
109186 (806)	2077	" " " Screw	
1518 (803)	2078	" " " " Nut	
97656	2080	" " Lifting and Releasing Lever Bracket	
103066	2474	" " Spring	
97935	—	Presser Foot Bracket	
1423 (803)	2475	" " " End Screw	
97936	—	" " Plate	
97937	—	" " Shank	
97938	2476	" " (hinged) complete, Nos. 97935 to 97937 and two 1423(803)	
109329 (806)	2077	" " Screw	
1547 (803)	2078	" " " Nut	
252 (805)	2084	Pressure Regulating Thumb Screw	
103019	2320	Rotating Hook with 103016, 103021 and three 50383(805),	
103020	—	" " 103019 with 103006 <i>No. Canceled 10/12</i>	
103123	—	" " 103019 with 103119	
103021	2320	" " Base with three 109522(803)	
97949	2402	" " Bobbin	
✦103004	2290	" " " Case	
103090	—	" " " 103004 with 103007 to 103010	
<i>No. Canceled 10/12</i>	103005	2290	" " " 103090 with 662(804), 768(806), 1443(806) and 103013 to 103015
<i>No. Canceled 10/12</i>	103006	—	" " " 103005 with 97949
103118	—	" " " 103090 with 662(804), 768(806), 1443(806), 103014, 103015 and 103115	
103119	—	" " " 103118 with 97949	
103007	2290	" " " Bobbin Retainer	

Part No.	Plate	Description					
103008	2290	Rotating Hook	Bobbin	Case	Bobbin	Retainer	Hinge Pin
103009	2290	"	"	"	"	"	Spring ...
103010	2290	"	"	"	"	"	"
							Plunger
97837	2320	"	"	"	"	Position	Bracket ...
109329 (805)	2077	"	"	"	"	"	Screw ...
98419	2076	"	"	"	"	Retainer	...
97819	2089	"	"	"	"	Bracket with	...
						889(803)	
50307 (804)	2084	"	"	"	"	"	Screw ...
98422	2076	"	"	"	"	Hinge Stud	...
889 (803)	2084	"	"	"	"	"	Set Screw
98421	2076	"	"	"	"	Position	Spring ...
792 (805)	2084	"	"	"	"	"	Screw
98423	2320	"	"	"	"	Spring with	98468
†98468	—	"	"	"	"	Pad	...
201 (806)	2084	"	"	"	"	"	Screw ...
103013	2290	"	"	"	"	Ring (Nylon) (only supplied when specified on order)	
103115	—	"	"	"	"	(Steel)	...
103014	2290	"	"	"	"	Spring	...
1443 (806)	2320	"	"	"	"	"	Screw ...
103015	2290	"	"	"	"	Tension Spring	...
768 (806)	2320	"	"	"	"	Adjusting	Screw
662 (804)	2084	"	"	"	"	"	Screw ...
103016	2290	"	"	Ring
50383 (805)	2320	"	"	"	Screw
109522 (803)	2077	"	"	Screw
97676	2478	"	"	Shaft
97677	1849	"	"	"	Bushing (back)
97678	1966	"	"	"	(") Oil Pad
436 (803)	2078	"	"	"	(") Set Screw
97679	1849	"	"	"	(front)
97678	1966	"	"	"	(") Oil Pad
109510 (803)	2077	"	"	"	(") Set Screw
97824	2080	"	"	"	Collar with two 1258(803)
1258 (803)	2084	"	"	"	Set Screw
97808	2080	"	"	"	Gear with 109580(806) and two 109581(803)
97680	2478	"	"	"	Case (two pieces) with 121(805) and 50234(804)
50234 (804)	2078	"	"	"	Plug Screw

No. Canceled 10/12

Part No.	Plate	Description					
121 (805)	2084	Rotating Hook	Shaft	Gear	Case	Screw	...
109580 (806)	2077	"	"	"	"	Position	Screw ...
109581 (803)	2077	"	"	"	"	Set	Screw ...
97804	2320	Slack Thread Regulator
97805	2320	"	"	"	"	97804 with 97690 and 109515(804)	...
97690	1966	"	"	"	"	Bushing	...
109515 (804)	2077	"	"	"	"	Clamping	Screw ...
190 (804)	2084	"	"	"	"	Screw (2)	...
2102	1966	Tension Disc (2)
97866	2474	"	Spring
97867	2474	"	Stud
97868	2474	"	"	Presser Plate (hinged)
837 (803)	2475	"	"	"	"	Adjusting	Screw ...
1592 (803)	2475	"	"	"	"	"	Nut ...
97869	2472	"	"	"	"	Arm with 97872	...
97870	2474	"	"	"	"	Adjusting	Lever ...
109627 (805)	2475	"	"	"	"	"	Thumb Screw
97871	2474	"	"	"	"	Bracket with 177(803)	...
177 (803)	2475	"	"	"	"	"	Set Screw ...
97872	—	"	"	"	"	Pin	...
109626 (808)	2475	"	"	"	"	Hinge	Screw ...
1718 (805)	2475	"	"	"	"	"	Nut ...
97873	—	Tension Stud	Presser Plate (automatic, varying) complete, Nos. 837(803), 1592(803), 1718(805), 97868 to 97871, 109626(808) and 109627(805)
95024	2084	Tension Thread Eyelet
109050 (806)	2077	"	"	"	"	Screw	...
97756	2082	Thread Guard (side of arm)
1143 (803)	2078	"	"	Set Screw
82448	2474	"	Roller
109628 (804)	2475	"	"	Screw Stud
97874	2474	"	"	Thread Guide
212 (805)	2475	"	"	"	"	Screw	...
97875	—	Thread Roller and Thread Take-up Spring , complete, Nos. 212(805), 82448, 82525, 97696, 97698, 97798, 97874 and 109628(804)
97687	1849	Thread Take-up Crank
109484 (805)	2077	"	"	"	Cap Screw
97688	1966	"	"	"	Cotter Pin

From the library of: Diamond Tool & Die Corp.

PARTS FOR MACHINE No. 132K12

Part No.	Plate	Description
690 (803)	2084	Thread Take-up Crank Cotter Pin Screw
97689	1966	" " Lever
97690	1966	" " " Bushing
109515 (804)	2077	" " " " Clamping Screw
97691	1966	" " " Hinge Pin
97692	1966	" " " Link
97693	2082	" " " " Hinge Pin
457 (805)	2084	" " " " " End Screw
430 (830)	2084	" " " " " Set Screw
97694	—	" " " complete, Nos. 457(805), 97689 to 97693 and 109515(804)
82525	1849	" " Spring
97696	1849	" " " Adjusting Sleeve
97798	2082	" " " Lever
97698	2080	" " " Regulator
443 (803)	2084	" " " " Set Screw
97939	2476	Throat Plate Body
97940	2476	" " Cutting Bar ($\frac{3}{8}$")
237 (806)	2475	" " " " Screw
97941	—	" " complete, Nos. 97939, 97940 and two 237(806)
180 (806)	2078	" " Screw (2)
97834	—	Drip Pan with six wood screws $\frac{1}{2}$" No. 5

Accessories

Part No.	Plate	Description
84118	2076	Machine Button with 84151 and wood screw 1 1/2" No. 9 R.H.B.
84151	---	" " Washer (leather)
87520	---	Machine Rest Pin (for U.S.A. and Canada only)
Catalogue 5020	---	Needles, six size 30 (216 x 3) for 132K8 and 132K9 Machines
120342	1600	Oiler
97949	2402	Rotating Hook Bobbin (2)
86611	1600	Screw Driver (large)
161295	---	" " (small)

From the library of Diana and Neelie Corp

Bobbin Winders

BOBBIN WINDER

(Swinging Automatic, Left Hand)

Part No.	Plate	Description
†41894	2401	Base with 449(803) ...
894 (804)	2084	" Screw ...
2362	2402	Bobbin Position Pin ...
†41896	2402	Frame ...
41441	2402	" Hinge Pin ...
449 (803)	2084	" " " Set Screw ...
125044	2081	" Oil Pad ...
41897	2402	" Spring ...
†43270	2401	Friction Pulley with 43271, two 448(803) and ten 26070 ...
43271	2401	" " Ring (leather) ...
26070	---	" " Rivet (brass) ...
448 (803)	2084	" " Set Screw ...
97942	2402	Spindle with 2362 ...
†97748	2402	Stop Latch ...
41446	2402	" " Hinge Pin ...
2269	2402	" " Pin ...
†97749	2401	Support Bracket ...
346 (805)	2084	" " Screw ...
†97774	2401	Tension Bracket ...
50073 (804)	2078	" " Screw ...
2102	1966	" Disc ...
109521 (803)	2077	" Screw Stud ...
889 (803)	2084	" " " Set Screw ...
1560 (804)	2078	" " " Thumb Nut ...
2103	1851	" Spring ...
97826	2081	" Thread Guard ...
889 (803)	2084	" " " Set Screw ...
†97776	---	Tension, complete, Nos. 1560(804), 2103, 97774, 97826, 109521(803), two each 889(803) and 2102 ...
41899	2402	Tripping Arm with 176(804) ...
176 (804)	2084	" " Clamping Screw ...
97750	2402	" " Spring ...
†97944	2401	Bobbin Winder, complete, Nos. 346(805), 2269, 41441, 41446, 41894, 41896, 41897, 41899, 43270, 97748 to 97750, 97776, 97942, 125044, two 50073(804) and three 894(804) ...

† when ordering state colour required.

BOBBIN WINDER

(Swinging Automatic, Left Hand)

For machines when fitted with Machine Pulley No. 97791
for Foot Power.

This is the same as Bobbin Winder No. 97944 with the following exceptions:—

Part No.	Plate	Description
†97792	2491	Support Bracket ...
†97945	---	Bobbin Winder, complete, Nos. 346(805), 2269, 41441, 41446, 41894, 41896, 41897, 41899, 43270, 97748, 97750, 97776, 97792, 97942, 125044, two 50073(804) and three 894(804) ...

BOBBIN WINDER (Universal)

(Swinging Automatic, Right Hand)

Supplied only when specified on order.

Part No.	Plate	Description
2362	2402	Bobbin Position Pin ...
†225453	2435	Frame with 202277 and 259660 ...
225454	2435	" Hinge Pin ...
202277	---	" Oil Packing (wick) ...
259660	2435	" " Well Washer ...
225455	2435	" Spring ...
225456	2435	" " Plunger ...
†202473	2434	Pulley with 200380(803) ...
200380 (803)	2435	" Set Screw ...
97943	2402	Spindle with 2362 ...
97921	2435	Stop Latch ...
200056 (805)	2435	" " Screw ...
225458	2435	" " Thumb Lever ...
225459	2435	" " " Hinge Stud ...
225459	2435	" " " Joint Stud ...
202478	2435	" " Trip Lever ...
200299 (808)	2435	" " " Hinge Screw ...
225461	2315	Tension Bracket with 201499(802) ...
200082 (804)	2315	" " Screw ...
228026	2435	" " Washer ...

† when ordering state colour required.

Part No.	Plate	Description
2102	1966	Tension Disc
13710	2315	" Spring
201499 (802)	2315	" Stud
201572 (802)	2315	" " Thumb Nut
225462	—	Tension Bracket, complete, Nos. 13710, 201572(802), 225461 and two 2102
†225433	2434	Bobbin Winder and Tension Bracket Base
†07948	2434	Bobbin Winder (Universal) , complete, Nos. 97921, 97943, 200056(805), 200082(804), 200299(808), 202473, 202478, 225433, 225453 to 225456, 225458, 225462, 228026, two each 225459 and wood screws $\frac{1}{4}$ " No. 12 R.H.B.

BOBBIN WINDER (Universal)

(Swinging Automatic, Right Hand) for 'V' Belt Drive

Supplied only when specified on order.

This is the same as Bobbin Winder 97948 with the following exceptions:—

Part No.	Plate	Description
†104196	—	Pulley with 200380(803)
†97953	—	Bobbin Winder (Universal), complete, Nos. 97921, 97943, 104196, 200056(805), 200082(804), 200299(808), 202478, 225433, 225453 to 225456, 225458, 225462, 228026, two each 225459 and wood screws $\frac{1}{4}$ " No. 12 R.H.B.

† when ordering state colour required.

Foot Lifters

Supplied only when specified on order.

FOOT LIFTER

For Machines 132K6 and 132K9.

Part No.	Plate	Description
91296	2075	Foot Lever
91299	2075	" " 91296 with 91297, 91298 and three wood screws $\frac{1}{4}$ " No. 15
91297	2075	" " Bracket
91298	2318	" " " Hinge Pin
		" " " Screw (wood) $\frac{1}{4}$ " No. 15
97785		" " Chain, 34" long, with 39575, 39576 and 56864
39576	2081	" " " Hook (upper)
39575	2081	" " " " (centre)
56864	2081	" " " " (lower)
97801		Foot Lever, complete, Nos. 91299 and 97785
†97787	2079	Lifting Lever with 448(803)
97788	2075	" " Connecting Rod
12416	1851	" " " " Joint
76 (804)	2084	" " " " " Hinge Screw
1521 (805)	2078	" " " " " Lock Nut
694 (804)	2084	" " Hinge Screw
97768	2073	" " Link
100 (804)	2084	" " " Hinge Screw
97723	2089	" " Pin
448 (803)	2084	" " " Set Screw
97767	2089	" " Spring
1226 (804)	2078	" " " Screw
97790	—	Foot Lifter , complete, Nos. 76(804), 100(804), 694(804), 1226(804), 1521(805), 12416, 97723, 97767, 97768, 97787, 97788 and 97801

FOOT LIFTER

For Machines 132K7, 132K8, 132K10 and 132K12.

This is the same as No. 97790, less 1226-804, and with the following exceptions:—

Part No.	Plate	Description
97722	2089	Lifting Lever Link
97789	—	Foot Lifter , complete, Nos. 76(804), 100(804), 694(804), 1521(805), 12416, 97722, 97723, 97767, 97787, 97788 and 97801

† when ordering state colour required.

Knee Lifters

Supplied only when specified on order.

Part No.	Plate	Description
97831	2321	Bell Crank
729 (803)	2320	" " Hinge Screw
†97787	2079	Lifting Lever with 448(803)
97788	2075	" " Connecting Rod
12416	1851	" " " " Joint
76 (804)	2084	" " " " Hinge Screw
1521 (805)	2078	" " " " Lock Nut
694 (804)	2084	" " Hinge Screw
97768	2073	" " Link for 97833
97722	2089	" " " " 97836
100 (804)	2084	" " " Hinge Screw
97723	2089	" " Pin
448 (803)	2084	" " " Set Screw
97767	2089	" " Spring
1226 (804)	2078	" " " Screw
5772	2319	Rock Shaft
97502	2319	" " Bracket
—	—	" " " Screw (wood) 1" No. 10
2765	2319	" " Knee Arm with 1507(805)
2768	—	" " " " 2765 with 2766 and 2767
2766	2319	" " " " Hub with 356(803)
356 (803)	2320	" " " " Set Screw
2767	2319	" " " Plate with 356(803)
1507 (805)	—	" " " " Arm Bracket Position Nut
356 (803)	2320	" " " " Set Screw
6337	2319	" " Lifting Bracket with two 356(803)
2778	2319	" " " " Hook
356 (803)	2320	" " " " Set Screw
356 (803)	2320	" " " " Set Screw
2770	2319	" " Stop Dog with 356(803)
356 (803)	2320	" " " " Set Screw
97832	2319	Rock Shaft, complete, Nos. 2768, 2770, 2778, 5772, 6337, two 97502 and four wood screws 1" No. 10
97833	—	Knee Lifter, complete, Nos. 76(804), 100(804), 694(804), 729(803), 1226(804), 1521(805), 12416, 97723, 97767, 97768, 97787, 97788, 97831 and 97832, for 132K6 and 132K9 Machines
97836	—	Knee Lifter, complete, Nos. 76(804), 100(804), 694(804), 729(803), 1226(804), 1521(805), 12416, 97722, 97723, 97767, 97787, 97788, 97831 and 97832, for 132K7, 132K8, 132K10 and 132K12 Machines

† when ordering state colour required.

Thread Unwinder

FOR TWO SPOOLS OF THREAD

Part No.	Plate	Description
27623	1855	Spool Pin
†98489	—	" Rest
98490	1855	" " 98489 with 1149(803) and two 27623
225388	1855	" " Rod
200383 (803)	2078	" " " Set Screw
1149 (803)	2078	" " " Set Screw
†202490	1855	" Stand with 200383(803)
98491	1855	Thread Guide with 208(805)
208 (805)	2084	" " Set Screw
—	—	Screw (wood) ¾" No. 12 (for fixing to table)
†98492	1855	Thread Unwinder, complete, Nos. 98490, 98491, 202490, 225388 and three wood screws ¾" No. 13

† when ordering state colour required.