

SINGER
236W130

LIST OF PARTS COMPLETE

FOR

MACHINE NO. 236w130

HIGH SPEED, SINGLE NEEDLE, LOCK STITCH, ROUNDED TOP POST,
OBLIQUE UNDER EDGE TRIMMER MACHINE.

FEED WHEEL (BALL BEARING) AND BELT DRIVEN ROLLER PRESSER
FOR SIMULTANEOUSLY STITCHING EDGES AND UNDER TRIMMING
LININGS OF SHOES, SANDALS, SLIPPERS ETC.

MACHINE HAS ROUNDED TOP HOOK POST, FEED POST, SLIDE COVER
AND THROAT PLATE TO FACILITATE STITCHING OPERATIONS ON SHOES.

HOOK TIMING, HOOK POST AND FEED POST ARE ADJUSTABLE FROM
TOP OF BED.

VERTICAL AXIS HOOK WITH METERED LUBRICATION AND
IMPROVED MECHANICAL OPENER.

HOOK DRIVING GEARS AND FEED CLUTCH OPERATED IN OIL BATH.

OIL RESERVOIR IN THE BED FROM WHICH THE HOOK AND
HOOK DRIVING MECHANISM ARE AUTOMATICALLY LUBRICATED.

INTERMITTENT FEED WHEEL (BALL BEARING) ADJUSTABLE FOR WEAR, AND BELT
DRIVEN ROLLER PRESSER, BOTH DRIVEN BY "HORTON" TYPE CLUTCH.

OBLIQUE UNDER TRIMMER OPERATED BY MOTOR DRIVEN MECHANISM.
TRIMMER SPEED IS CONSTANT AND INDEPENDENT OF MACHINE SPEED.

KNIFE MAY BE THROWN INTO OR OUT OF ACTION WITHOUT
STOPPING MACHINE OR MOTOR.

ORDERS MUST SPECIFY NUMBER OF MOTOR REQUIRED
SO CORRECT VOLTAGE, CYCLES AND CONTROL BOX CAN BE
FURNISHED.

MACHINE NO. 236w130

*263601 Arm
263402 Arm Base
204235 Arm Base Position Pin (2)
200004E Arm Base Screw (3)
202005 Arm Base Screw Washer (3)
263648 Arm Cover (front) (Motor Vent)
200576X Arm Cover (front) Screw (2)
263405 Arm End Cover
200001C Arm End Cover Screw (2)
204235 Arm Position Pin (2)
200004E Arm Screw (3)
202005 Arm Screw Washer (3)
*263406 Arm Shaft
263573 Arm Shaft 263406 with 200333C, 200362C, 200382ALX and
263493
272142 Arm Shaft Ball Bearing (back)
263640 Arm Shaft Bushing (front) with 203100
203100 Arm Shaft Bushing (front) Oil Packing (wick)
200338C Arm Shaft Bushing (front) Set Screw
263409 Arm Shaft Connection Belt (reinforced neoprene)
263410 Arm Shaft Connection Belt Pulley with 200363ALX, 350492C and
two 214206
350492C Arm Shaft Connection Belt Pulley Position Screw
200363ALX Arm Shaft Connection Belt Pulley Position Screw Check Screw
200363ALX Arm Shaft Connection Belt Pulley Set Screw
214206 Arm Shaft Connection Belt Pulley Spring Flange
263412 Arm Top Cover

MACHINE NO. 236wl30

263590 Arm Top Cover Oil Tube with 170168
170168 Arm Top Cover Oil Tube Oil Metering Insert
200194F Arm Top Cover Screw (3)
*263413 Bed
263414 Bed Cover (bottom) with 350777X, 263459 and 267093
263415 Bed Cover (bottom) Gasket
350777X Bed Cover (bottom) Oil Screw Plug
200040E Bed Cover (bottom) Screw (10)
272154 Bed Cover (bottom) Screw Washer (fibre) (10)
263417 Bed Leg (3)
233939 Bobbin
235769 Bobbin Case Base with 202056, 203211 to 203213 and 203216
203211 Bobbin Case Base Latch
*202056 Bobbin Case Base Latch Pin
203212 Bobbin Case Base Latch Plunger
203213 Bobbin Case Base Latch Spring
241676 Bobbin Case Cap with 200594E, 200984C, 235771, 241674,
241675 and two 350405C
263826 Bobbin Case Lever
*203476 Bobbin Case Lever Eccentric
204243 Bobbin Case Lever Eccentric Position Pin
203478 Bobbin Case Lever Slide Stud
263421 Bobbin Case Lever Slide Stud Base (adjustable)
263582 Bobbin Case Lever Slide Stud Base Position Pin
140862AL Bobbin Case Lever Slide Stud Base Set Screw
241674 Bobbin Case Oiling Felt

MACHINE NO. 236w130

241675 Bobbin Case Oiling Felt Retainer
350405C Bobbin Case Oiling Felt Retainer Screw
235771 Bobbin Case Tension Spring
200984C Bobbin Case Tension Spring Regulating Screw
200594E Bobbin Case Tension Spring Screw
203216 Bobbin Case Washer (cloth)
241677 Bobbin Case complete, Nos. 235769 and 241676
248894 Bracket (underedge)
248895 Bracket (underedge) 248894 with 200077D, 200888, 201142C,
204411 and three 248896
263603 Bracket (underedge) complete, Nos. 200094F, 200577AL,
200904D, 202603, 204233, 204361, 204365, 241633, 248880 to
248882, 248895, 263608, 263610, 263612, 263633, 267263,
350302F and two 200028D
350614X Bracket (underedge) Screw (2)
144262 Feed Clutch (brake)
263578 Feed Clutch (brake) 144262 with three 263574
1255C Feed Clutch (brake) Screw (3)
263424 Feed Clutch (brake) Supporting Plate
200911X Feed Clutch (brake) Supporting Plate Screw (3)
263422 Feed Clutch (drive)
263423 Feed Clutch (drive) 263422 with three 263574
144261 Feed Clutch (drive) Washer
131717 Feed Clutch Roller
68152 Feed Clutch Roller Plunger
131718 Feed Clutch Roller Spring
263579 Feed Clutch Sleeve with two 140409AL
140409AL Feed Clutch Sleeve Set Screw

MACHINE NO. 236w130

263591 Feed Clutch Thrust Washer

263574 Feed Clutch Wear Plate

263425 Feed Clutch complete, Nos. 144261, 263423, 263458, 263578,
263579, 263591, six each 68152, 131717 and 131718

263426 Feed Driving Connection with four 200274E

200274E Feed Driving Connection Cap Screw

263427 Feed Driving Connection Tension Spring

263428 Feed Driving Crank with 350175E

140300C Feed Driving Crank Ball Screw

201616E Feed Driving Crank Ball Screw Nut

350175E Feed Driving Crank Pinch Screw

231836 Feed Driving Crank Thrust Washer

263429 Feed Driving Eccentric with 215057

263430 Feed Driving Eccentric Adjusting Eccentric

263431 Feed Driving Eccentric Adjusting Eccentric Latch with 200351C

263432 Feed Driving Eccentric Adjusting Eccentric Latch Hinge Pin

200605C Feed Driving Eccentric Adjusting Eccentric Latch Hinge Pin
Position Screw

263433 Feed Driving Eccentric Adjusting Eccentric Latch Operating
Lever with 200394C

200394C Feed Driving Eccentric Adjusting Eccentric Latch Operating
Lever Set Screw

263434 Feed Driving Eccentric Adjusting Eccentric Latch Operating
Lever Spring

200351C Feed Driving Eccentric Adjusting Eccentric Latch Set Screw

215057 Feed Driving Eccentric Adjusting Eccentric Pin

263435 Feed Driving Eccentric Adjusting Eccentric Spring

263436 Feed Driving Eccentric Adjusting Eccentric Spring Adjusting
Collar with two 200394C

MACHINE NO. 236w130

200394 Feed Driving Eccentric Adjusting Eccentric Spring Adjusting Collar Set Screw

263567 Feed Driving Eccentric Friction Plate

350548C Feed Driving Eccentric Friction Plate Adjusting Screw

350477C Feed Driving Eccentric Friction Plate Adjusting Screw Set Screw

263437 Feed Driving Flange with 200333C, 200346C, 263567, two each 350477C and 350548C

200333C Feed Driving Flange Position Screw

200346C Feed Driving Flange Set Screw

263847 Feed Post with 448ALX and two 140321AL

263870 Feed Post 263847 with 249019, 249092, 263453, 263460, 263461, 263607, 263692, 263829, 263849, 350411C and two 237D

263440 Feed Post Adjusting Eccentric Stud with 263441

263441 Feed Post Adjusting Eccentric Stud Retaining Ring

263801 Feed Post Base Cover

200181X Feed Post Base Cover Screw

263829 Feed Post Cover (side)

237D Feed Post Cover (side) Screw

201110X Feed Post Screw (2)

263804 Feed and Hook Post Base Cover Support (back)

263803 Feed and Hook Post Base Cover Support (front)

50559X Feed and Hook Post Base Cover Support Screw (2)

263830 Feed and Hook Post Cover (back)

263845 Feed and Hook Post Cover (front)

141672F Feed and Hook Post Cover (back or front) Clamp screw (6)

51023B Feed and Hook Post Cover (back or front) Screw (8)

263832 Feed and Hook Post Cover Gasket (back or front) (vellumoid) (2)

MACHINE NO. 236w130

263812 Feed and Hook Post Gasket (bottom) (velluroid)
263592 Feed and Hook Post Screw Washer (fibre) (4)
263605 Feed Wheel
263607 Feed Wheel 263605 with 263450 to 263452, three 200587D
and sixty 206417
249092 Feed Wheel Adjusting Stud (eccentric)
140321AL Feed Wheel Adjusting Stud Set Screw
206417 Feed Wheel Ball, 1/16 in. diameter
263450 Feed Wheel Ball Cone (inside)
263451 Feed Wheel Ball Cone (outside)
263452 Feed Wheel Bevel Gear
263453 Feed Wheel Bevel Gear Driving Pinion
*263454 Feed Wheel Bevel Gear Driving Pinion Coupling (lower)
with two 200382ALX
*263455 Feed Wheel Bevel Gear Driving Pinion Coupling (upper)
with two 200382ALX
*263456 Feed Wheel Bevel Gear Driving Pinion Coupling Ball Connection
with two 201052ALX
200133C Feed Wheel Bevel Gear Driving Pinion Coupling Ball Connection
Retaining Screw
263457 Feed Wheel Bevel Gear Driving Pinion Coupling Ball Connection
Stud
201052ALX Feed Wheel Bevel Gear Driving Pinion Coupling Ball Connection
Stud Set Screw
200382ALX Feed Wheel Bevel Gear Driving Pinion Coupling Set Screw
263692 Feed Wheel Bevel Gear Driving Pinion Coupling complete,
Nos. 200133C, 263454 to 263456 and two 263457
263458 Feed Wheel Bevel Gear Driving Pinion Shaft (lower)
267093 Feed Wheel Bevel Gear Driving Pinion Shaft (lower) Needle
Bearing

MACHINE NO. 236w130

263459	Feed Wheel Bevel Gear Driving Pinion Shaft (lower) Needle Bearing Oil Seal
200587D	Feed Wheel Bevel Gear Screw
263460	Feed Wheel Bracket with 200041C
263461	Feed Wheel Bracket Extension
448ALX	Feed Wheel Bracket Extension Set Screw
249019	Feed Wheel Bracket Friction Plug
140321AL	Feed Wheel Bracket Friction Plug Set Screw
200041C	Feed Wheel Bracket Pinch Screw
350411C	Feed Wheel Cap Screw
248878	Guide Finger
Note:	Guide Finger 248878 is furnished with this machine unless otherwise specified on order
248879	Guide Finger with projection to guard knife
248880	Guide Finger Bracket with 1724E and 201217D
350302F	Guide Finger Bracket Screw
248881	Guide Finger Clamp Bar
248896	Guide Finger Clamp Bar Bushing
201142C	Guide Finger Clamp Bar Bushing Set Screw
204361	Guide Finger Clamp Bar Latch
200802E	Guide Finger Clamp Bar Latch Hinge Screw
204230	Guide Finger Clamp Bar Latch Spring
204233	Guide Finger Clamp Bar Latch Spring 204230 with 200802E
241625	Guide Finger Clamp Bar Position Guide with 36737, 200078X, 200387C and 204389
200078X	Guide Finger Clamp Bar Position Guide Pinch Screw
200387C	Guide Finger Clamp Bar Position Guide Set Screw
248882	Guide Finger Clamp Bar Position Guide Slide with 1724E and 201217D

MACHINE NO. 236w130

200577AL Guide Finger Clamp Bar Position Guide Slide Screw
241633 Guide Finger Clamp Bar Position Guide complete, Nos.
241625 and 241626
204365 Guide Finger Clamp Bar Spring
201217D Guide Finger Clamp Bar Stop Adjusting Screw
1724E Guide Finger Clamp Bar Stop Adjusting Screw Thumb Nut
241626 Guide Finger Disengaging Lever
36737 Guide Finger Disengaging Lever Friction Ball, 1/8 in. diam.
204389 Guide Finger Disengaging Lever Friction Ball Spring
200904D Guide Finger Screw
*263462 Hook (sewing)
263463 Hook 263462 with 201253F, 201376C, 241604, 263563 and two
201409F
263464 Hook and Bobbin Case complete, Nos. 241677 and 263463
263465 Hook and Feed Driving Shaft
276045 Hook and Feed Driving Shaft Bushing (back) with 276046
276046 Hook and Feed Driving Shaft Bushing (back) Oil Packing (wick)
200958C Hook and Feed Driving Shaft Bushing (back) Set Screw
263467 Hook and Feed Driving Shaft Bushing (front) with 272115
272115 Hook and Feed Driving Shaft Bushing (front) Oil Packing (wick)
200958C Hook and Feed Driving Shaft Bushing (front) Set Screw
263468 Hook and Feed Driving Shaft Connection Belt Pulley with
201254C, 201421C, 214206 and 228842
228842 Hook and Feed Driving Shaft Connection Belt Pulley Needle
Bearing
263569 Hook and Feed Driving Shaft Connection Belt Pulley Needle
Bearing Sleeve

MACHINE NO. 236w130

201007C Hook and Feed Driving Shaft Connection Belt Pulley
Needle Bearing Sleeve Set Screw

201254C Hook and Feed Driving Shaft Connection Belt Pulley
Position Screw

201421C Hook and Feed Driving Shaft Connection Belt Pulley Set Screw

214206 Hook and Feed Driving Shaft Connection Belt Pulley Spring
Flange

263469 Hook and Feed Driving Shaft Thrust and Timing Collar with
200378C

200378C Hook and Feed Driving Shaft Thrust and Timing Collar Set
Screw

263470 Hook Driving Gear (spiral) with two 797C

263471 Hook Driving Gear (spiral) Retaining Ring

797C Hook Driving Gear (spiral) Set Screw

263472 Hook Driving Gear (spiral) Sleeve with 200378C and 201220ALX

201220ALX Hook Driving Gear (spiral) Sleeve Position Screw

200378C Hook Driving Gear (spiral) Sleeve Set Screw

265522 Hook Driving Pinion with two 200382ALX

200382ALX Hook Driving Pinion Set Screw

241604 Hook Gib

201376C Hook Gib Hinge Screw

201253F Hook Gib Screw

263563 Hook Needle Guard

201409F Hook Needle Guard Screw

141580ALX Hook Oil Regulating Screw

234426 Hook Oil Regulating Spring

263833 Hook Post with two 263582

MACHINE NO. 236w130

263834 Hook Post 263833 with 202X, 212D, 141580ALX, 200121E,
203478, 234426, 263421, 263464, 263476, 263478 to 263482,
263568, 263593, 263594, 263826, 265522, 350611X, two each
1448AL and 140862AL

263440 Hook Post Adjusting Eccentric Stud with 263441

263441 Hook Post Adjusting Eccentric Stud Retaining Ring

263802 Hook Post Base Cover

200181X Hook Post Base Cover Screw

263476 Hook Post Oil Inlet Strainer

212D Hook Post Oil Inlet Strainer Screw

202X Hook Post Oil Stop Screw

141581E Hook Post Oil Stop Screw

244746 Hook Post Oil Stop Screw Seal

201110X Hook Post Screw (2)

263846 Hook Post Slide

263478 Hook Shaft (vertical)

263479 Hook Shaft (vertical) Bearing (lower)

1448AL Hook Shaft (vertical) Bearing (lower) Set Screw

263480 Hook Shaft (vertical) Bearing (upper) with 263561

263561 Hook Shaft (vertical) Bearing (upper) Oil Wick

1448AL Hook Shaft (vertical) Bearing (upper) Set Screw

263593 Hook Shaft (vertical) Oil Packing (wick)

263594 Hook Shaft (vertical) Oil Packing (wick) Spring

350611X Hook Shaft (vertical) Screw

263568 Hook Shaft (vertical) Sleeve (center) with 200387C

200387C Hook Shaft (vertical) Sleeve (center) Set Screw

MACHINE NO. 236w130

263481 Hook Shaft (vertical) Thrust Washer
200121E Hook Shaft (vertical) Thrust Washer Screw
263482 Hook Washer with 203476 and three 204243
248929 Knife
263608 Knife Bar
248896 Knife Bar Bushing
200077D Knife Bar Bushing Screw
263609 Knife Bar Driving Connection with 200069C, 200089C and
200381C
263610 Knife Bar Driving Connection 263609 with 222013, 263611,
263622 to 263624 and 263627
200069C Knife Bar Driving Connection Hinge Screw
200381C Knife Bar Driving Connection Set Screw
263611 Knife Bar Driving Link Hinge Stud
200089C Knife Bar Driving Link Hinge Stud Pinch Screw
263612 Knife Bar Position Guide with 200031X and 201534X
267263 Knife Bar Position Guide Oiling Wick
200031X Knife Bar Position Guide Pinch Screw
201534X Knife Bar Position Guide Pinch Screw Nut
200028D Knife Bar Position Guide Screw
204411 Knife Bar Sleeve (split)
200043C Knife Bar Sleeve Set Screw
200888 Knife Bar Sleeve Set Screw 200043C with 201524E
201524E Knife Bar Sleeve Set Screw Nut
263613 Knife Control Lever with 232348
263614 Knife Control Lever Hinge Stud

MACHINE NO. 236w130

200417C Knife Control Lever Hinge Stud Set Screw
263615 Knife Control Lever Latch with 200316C
350615C Knife Control Lever Latch Adjusting Screw
201537X Knife Control Lever Latch Adjusting Screw Nut
350109C Knife Control Lever Latch Hinge Screw
40058 Knife Control Lever Latch Spring
217E Knife Control Lever Latch Spring Screw
206482 Knife Control Lever Latch Spring Screw Washer
200316C Knife Control Lever Latch Spring Stop Screw
263616 Knife Control Lever Plate with 201537X and 350615C
200064X Knife Control Lever Plate Screw
263617 Knife Control Lever Position Spring
263618 Knife Control Lever Position Spring Adjusting Plate
232348 Knife Control Lever Position Spring Adjusting Plate Pin
201478C Knife Control Lever Position Spring Adjusting Plate Screw
206482 Knife Control Lever Position Spring Adjusting Plate Screw Washer
200089C Knife Control Lever Position Spring Screw
202603 Knife Control Lever Position Spring Screw Washer
263619 Knife Control Lever complete, Nos. 217E, 40058, 201478C, 263613, 263615, 263616, 263618, 350109C, two each 200064X 201706X and 206482
201706X Knife Control Lever Plate Screw Nut
263620 Knife Driving Belt
*263509 Knife Driving Belt Idler Pulley
263510 Knife Driving Belt Idler Pulley 263509 with 263513
263621 Knife Driving Belt Idler Pulley Adjusting Stud

MACHINE NO. 236w130

200358C Knife Driving Belt Idler Pulley Adjusting Stud Set Screw
200948C Knife Driving Belt Idler Pulley Hinge Screw
263513 Knife Driving Belt Idler Pulley Needle Bearing
263622 Knife Driving Connection
263623 Knife Driving Connection Hinge Pin with 272115
272115 Knife Driving Connection Hinge Pin Oiling Wick
200389C Knife Driving Connection Hinge Pin Position Screw
263624 Knife Driving Connection Plunger with 200693C
200693C Knife Driving Connection Plunger Screw
222013 Knife Driving Connection Plunger Spring
263625 Knife Driving Eccentric with 200365C and 201052ALX
200365C Knife Driving Eccentric Position Screw
201052ALX Knife Driving Eccentric Set Screw
263626 Knife Driving Eccentric Thrust Washer
263627 Knife Driving Link with 200389C
263628 Knife Driving Shaft with 222583
263645 Knife Driving Shaft Belt Pulley (double groove) with
two 200351C
200351C Knife Driving Shaft Belt Pulley Set Screw
263630 Knife Driving Shaft Bracket with 200417C
263646 Knife Driving Shaft Bracket Oil Tube
263647 Knife Driving Shaft Bracket Oil Tube Packing (wick)
232154 Knife Driving Shaft Bracket Position Pin (2)
200050C Knife Driving Shaft Bracket Screw (2)
263631 Knife Driving Shaft Bushing
200364C Knife Driving Shaft Bushing Set Screw

MACHINE NO. 236w130

222583 Knife Driving Shaft Oil Packing (wick) (in Shaft)
276046 Knife Driving Shaft Oil Wick (in Arm)
263632 Knife Holder
263633 Knife Holder 263632 with two 200126F
200094F Knife Holder Screw
202603 Knife Holder Screw Washer
200126F Knife Screw
263483 Lifting Lever
263484 Lifting Lever Extension
200092C Lifting Lever Extension Screw
201101C Lifting Lever Hinge Screw
263485 Lifting Lever Spring
201051C Lifting Lever Spring Stop Screw (on Lever)
200224C Lifting Lever Spring Stop Screw (on Arm)
201231C Lifting Lever Stop Screw
263486 Lifting Lever complete, Nos. 200092C, 201051C, 263483 and
263484
263487 Machine Pulley (aluminum alloy casting) for "V" belt
(outside diam. of belt groove 2.9 in.) (rim diam. 5-1/4 in.)
with 200327C and 200328C
263488 Machine Pulley 263487 with 272142
200328C Machine Pulley Position Screw
200327C Machine Pulley Set Screw
TK-161 Motor
263639 Motor and Belt Guard
200007C Motor and Belt Guard Screw (2)

MACHINE NO. 236w130

995536 Motor Control Box

263635 Motor Pulley (double grooved) for "V" belt, 1-13/32"
and 1-33/64 in. diam. belt grooves, with two 200351C

200351C Motor Pulley Set Screw

200362C Motor Set Screw (2)

263636 Motor Terminal Block Lead Wire Cover Plate

200112C Motor Terminal Block Lead Wire Cover Plate Screw (2)

145X Motor Terminal Block Screw (furnished with motor)

263560 Needle Bar and Take-up Oiling Wick

228485 Needle Bar and Take-up Oiling Wick Retaining Screw (3)

263489 Needle Bar with 200125ALX, 200175D and 249270

263490 Needle Bar Bushing (lower)

263491 Needle Bar Bushing (upper)

200398C Needle Bar Bushing Set Screw

263492 Needle Bar Connecting Link

1130E Needle Bar Connecting Link Cap Screw

263570 Needle Bar Connecting Link Oil Packing (wick)

263571 Needle Bar Connecting Link Oil Packing (wick) Spring Clamp (2)

143057 Needle Bar Connecting Stud with 207E

207E Needle Bar Connecting Stud Pinch Screw

143058 Needle Bar Connecting Stud Slide Block

*263493 Needle Bar Crank

203172 Needle Bar Crank Friction Washer

200333C Needle Bar Crank Postion Screw

249270 Needle Bar Thread Guide

200175D Needle Bar Thread Guide Screw

MACHINE NO. 236w13C

200125ALX Needle Set Screw
263848 Oil Reservoir Oil Gauge
263849 Oil Reservoir Oil Gauge Plug
263495 Presser Bar Bushing (lower)
263496 Presser Bar Bushing (upper)
200398C Presser Bar Bushing (upper) Set Screw
202671 Presser Bar Lifter
200666C Presser Bar Lifter Hinge Screw
263497 Presser Bar Lifting Releasing Lever Bracket
206608 Presser Bar Lifting Releasing Lever Bracket Spring
263498 Presser Bar Position Guide
202338 Presser Bar Position Guide Lever with 200086ALX
200086ALX Presser Bar Position Guide Lever Pinch Screw
200055C Presser Bar Position Guide Lever Stop Screw
201671E Presser Bar Position Guide Lever Stop Screw Nut
200398C Presser Bar Position Guide Set Screw
350612C Presser Bar Screw (pressure regulating)
236089 Presser Bar Spring
263499 Presser Bar Spring Stop Rod
351884 Roller Presser, 1 in. diam., 9/64 in. face (fine) (reverse angle) with 1528X, 201699C, 350104C and twenty-eight 206417
263500 Roller Presser Arm
263637 Roller Presser Arm 263500 with 351884
235087 Roller Presser Arm Bracket
235088 Roller Presser Arm Bracket Position Collar with 200362C
228740 Roller Presser Arm Bracket Position Collar Lock Ring

MACHINE NO. 236w130

200362C Roller Presser Arm Bracket Position Collar Set Screw
202558 Roller Presser Arm Bracket Spring
202559 Roller Presser Arm Bracket Spring Stop
200141F Roller Presser Arm Bracket Spring Stop Screw
200096D Roller Presser Arm Screw
206417 Roller Presser Ball, 1/16 in. diameter
201699C Roller Presser Ball Cone
263504 Roller Presser Bar
350104C Roller Presser Hinge Screw
1528X Roller Presser Hinge Screw Nut
263638 Roller Presser and Bar complete, Nos. 200096D, 202558, 202559,
228740, 235087, 235088, 263504, 263637 and two 200141F
263506 Roller Presser Driving Belt (lower)
263507 Roller Presser Driving Belt (lower) Driven Pulley with
two 200403C
200403C Roller Presser Driving Belt (lower) Driven Pulley Set Screw
263508 Roller Presser Driving Belt (lower) Driving Pulley with two
200958C
200958C Roller Presser Driving Belt (lower) Driving Pulley Set Screw
*263509 Roller Presser Driving Belt (lower) Idler Pulley
263510 Roller Presser Driving Belt (lower) Idler Pulley 263509
with 263513
263511 Roller Presser Driving Belt (lower) Idler Pulley Arm
660C Roller Presser Driving Belt (lower) Idler Pulley Arm
Hinge Screw
263512 Roller Presser Driving Belt (lower) Idler Pulley Arm
Spring
200948C Roller Presser Driving Belt (lower) Idler Pulley Hinge
Screw

MACHINE NO. 236w130

263513 Roller Presser Driving Belt (lower) Idler Pulley Needle Bearing

263514 Roller Presser Driving Belt (lower) Idler Pulley and Arm complete, Nos. 200948C, 263510 and 263511

263515 Roller Presser Driving Belt (upper)

263517 Roller Presser Driving Belt (upper) Idler Pulley

263566 Roller Presser Driving Belt (upper) Idler Pulley 263517 with 263565 (2)

263518 Roller Presser Driving Belt (upper) Idler Pulley Bracket

263519 Roller Presser Driving Belt (upper) Idler Pulley Bracket Adjusting Rod with two 201525E

201525E Roller Presser Driving Belt (upper) Idler Pulley Bracket Adjusting Rod Nut

201525E Roller Presser Driving Belt (upper) Idler Pulley Bracket Adjusting Rod Nut Lock Nut

263521 Roller Presser Driving Belt (upper) Idler Pulley Bracket Adjusting Rod Spring

263522 Roller Presser Driving Belt (upper) Idler Pulley Bracket Extension with two 263523

263523 Roller Presser Driving Belt (upper) Idler Pulley Bracket Extension Center

1094D Roller Presser Driving Belt (upper) Idler Pulley Bracket Extension Screw (3)

208636 Roller Presser Driving Belt (upper) Idler Pulley Bracket Extension Screw Washer (3)

263524 Roller Presser Driving Belt (upper) Idler Pulley Bracket Extension Support (back)

263525 Roller Presser Driving Belt (upper) Idler Pulley Bracket Extension Support (front)

201387F Roller Presser Driving Belt (upper) Idler Pulley Bracket Extension Support Screw (4)

263565 Roller Presser Driving Belt (upper) Idler Pulley Needle Bearing

263526 Roller Presser Driving Belt (upper) Idler Pulley Spindle

MACHINE NO. 236w130

263564 Roller Presser Driving Belt (upper) Idler Pulley Spindle Retaining Ring (2)

201748X Roller Presser Driving Belt (upper) Pulley (variable diam.) (adjustable) Lock Nut

263527 Roller Presser Driving Belt (upper) Pulley (variable diam.) (adjustable) Segment

263528 Roller Presser Driving Belt (upper) Pulley (variable diam.) (adjustable) Segment Guide Stud

263529 Roller Presser Driving Belt (upper) Pulley (variable diam.) (adjustable) Segment Retaining Ring

263530 Roller Presser Driving Belt (upper) Pulley (variable diam.) (adjustable) Segment Ring

263531 Roller Presser Driving Belt (upper) Pulley (variable diam.) (adjustable) Spreader Cone

263532 Roller Presser Driving Belt (upper) Pulley (variable diam.) (adjustable) complete, Nos. 201748X, 263529 to 263531, four each 263527 and 263528

201110E Roller Presser Driving Belt (upper) Pulley (variable diam.) (adjustable) Stop Screw

263533 Roller Presser Driving Belt Shaft

263534 Roller Presser Driving Belt Shaft Collar with two 200111C

200111C Roller Presser Driving Belt Shaft Collar Set Screw

268425 Roller Presser Driving Belt Shaft Needle Bearing (lower)

268425 Roller Presser Driving Belt Shaft Needle Bearing (upper)

263537 Stitch Length Indicator with 200347AL

200347AL Stitch Length Indicator Set Screw

263538 Take-up Lever

263539 Take-up Lever 263538 with 12166, 263543, 263572 and two 263571

263813 Take-up Lever Crank

200362C Take-up Lever Crank Set Screw

MACHINE NO. 236w130

200382ALX Take-up Lever Crank Set Screw
263541 Take-up Lever Guard
200161X Take-up Lever Guard Screw (2)
12166 Take-up Lever Hinge Stud
263543 Take-up Lever Link
263544 Take-up Lever Link Hinge Stud
200347AL Take-up Lever Link Hinge Stude Set Screw
263572 Take-up Lever Link Oil Packing (wick)
263571 Take-up Lever Link Oil Packing (wick) Spring Clamp
263545 Take-up Lever Position Plate
244048 Tension Disc (back)
244049 Tension Disc (front)
263546 Tension Release Plunger
263547 Tension Release Washer
263548 Tension Releasing Pin
223438 Tension Spring
263549 Tension Spring Washer
350613F Tension Stud with 263550
503050 Tension Stud Set Screw
263550 Tension Stud Washer
201572X Tension Thumb Nut
263551 Tension complete, Nos. 201572X, 202410, 223438, 244048,
244049, 263547 to 263549, 263552 and 350613F
202410 Thread Controller Spring
263552 Thread Controller Spring Regulator with 503050
446ALX Thread Controller Spring Regulator Set Screw

MACHINE NO. 236w130

202412	Thread Guide
210954	Thread Guide (lower)
2005820	Thread Guide (lower) Set Screw
241765	Thread Lubricator Oil Pad (felt)
263554	Thread Lubricator Oil Pad Holder
200137X	Thread Lubricator Oil Pad Holder Screw (2)
263555	Thread Lubricator Plate
200577AL	Thread Lubricator Plate Screw (2)
240034	Thread Retainer
2011880	Thread Retainer Set Screw
263558	Thread Retainer Thread Guide
350559ALX	Thread Retainer Thread Guide Set Screw
263871	Throat Plate Body, for 263873 and 263875
263872	Throat Plate Knife Cutting Plate, 53 elongated needle hole, trims back of the needle .025 in. to right of seam, for 263873
51306E	Throat Plate Knife Cutting Plate Screw
263873	Throat Plate complete, 53 elongated needle hole, trims back of the needle and .025 in. to right of seam, Nos. 263871, 263872 and two 51306E
141664X	Throat Plate Screw (2)

ACCESSORIES

FOR

MACHINE NO. 236w130

202258	Bed Hinge Connection (2)
200570E	Bed Hinge Connection Screw (4)
233939	Bobbin (2)
259462	Bobbin Winder complete
228884	Drip Pan (plastic) complete
228846	Knee Lifter Rock Shaft complete
248929	Knives (3)
41401	Machine Rest Pin (wood)
128x22y	Needles, six, size 14 Narrow Wedge Point with Supplementary Shoulder
120342	Oiler (copper plated)
263577	Pulley Spreader Cone Adjusting Key
4822	Roller Presser Hinge Screw Nut Wrench
228476	Screw Driver (Bobbin Case)
225498	Screw Driver
144465	Wrench (1/8 in. Hex.)
225554	Wrench