



SINGER

262-6

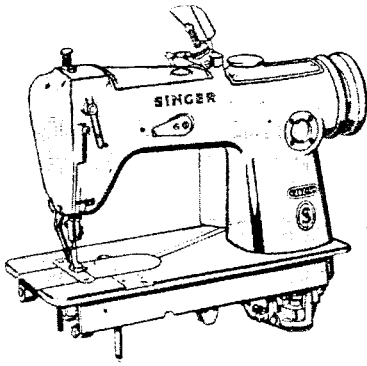


SINGER PARTS 262-6 MACHINE

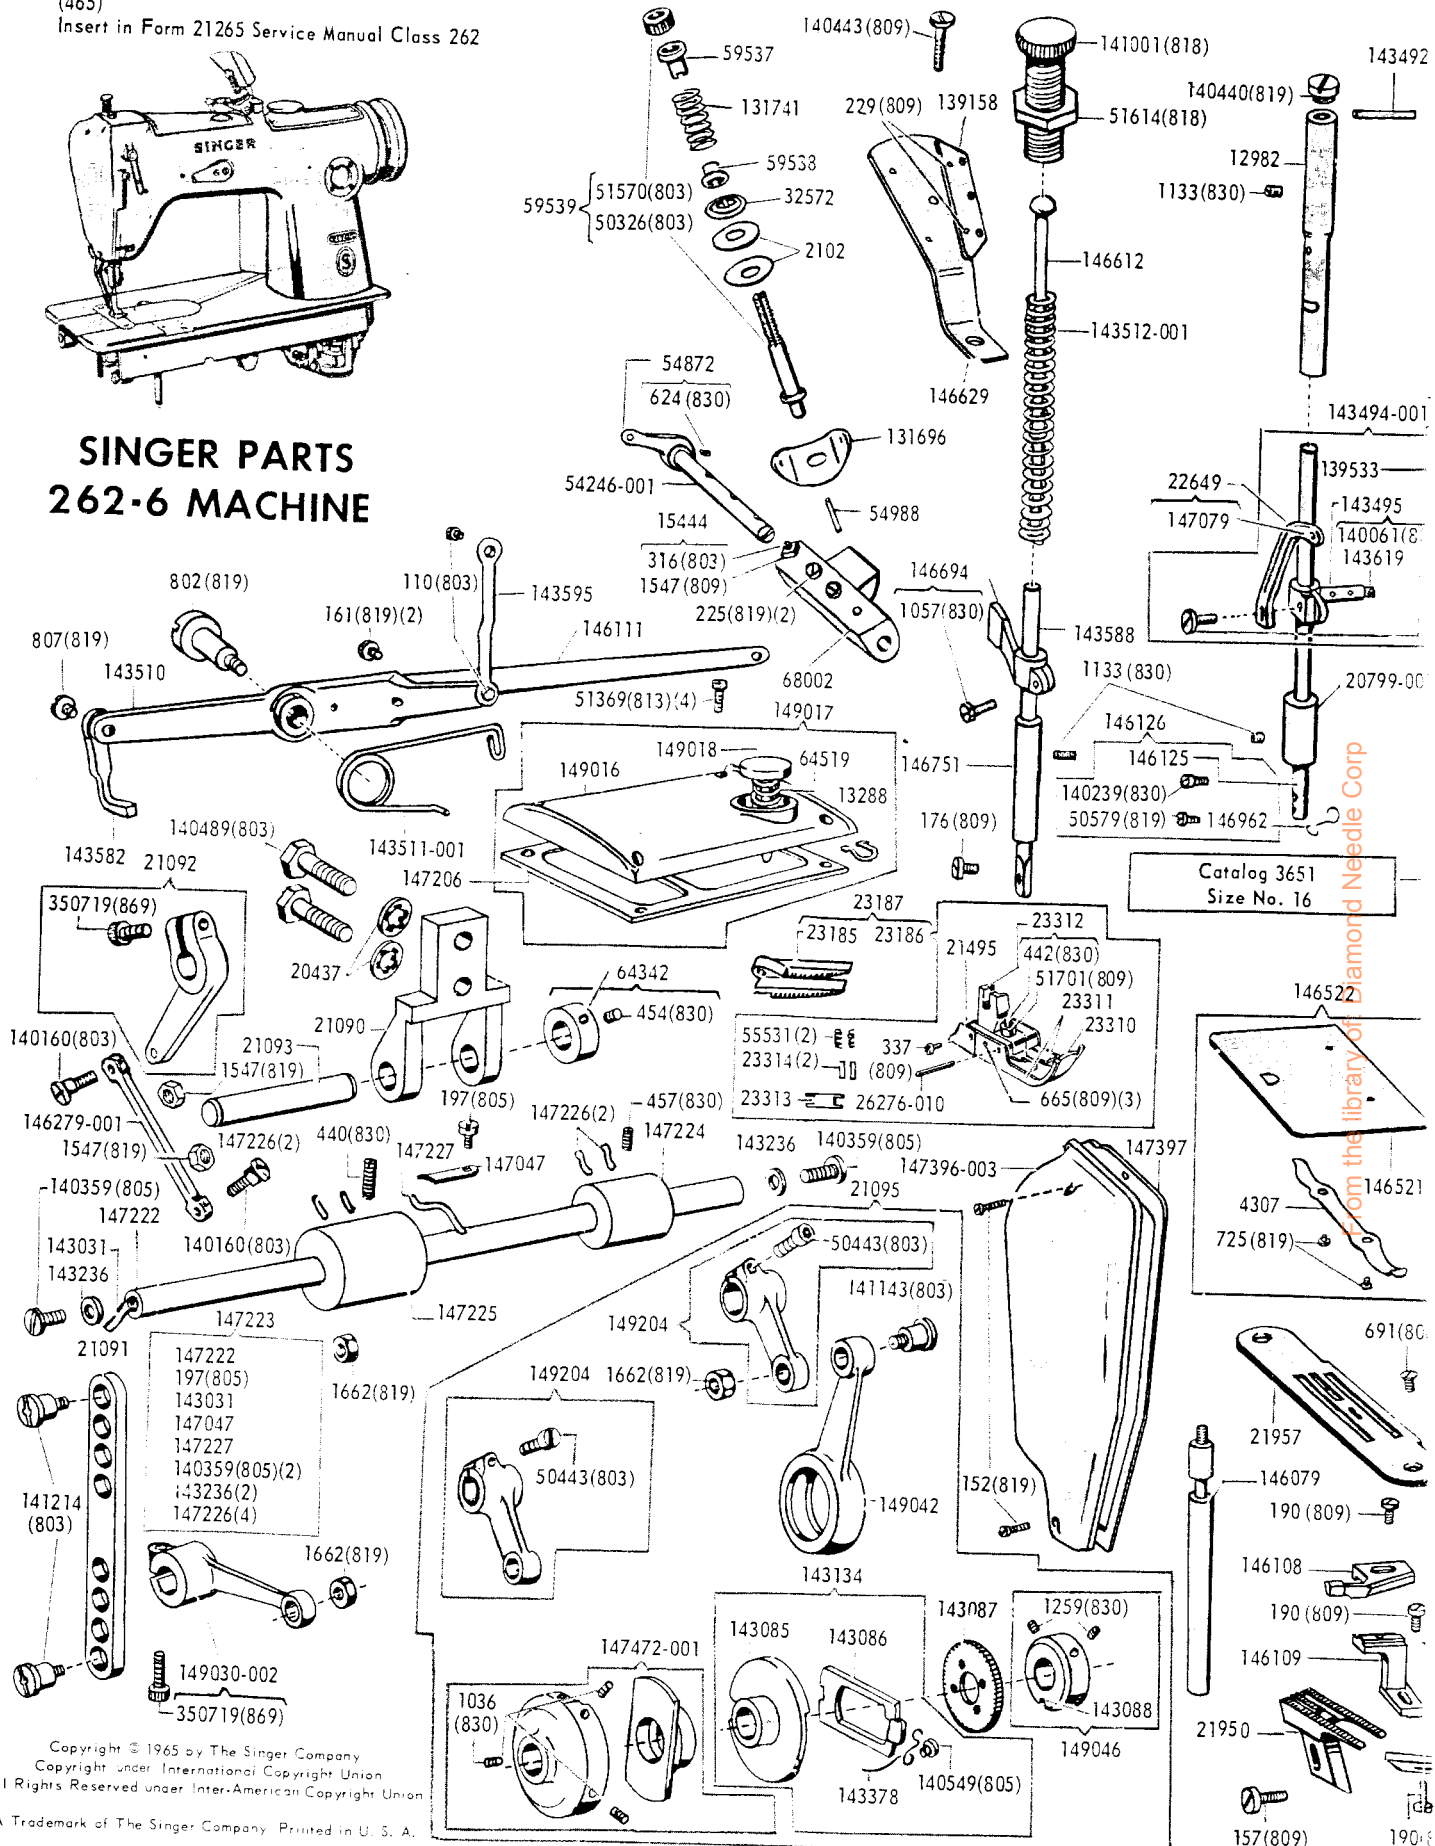

Catalog 3651
 Size No. 16

From the library of Diamond Needle Corp

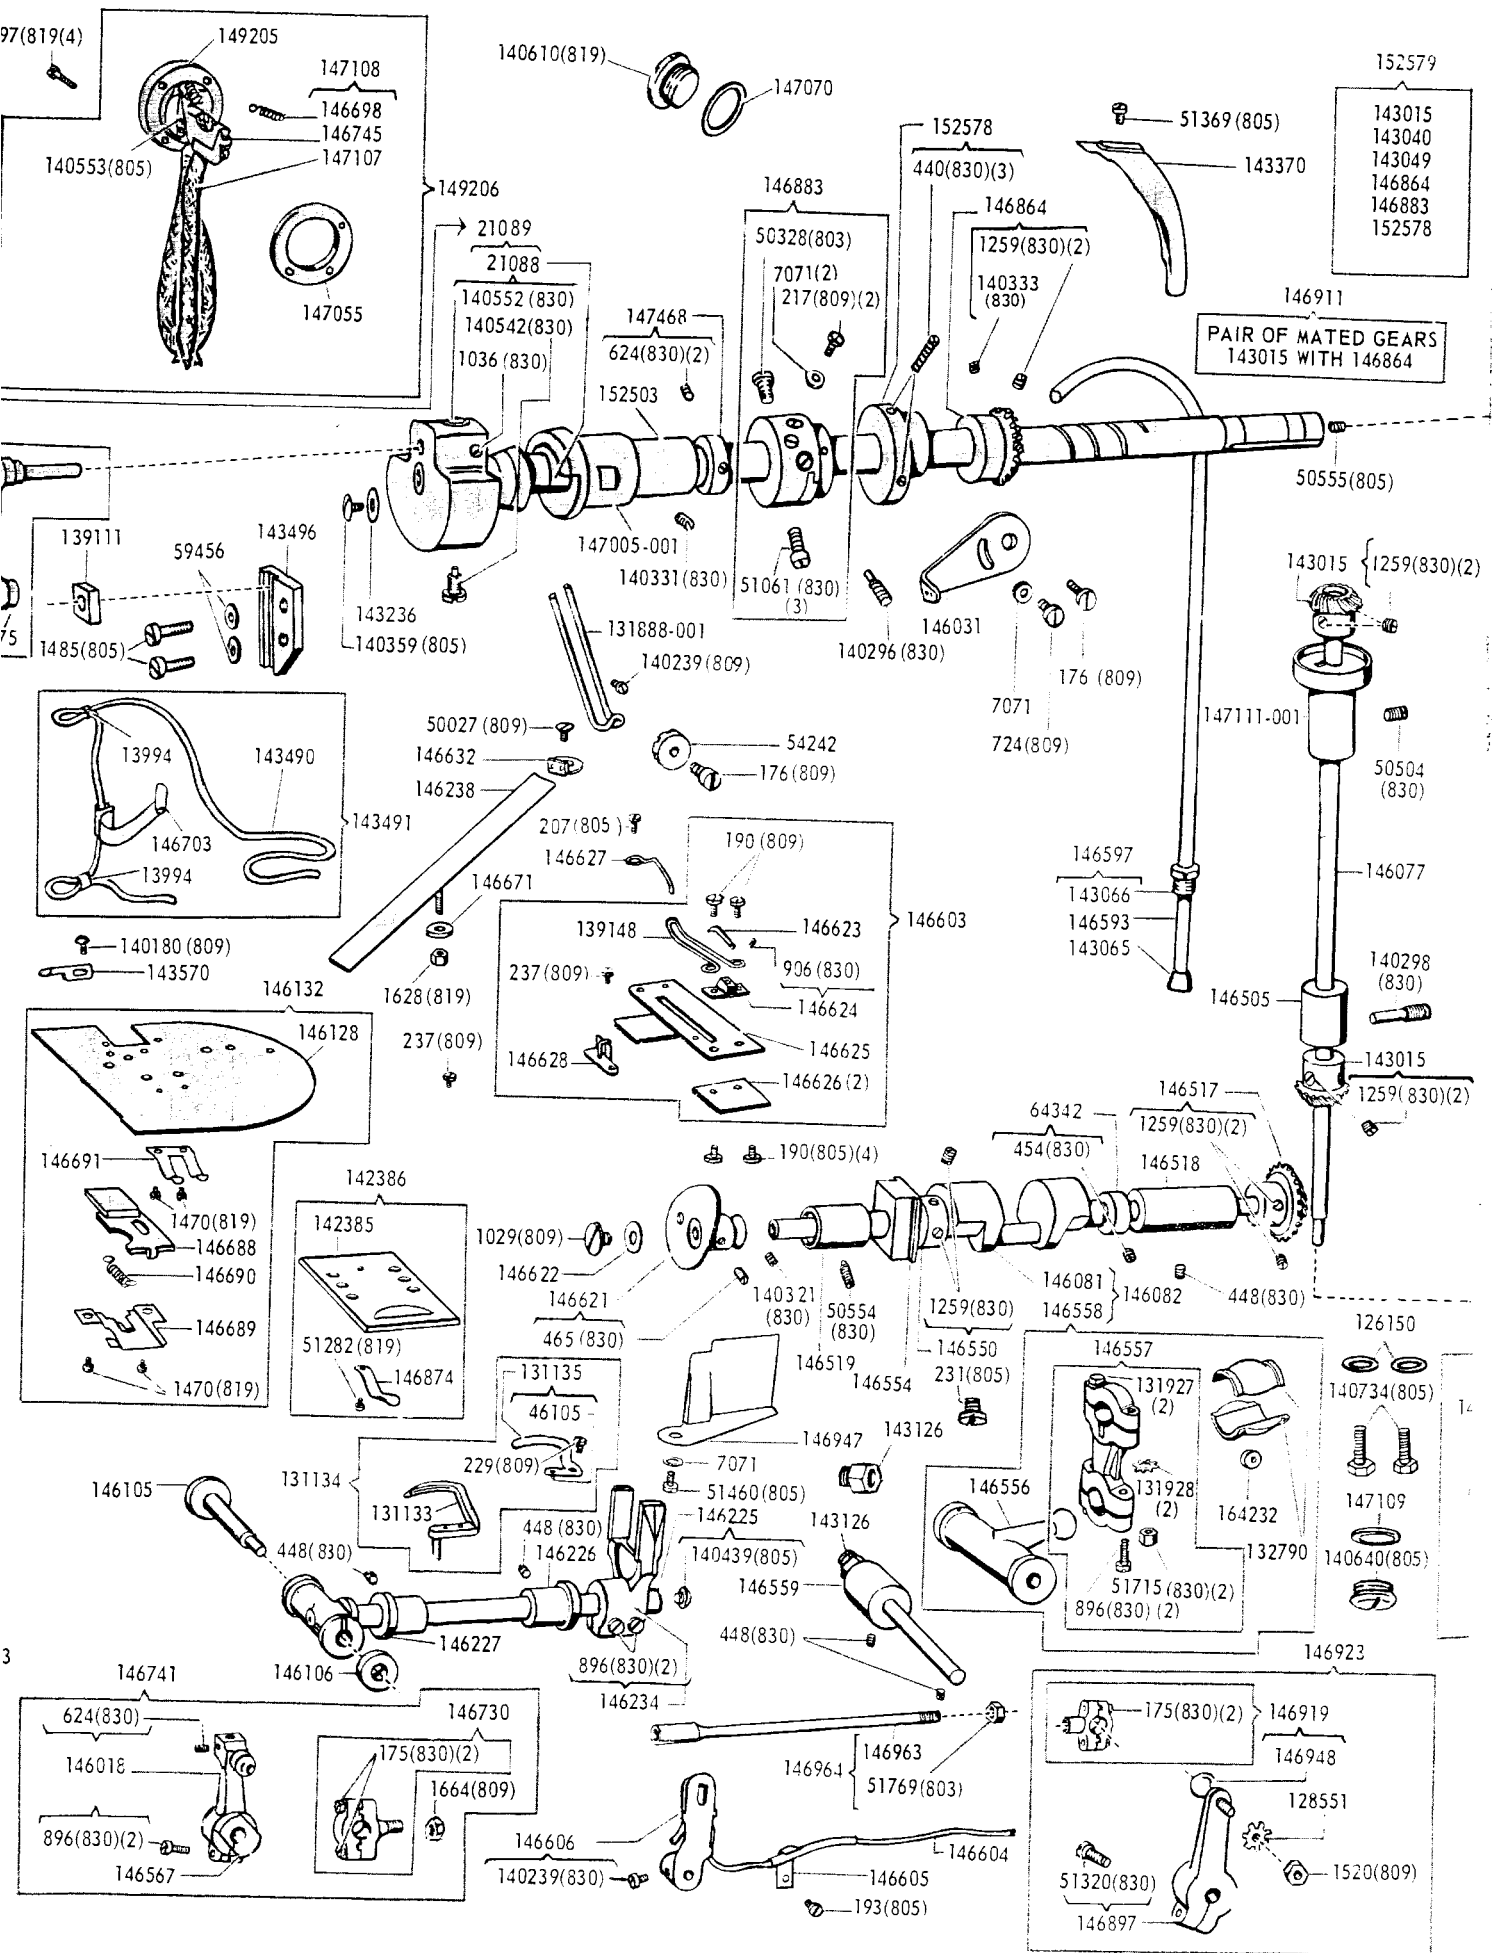

152579

- 143015
- 143040
- 143049
- 146864
- 146883
- 152578

GEARS
46864

(805)

{1259(830)(2)

50504
(830)

-146077

140298
(830)

143015
{1259(830)(2)

126150
40734(805)

147109
40640(805)

923

3

51

1520(809)

146869

- 146868
- 146871
- 335 (819)
- 146870

51369(4)
(813)

146512
51283
(830)

207(805)

140296(830)

144(804)

147112-001

146115-001

146790

59537

131740

146620

72(803)

21125-001

146797

146796

110
(803)

1735(803)

2102

82(803)

146792

146795

146793

51570(803)

140442(803)

131696

146618

146616

PAIR OF MATED GEARS
146517 WITH 143015

147022

158(805)(2)

147045(2)

146896

143236

140359
(805)

147024

143031
143032

228
(805)

140359(805)

143236

146892

147042

146024

40734(805)

147109

40640(805)

923

51

1520(809)

146025

143073

50123(805)

146600

146657

146658

189
(805)

146110

143125

143124

143125

146092

- 197(805)
- 140359(805)
- 143236
- 146091
- 146891
- 146896
- 147047

176(805)(2)

147023

197(805)

147047

52267

125060

52266

146881

146539

50577(809)

157(819)

146889

147029

460(830)(2)

143052

228(805)

143039

223(805)

146891

146096

14609a

146095

146099

140230(803)

141286(806)

197(805)

147047

1518(809)

223(805)

50258(805)

146098

147028

143049

147029

624(830)

460(830)

146099

140230(803)

141286(806)

197(805)

147047

146095

146096

14609a

146095

146099

140230(803)

141286(805)

197(805)

147047

146095

146096

14609a

146095

146099

140230(803)

141286(805)

197(805)

147047

1518(809)

146117

914(809)

146591

143062

143063

143061

50257(4)
(809)

143024

143040

146551

146078

624(830)

147028

146078

965(805)(2)

146095

140230(803)

147029

460(830)(2)

146096

14609a

146095

146099

140230(803)

141286(805)

197(805)

147047

146095

146096

14609a

146095

146099

140230(803)

141286(805)

197(805)

147047

146095

146096

14609a

146095

1518(809)

151561

146693

146640

151560

146150

146245

146151

143125

143124

143125

143124

143125

143124

143125

143124

143125

143124

143125

From the library of: Diamond Needle Corp

NUMERICAL LIST OF PARTS
262-6 MACHINE

NUMBER	DESCRIPTION	NUMBER	DESCRIPTION	NUMBER	DESCRIPTION
72(803)	Tension (looper thread) Releaser Slide Hinge Screw(2)	624(830)	Arm Shaft (horizontal) Thrust Collar Set Screw(2)	13994	Needle Bar Bushing (lower and upper) Oil Wick Clip(2)
82(803)	Tension (looper thread) Releaser and Releaser Slide Connecting Link Hinge Screw	624(830)	Feed Lifting Rock Shaft Bushing (back) Set Screw	14475	Needle Bar Connecting Link Screw Cap Disc (fiber)
110(803)	Tension (looper thread) Releaser Slide Connecting Link Hinge Screw	624(830)	Feed Lifting Rock Shaft Bushing (front) Set Screw	15444	Tension (needle thread) Releasing Shaft Stop Screw 316(803) with 1547(809)
110(803)	Tension (needle thread) Releasing Shaft Crank Connecting Link Hinge Screw(2)	624(830)	Feed Rock Shaft Bushing (back) Set Screw	16532	Arm Dowel Pin(2)
144(804)	Arm Shaft (horizontal) Screw (back)	624(830)	Feed Rock Shaft Bushing (front) Set Screw	20437	Top Gripper Feed Drive Lever (lower and upper) Shaft Bracket Screw Washer(2)
152(819)	Face Plate Screw(2)	624(830)	Looper Set Screw	20799-002	Needle Bar Bushing (lower)
157(809)	Feed Dog Screw	624(830)	Tension (needle thread) Releasing Shaft Crank Set Screw	21088	Arm Shaft (horizontal) with 1036(830), Needle Bar Crank, 140552(830) and 140542(830)
157(819)	Feed Lifting Rock Shaft Crank (front) Clamping Screw	665(809)	Presser Foot Body Side (left) Screw	21089	Arm Shaft (horizontal) 21088 with 143494-001
157(805)	Oil Pump (centrifugal) Body Screw(3)	665(809)	Presser Foot Body Side (right) Screw(2)	21090	Top Gripper Feed Drive Lever (lower and upper) Shaft Bracket
158(805)	Feed Bar Carrier Clamping Screw(2)	691(806)	Throat Plate Screw(2)	21091	Top Gripper Feed Drive Lever Connection
161(819)	Presser Bar Lifting Lever Extension Screw(2)	724(809)	Thread (needle) Eyelet (side of arm) Screw	21092	Top Gripper Feed Drive Lever (lower) with 350719(869)
175(830)	Looper Ball Crank Pitman End Bearing (left) Cap Screw(2)	725(819)	Bed Slide (left) Spring Screw(2)	21093	Top Gripper Feed Drive Lever (lower and upper) Shaft
175(830)	Looper Ball Crank Pitman End Bearing (right) Body Cap Screw(2)	802(819)	Presser Bar Lifting Lever Hinge Screw	21095	Combination of Top Gripper Feed Parts, 1662(819), 141143(803), 143087, 143134, 147472-001, 149042, 149046 and two 149204
176(805)	Feed Bar Carrier Hinge Pin Clamping Screw(2)	807(819)	Presser Bar Guide Bracket Lifter Hinge Screw	21125-001	Tension (looper thread) Releaser Slide Presser Foot Knife
176(809)	Presser Foot Screw	896(830)	Looper Avoiding Eccentric Connection Clamping Screw(2)	21495	Feed Dog (16 teeth to the inch) for side seaming men's pants
176(809)	Slack Thread Controller Clamp Screw	896(830)	Looper Ball Crank Connection Cap (lower) Screw(2)	21950	Note: 21950 is furnished as regular to machine, for use with 21957, 23185 and 23186
176(809)	Thread (needle) Eyelet (side of arm) Position Screw	896(830)	Looper Holder Clamping Screw	21957	Throat Plate for side seaming men's pants, for use with 21950, 23185 and 23186
189(805)	Oil Pump (centrifugal) Screen Frame Screw(3)	906(830)	Thread (looper) Take-up Stripper Set Screw		Note: 21957 is furnished as regular to machine
190(809)	Needle Guard Holder Bracket Screw	914(809)	Tension (looper thread) Thread Guard Screw		Note: Bed Slide 146132 (.100 off-set) is to be used with Throat Plate 21957
190(809)	Needle Guard Holder Screw	965(805)	Bed Leg (back) Screw(2)	22649	Thread (needle) Take-up with 147079
190(809)	Needle Guard Screw	1029(809)	Thread (looper) Take-up Screw	23185	Gripper Feed, 22 teeth (16 teeth to the inch) For side seaming men's pants
190(805)	Thread (looper) Take-up Stripper Plate Support Plate Screw(4)	1036(830)	Needle Bar Connecting Link Hinge Stud Position Set Screw		Note: 23185 is furnished as regular to machine, for use with 21950, 21957 and 23186
190(809)	Thread (looper) Take-up Stripper Staple Screw(2)	1036(830)	Top Gripper Feed Eccentric Set Screw(3)	23186	Presser Foot (hinged, with knife and yielding section) complete, for side seaming men's pants, 337(809), 21495, 23310, 23312, 23313, 26276-010, two 23311, 23314, 55531 and three 605(809)
193(805)	Oil Wick Holder Tube Bracket Screw	1057(830)	Presser Bar Guide Bracket Clamping Screw	23187	Presser Foot (hinged, with knife and yielding section) complete and gripper feed, 23185 and 23186, for side seaming men's pants (for Agents only)
197(805)	Feed Lifting Rock Shaft Oil Wick Clamping Plate Screw	1133(830)	Needle Bar Bushing (lower) Set Screw	23310	Presser Foot Body
197(805)	Feed Rock Shaft Oil Wick Clamping Plate Screw	1133(830)	Needle Bar Bushing (upper) Set Screw	23311	Presser Foot Body Side (left and right)(2)
197(819)	Oil Removing Wick (head end) Hinge Plate and Cover Screw(4)	1133(830)	Presser Bar Bushing (lower) Set Screw	23312	Presser Foot Shank with 442(830) and 51701(809)
197(805)	Top Gripper Feed Driving Crank Shaft Feeder Oil Wick Clamping Plate Screw	1259(830)	Arm Shaft (horizontal) Bevel Gear Set Screw(2)	23313	Presser Foot Yielding Section
207(805)	Arm Shaft (horizontal) Flanged Bushing (back) Oil Sump Tube Holder Screw	1259(830)	Arm Shaft (upright) Bevel Gear (lower) Set Screw(2)	23314	Presser Foot Yielding Section Hinge Pin(2)
207(805)	Thread (looper) Take-up Thread Guide (left) Screw	1259(830)	Arm Shaft (upright) Bevel Gear (upper) Set Screw(2)	26276-010	Presser Foot Shank Hinge Pin
217(809)	Feed Eccentric Clamping Washer Screw(2)	1259(830)	Bed Rotary Shaft Bevel Gear Set Screw(2)	32572	Tension (needle thread) Releasing Disc
223(805)	Feed Lifting Rock Shaft Cap Screw(2)	1259(830)	Looper Avoiding Eccentric Set Screw(2)	46105	Looper Needle Guard Pin
223(805)	Feed Rock Shaft Cap Screw (short)	1259(830)	Top Gripper Feed Regulator Locking Slide Ratchet Wheel Retaining Collar Set Screw(2)	50027(809)	Thread (looper) Thread Tube Thread Guide Screw
225(819)	Tension (needle thread) Screw Stud Hole Plug(2)	1470(819)	Bed Slide (right) Latch Guide Screw(2)	50123(805)	Oil Pump (centrifugal) Impeller Locking Screw
228(805)	Feed Bar Carrier Oil Wick Holder Screw(2)	1470(819)	Bed Slide (right) Spring Screw(2)	50257(809)	Oil Flow Window Cap Screw(4)
228(805)	Feed Lifting Rock Shaft and Feed Rock Shaft Oil Wick Holder Screw	1485(805)	Needle Bar Connecting Stud Slide Block Guide Screw(2)	50258(805)	Feed Rock Shaft Cap Screw (long)
229(809)	Looper Needle Guard Screw	1518(809)	Feed Lifting Rock Shaft Connecting Rod Hinge Screw Nut	50326(803)	Tension (needle thread) Screw Stud
229(809)	Thread (needle) Thread Guide Screw(2)	1518(809)	Feed Rock Shaft Connecting Rod Hinge Screw Nut	50328(803)	Feed Regulating Screw
231(805)	Looper Holder Rock Shaft Bracket Oil Plug Screw(back)	1520(809)	Looper Ball Crank Pitman Ball Screw Stud (right) Nut	50443(803)	Top Gripper Feed Driving Crank (back) Clamping Screw
237(809)	Thread (looper) Take-up Stripper Plate Screw	1547(819)	Gripper Feed Connecting Link Hinge Screw Nut	50443(803)	Top Gripper Feed Driving Crank (front) Clamping Screw
237(809)	Thread (looper) Take-up Thread Guide (right) Screw	1547(819)	Gripper Feed Hinge Screw Nut	50504(830)	Arm Shaft (upright) Bushing (upper) Set Screw
316(803)	Tension (needle thread) Releasing Shaft Stop Screw	1547(809)	Tension (needle thread) Releasing Shaft Stop Screw Nut	50554(830)	Bed Rotary Shaft Bushing (front) Set Screw
335(819)	Arm Top Cover (back) and Stitch Regulator Cap Latch Screw	1607(819)	Feed Dog Stop Screw Nut	50555(805)	Arm Shaft (horizontal) Plug Screw
337(809)	Presser Foot Knife Screw	1628(819)	Thread (looper) Thread Tube Screw Stud Nut	50579(809)	Feed Bar Slide Block Oil Wick Holder Screw
440(830)	Feed Lifting Eccentric Set Screw(3)	1662(819)	Top Gripper Feed Connecting Rod Hinge Screw Nut	50579(819)	Needle Bar Thread Guide Screw
440(830)	Top Gripper Feed Driving Crank Shaft Bushing (front) Set Screw	1662(819)	Top Gripper Feed Drive Lever Connection Hinge Screw (lower) Nut	51061(830)	Feed Eccentric Body Set Screw(3)
442(830)	Presser Foot Body Adjusting Screw	1662(819)	Top Gripper Feed Drive Lever Connection Hinge Screw (upper) Nut	51282(819)	Attachment Slide Spring Screw
448(830)	Bed Rotary Shaft Bushing (back) Set Screw	1664(809)	Looper Ball Crank Pitman End Bearing (left) Nut		
448(830)	Looper Ball Crank Hinge Pin Set Screw(2)	1735(803)	Tension (looper thread) Releaser and Releaser Slide Connecting Link Hinge Screw Nut		
448(830)	Looper Holder Rock Shaft Bushing (back) Set Screw	2102	Tension (looper thread) Disc(2)		
448(830)	Looper Holder Rock Shaft Bushing (front) Set Screw	2102	Tension (needle thread) Disc(2)		
454(830)	Bed Rotary Shaft Collar Set Screw	4307	Bed Slide (left) Spring		
454(830)	Top Gripper Feed Drive Lever (lower and upper) Collar Set Screw	Catalog			
457(830)	Top Gripper Feed Driving Crank Shaft Bushing (back) Set Screw	3651	Needle (Size No. 16)		
460(830)	Feed Lifting Rock Shaft Collar Set Screw(4)	7071	Feed Eccentric Clamping Washer(2)		
460(830)	Feed Rock Shaft Collar Set Screw(2)	7071	Looper Ball Crank Pitman Rod Oil Shield Screw Washer		
465(830)	Thread (looper) Take-up Set Screw	7071	Thread (needle) Eyelet (side of arm) Position Screw Washer		
		12982	Needle Bar Bushing (upper)		
		13288	Arm Top Cover (front) Stitch Regulator Plunger Spring Stop Ring		

Limited Warranty on All Sewing Machines

NUMBER	DESCRIPTION	NUMBER	DESCRIPTION	NUMBER	DESCRIPTION
51283(830)	Machine Pulley Set Screw(2)	140333(830)	Arm Shaft (horizontal) Bevel Gear Position Screw	143236	Feed Lifting Rock Shaft Oil Plug Screw Washer (fiber)
51320(830)	Looper Ball Crank Arm Clamping Screw	140359(805)	Arm Shaft (horizontal) Screw Plug (front)	143236	Feed Rock Shaft Oil Plug Screw Washer (fiber)
51369(813)	Arm Top Cover (back) Screw(4)	140359(805)	Feed Lifting Rock Shaft Oil Plug Screw	143236	Top Gripper Feed Driving Crank Shaft Oil Plug Screw Washer (fiber)(2)
51369(813)	Arm Top Cover (front) Screw(4)	140359(805)	Feed Rock Shaft Oil Plug Screw	143370	Oil Lead
51369(805)	Oil Lead Screw	140359(805)	Top Gripper Feed Driving Crank Shaft Oil Plug Screw(2)	143378	Top Gripper Feed Regulator Locking Slide Spring
51460(805)	Looper Ball Crank Pitman Rod Oil Shield Screw	140439(805)	Looper Holder Rock Shaft Oil Plug Screw	143490	Needle Bar Bushing (lower and upper) Oil Wick
51570(803)	Tension (looper thread) Regulating Thumb Nut	140440(819)	Needle Bar Bushing (upper) Oil Plug Screw	143491	Needle Bar Bushing (lower and upper) Oil Wick 143490 with 146703 and two 13994
51570(803)	Tension (needle thread) Regulating Thumb Nut	140442(803)	Tension (looper thread) Screw Stud	143492	Needle Bar Bushing (lower and upper) Oil Wick Guide Tube (inside Face of Arm)
51614(818)	Pressure Regulating Thumb Screw Nut	140443(809)	Tension (needle thread) Bracket Screw	143494-001	Needle Bar Connecting Link with 14475, 139533, 143495 and Hinge Stud
51701(809)	Presser Foot Body Adjusting Screw Nut	140489(803)	Top Gripper Feed Drive Lever (lower and upper) Shaft Bracket Screw(2)	143495	Needle Bar Connecting Stud with 140061(805) and 143619
51715(830)	Looper Ball Crank Connection Cap (upper) Screw Stud Nut(2)	140542(830)	Needle Bar Crank Position Screw	143496	Needle Bar Connecting Stud Slide Block Guide
51769(803)	Looper Ball Crank Pitman Rod Nut	140549(805)	Top Gripper Feed Regulator Locking Slide Spring Screw	143510	Presser Bar Lifting Lever
52266	Feed Bar Slide Block	140552(830)	Needle Bar Connecting Link Hinge Stud Clamping Screw	143511-001	Presser Bar Lifting Lever Spring
52267	Feed Bar Slide Block 52266 with 125060	140553(805)	Oil Removing Wick (head end) Holder Body Hinge Screw	143512-001	Presser Bar Spring
54242	Slack Thread Controller Clamp	140607(819)	Arm Top Cover (front) Stitch Regulator Plunger Hole Plug Screw (for plugging the Plunger hole when the Plunger is removed to prevent tampering with the Stitch Set) (for Agents only)	143570	Thread Guide (front of arm)
54246-001	Tension (needle thread) Releasing Shaft	140610(819)	Arm Hole Plug Screw (for access to Needle Bar Connecting Link Hinge Stud Clamping Screw and Needle Bar Connecting Link Hinge Stud Position Set Screw)	143582	Presser Bar Guide Bracket Lifter
54872	Tension (needle thread) Releasing Shaft Crank with 624(830)	140640(805)	Looper Holder Rock Shaft Bracket Oil Plug Screw (front)	143588	Presser Bar
54988	Tension (needle thread) Releasing Pin	140695(819)	Feed Dog Stop Screw	143595	Tension (needle thread) Releasing Shaft Crank Connecting Link
55531	Presser Foot Yielding Section Spring(2)	140734(805)	Looper Holder Rock Shaft Bracket Screw(2)	143619	Needle Bar Connecting Stud Oil Wick (felt)
59456	Needle Bar Connecting Stud Slide Block Guide Screw Washer(2)	141001(818)	Pressure Regulating Thumb Screw	146018	Looper Holder with 624(830) and 896(830)
59537	Tension (looper thread) Spring Bushing (large)	141139(869)	Machine Base and Oil Reservoir Drain Plug	146022	Oil Pipe with two each 143124 and 143125 for oiling Looper Rock Shaft Hinge Pin
59537	Tension (needle thread) Spring Bushing (large)	141143(803)	Top Gripper Feed Connecting Rod Hinge Screw	146025	Oil Pump (centrifugal) Body Plug
59538	Tension (looper thread) Spring Bushing (small)	141214(803)	Top Gripper Feed Drive Lever Connection Hinge Screw (lower)	146031	Thread (needle) Eyelet (side of arm)
59538	Tension (needle thread) Spring Bushing (small)	141214(803)	Top Gripper Feed Drive Lever Connection Hinge Screw (upper)	146077	Arm Shaft (upright)
59539	Tension (needle thread) Screw Stud 50326(803) with 51570(803)	141286(805)	Feed Lifting Rock Shaft Crank (back) Clamping Screw	146078	Bed Leg (back)
64342	Bed Rotary Shaft Collar with 454(830)	141286(806)	Feed Rock Shaft Crank Clamping Screw	146079	Bed Leg (front, long)
64342	Top Gripper Feed Drive Lever (lower and upper) Shaft Collar with 454(830)	142385	Attachment Slide	146081	Bed Rotary Shaft
64519	Arm Top Cover (front) Stitch Regulator Plunger Spring	142386	Attachment Slide complete, 51282(819), 142385 and 146874	146082	Bed Rotary Shaft 146081 with 146557, 132790, 146556 and 164232 (for Agents only)
68002	Tension (needle thread) Bracket	143015	Arm Shaft (upright) Bevel Gear (lower) left hand spiral with two 1259(830)	146091	Feed Rock Shaft
125060	Feed Bar Slide Block Hinge Stud	143015	Arm Shaft (upright) Bevel Gear (upper) left hand spiral with two 1259(830)	146092	Feed Rock Shaft 197(805), 140359(805), 143236, 146091, 146891, 146896, 147047 and suitable length of 1229 White Lighter Wicking
126150	Looper Holder Rock Shaft Bracket Screw Washer(2)	143024	Bed Hole Plug	146094	Feed Lifting Rock Shaft Crank (back) with 141286(805)
128551	Looper Ball Crank Pitman Ball Screw Stud (right) Nut Locking Plate	143031	Feed Bar Carrier Oil Wick (felt)(for oiling Feed Bar Connecting Link)	146095	Feed Lifting Rock Shaft
131133	Looper	143031	Top Gripper Feed Driving Crank Shaft Oil Wick (long)	146096	Feed Lifting Rock Shaft 197(805), 140359(805), 143236, 146095, 146891, 146892, 147047 and suitable length of 1229 White Lighter Wicking
131133	Note: 131133 is regular to machine for fittings 6 to 10 stitches per inch.	143032	Feed Bar Carrier Oil Wick Holder	146097	Feed Rock Shaft Bushing (front)
131134	Looper 131133 with 229(809) and 131135	143039	Feed Lifting Rock Shaft Cap	146098	Feed Rock Shaft Cap
131134	Note: 131134 is to be used with fittings 8 to 18 stitches per inch.	143040	Feed Lifting Rock Shaft Connecting Rod	146099	Feed Rock Shaft Crank with 141286(806)
131135	Looper Needle Guard with 46105	143049	Feed Rock Shaft Connecting Rod	146105	Looper Holder Hinge Pin
131696	Tension (looper thread) Thread Guide	143052	Feed Lifting Rock Shaft and Feed Rock Shaft Oil Wick Holder	146106	Looper Holder Hinge Pin Spacer
131696	Tension (needle thread) Thread Guide	143061	Oil Flow Body Gasket(2)	146108	Needle Guard
131740	Tension (looper thread) Spring	143062	Oil Flow Window	146109	Needle Guard Holder
131741	Tension (looper thread) Spring	143063	Oil Flow Window Cap	146110	Oil Pipe with two each 143124 and 143125, for oiling Thread (under) Take-up Shaft Front Bearing
131741	Tension (needle thread) Spring	143065	Oil Pipe Clamping Sleeve	146111	Presser Bar Lifting Lever Extension
131888-001	Slack Thread Controller	143066	Oil Pipe Clamping Sleeve Nut	146115-001	Tension (looper thread) Releaser, 82(803), 1735(803), 21125-001, 146620, 146792, 146793, 146795, 146796, 146797 and two 72(803)
131927	Looper Ball Crank Connection Cap (upper) Screw Stud(2)	143071	Oil Pump (centrifugal) Body Position Pin(2)	146117	Tension (looper thread) Thread Guard
131928	Looper Ball Crank Connection Cap (upper) Screw Stud Nut Lock Washer(2)	143073	Oil Pump (centrifugal) Impeller	146125	Needle Bar (hollow) with 140239(830)
132790	Looper Ball Crank Connection Ball Sleeve (two pieces)	143085	Top Gripper Feed Regulator	146126	Needle Bar complete, 50579(819), 146125 and 146962
139111	Needle Bar Connecting Stud Slide Block	143086	Top Gripper Feed Regulator Locking Slide	146128	Bed Slide (right) Body
139148	Thread (looper) Take-up Stripper Staple	143087	Top Gripper Feed Regulator Locking Slide Ratchet Wheel	146132	Bed Slide (right) Latch-type complete, for Throat Plates with .100 off-set
139158	Thread (needle) Thread Guide	143088	Top Gripper Feed Regulator Locking Slide Ratchet Wheel Pin	146128, 146688, 146689, 146690, 146691 and four 1470(819)	
139533	Needle Bar Connecting Link Screw Cap	143124	Oil Pipe Clamping Sleeve(4)	146148	Machine Base and Oil Reservoir with 141139(869)
140061(805)	Needle Bar Connecting Stud Clamping Screw	143125	Oil Pipe Clamping Sleeve Nut(4)	146150	Machine Base and Oil Reservoir Gasket (left)
140160(803)	Gripper Feed Connecting Link Hinge Screw	143126	Oil Pipe Clamping Sleeve Adaptor (fastened to Looper Ball Crank Hinge Pin)	146151	Machine Base and Oil Reservoir 146148 with 146150, 146245, 146640, 146693, 151560 and 151561 (for Agents only)
140160(803)	Gripper Feed Hinge Screw	143126	Oil Pipe Clamping Sleeve Adaptor for 146024(2)		
140180(809)	Thread Guide (front of arm) Screw	143126	Looper Holder Rock Shaft Bracket Oil Pipe Clamping Sleeve Adaptor		
140230(803)	Feed Lifting Rock Shaft Connecting Rod Hinge Screw	143134	Top Gripper Feed Regulator 143085 with 140549(805), 143086 and 143378		
140230(803)	Feed Rock Shaft Connecting Rod Hinge Screw	143236	Arm Shaft (horizontal) Screw Plug (front) Washer (fiber)		
140239(830)	Needle Set Screw				
140239(830)	Oil Wick Position Bracket Screw				
140239(809)	Slack Thread Controller Position Screw				
140296(830)	Arm Shaft (horizontal) Bushing (center) Set Screw				
140296(830)	Arm Shaft (horizontal) Flanged Bushing (back) Set Screw				
140298(830)	Arm Shaft (upright) Bushing (lower) Set Screw				
140321(830)	Bed Rotary Shaft Oil Plug Screw				
140331(830)	Arm Shaft (horizontal) Flanged Bushing (front) Set Screw				

From the library of: Diamond Needle Corp

NUMBER	DESCRIPTION	NUMBER	DESCRIPTION	NUMBER	DESCRIPTION
146225	Looper Holder Rock Shaft with 140439(805)	146629	Thread (needle) Thread Guide Bracket	147028	Feed Rock Shaft Bushing (back)
146226	Looper Holder Rock Shaft Bushing (back)	146632	Thread (looper) Thread Tube Thread Guide	147029	Feed Lifting Rock Shaft Collar with two 460(830)(2)
146227	Looper Holder Rock Shaft Bushing (front)	146640	Machine Pad (felt)	147029	Feed Rock Shaft Collar with two 460(830)
146234	Looper Avoiding Eccentric Connection (forked) with two 896(830)	146657	Oil Pump (centrifugal) Screen	147037	Feed Lifting Rock Shaft Oil Wick (short) (for Agents only)(2)
146238	Thread (looper) Thread Tube and Screw Stud	146658	Oil Pump (centrifugal) Screen Frame	147042	Feed Lifting Rock Shaft Bushing (front)
146240	Feed Bar	146659	Oil Pump (centrifugal) Body with Impeller Bushing	147045	Feed Rock Shaft Oil Wick (short) (for Agents only)(2)
146241	Feed Bar 146240 with 1607(819) and 140695(819)	146671	Thread (looper) Thread Tube Screw Stud Nut Washer	147047	Feed Lifting Rock Shaft Oil Wick Clamping Plate
146243	Feed Bar Assembly 146241 with 146244 (for Agents only)	146688	Bed Slide (right) Latch and Spring Hook	147047	Feed Rock Shaft Oil Wick Clamping Plate
146244	Feed Lifting Rock Shaft Crank (front) 146889 with 50579(809), 52267, 146539 and 146881	146689	Bed Slide (right) Latch Guide	147047	Top Gripper Feed Driving Crank Shaft Feeder Oil Wick Clamping Plate
146245	Machine Base and Oil Reservoir Oil Return Wick Position Pad (felt)	146690	Bed Slide (right) Latch Spring	147055	Oil Removing Wick (head end) Hinge Plate and Cover Gasket
146279-001	Gripper Feed Connecting Link	146691	Bed Slide (right) Spring	147070	Arm Hole Plug Screw Washer
146505	Arm Shaft (upright) Bushing (lower)	146693	Machine Base and Oil Reservoir Oil Return Wick	147079	Thread (needle) Take-up Thread Eyelet Bushing
146508	Arm Top Cover (back) Gasket	146694	Presser Bar Guide Bracket with 1057(830)	147107	Oil Removing Wick (head end)
146512	Machine Pulley (disc, power) "V" belt groove (outside diameter of belt groove 2.9 in.) with two 51283(830)	146698	Oil Removing Wick (head end) Holder Body Spring	147108	Oil Removing Wick (head end) Holder Body 146745 with 146698 and 147107 (For Agents only)
146517	Bed Rotary Shaft Bevel Gear, right hand spiral with two 1259(830)	146703	Needle Bar Bushing (lower and upper) Oil Wick Clamp and Retainer	147109	Looper Holder Rock Shaft Bracket Oil Plug Screw (front) Washer (fiber)
146518	Bed Rotary Shaft Bushing (back)	146730	Looper Ball Crank Pitman End Bearing (left) and two 175(830) (for Agents only)	147111-001	Arm Shaft (upright) Bushing (upper)
146519	Bed Rotary Shaft Bushing (front)	146741	Looper Holder 146018 with 146730, 1664(809) and 146567	147112-001	Arm Shaft (horizontal) Flanged Bushing (back) with Oil Hole Plug
146521	Bed Slide (left)	146743	Needle Guard Holder Bracket	147206	Arm Top Cover (front) Gasket
146522	Bed Slide (left) complete, 4307, 146521 and two 725(819)	146745	Oil Removing Wick (head end) Holder Body	147222	Top Gripper Feed Driving Crank Shaft
146539	Feed Bar Slide Block Oil Wick Holder	146751	Presser Bar Bushing (lower)	147223	Top Gripper Feed Driving Crank Shaft 147222 with 197(805), 143031, 147047, 147227, two each 140359(805), 143236 and four 147226
146550	Looper Avoiding Eccentric with two 1259(830)	146790	Arm Shaft (horizontal) Flanged Bushing (back) Oil Sump Tube with Tube Holder	147224	Top Gripper Feed Driving Crank Shaft Bushing (back)
146551	Arm Screw Stud (back)(2)	146792	Tension (looper thread) Releaser	147225	Top Gripper Feed Driving Crank Shaft Bushing (front)
146552	Arm Screw (front)(2)	146793	Tension (looper thread) Releaser Fastening Plate	147226	Top Gripper Feed Driving Crank Shaft Oil Wick (short)(4)
146554	Looper Avoiding Eccentric Slide Block	146795	Tension (looper thread) Uncurler	147227	Top Gripper Feed Driving Crank Shaft Feeder Oil Wick
146556	Looper Ball Crank	146796	Tension (looper thread) Uncurler Plate (back)	147396-003	Face Plate
146557	Looper Ball Crank Connection with Caps, two each 896(830), 51715(830), 131927 and 131928	146797	Tension (looper thread) Uncurler Plate (front)	147397	Face Plate Gasket
146558	Looper Ball Crank Connection 146557 with 132790, 146556 and 164232 (for Agents only)	146864	Arm Shaft (horizontal) Bevel Gear, right hand spiral with 140333(830) and two 1259(830)	147468	Arm Shaft (horizontal) Thrust Collar with two 624(830)
146559	Looper Ball Crank Hinge Pin	146867	Arm Top Cover (back)	147472-001	Top Gripper Feed Eccentric with three 1036(830)
146567	Looper Holder Bushing (eccentric)	146868	Arm Top Cover (back) and Stitch Regulator Cap	149016	Arm Top Cover (front)
146591	Oil Flow Body	146869	Arm Top Cover (back) and Stitch Regulator Cap complete, 335(819), 146868, 146870 and 146871	149017	Arm Top Cover (front) with Stitch Regulator Plunger complete, 13288, 64519, 149016 and 149018
146593	Oil Pipe	146870	Arm Top Cover (back) and Stitch Regulator Cap Gasket	149018	Arm Top Cover (front) Stitch Regulator Plunger
146597	Oil Pipe complete from Oil Pump to Arm Shaft (horizontal) Center Bearing 146593 with 143065 and 143066 (for Agents only)	146871	Arm Top Cover (back) and Stitch Regulator Cap Latch	149030-002	Top Gripper Feed Drive Lever (upper) with 350719(869)
146600	Oil Pump (centrifugal) Cover	146874	Attachment Slide Spring	149042	Top Gripper Feed Connecting Rod
146603	Thread (looper) Take-up Stripper Plate 146625 with 237(809), 139148, 146623, 146624, 146628 and two each 190(809) and 146626	146881	Feed Bar Slide Block Oil Wick	149046	Top Gripper Feed Regulator Locking Slide Ratchet Wheel Retaining Collar with 143088 and two 1259(830)
146604	Oil Wick for Oiling Looper Ball Crank Pitman End Bearing (left)	146883	Feed Eccentric (adjustable) complete, 50328(803), two each 217(809), 7071 and three 51061(803)	149204	Top Gripper Feed Driving Crank (back) with 50443(803)
146605	Oil Wick Holder	146889	Feed Lifting Rock Shaft Crank (front) with 157(819)	149204	Top Gripper Feed Driving Crank (front) with 50443(803)
146606	Oil Wick Position Bracket with Hub and 140239(830)	146891	Feed Lifting Rock Shaft Oil Wick	149205	Oil Removing Wick (head end) Hinge Plate and Cover with Holder Body Stop and Spring Clip
146612	Presser Bar Spring Guide Pin	146892	Feed Rock Shaft Oil Wick	149206	Oil Removing Wick (head end) Holder Body complete, 140553(805), 146698, 146745, 147055, 147107 and 149205
146616	Pair of Mated Gears for Lower Shaft, 143015 and 146517 (for Agents only)	146892	Feed Lifting Rock Shaft Oil Wick (long)	151560	Machine Pad (felt, left back)
146618	Tension (looper thread) Screw Stud 140442(803) with 51570(803)	146896	Feed Rock Shaft Oil Wick (long)	151561	Machine Pad (felt, left front)
146620	Tension (looper thread) Releaser Slide Connecting Link	146897	Looper Ball Crank Arm with 51320(830)	152503	Arm Shaft (horizontal) Bushing (center)
146621	Thread (looper) Take-up with 465(830)	146911	Pair of Mated Gears for Upper Shaft, 143015 and 146864 (for Agents only)	152578	Feed Lifting Eccentric with three 440(830)
146622	Thread (looper) Take-up Screw Washer (fiber)	146919	Looper Ball Crank Pitman Head (right) with 146948 and two 175(830) (for Agents only)	152579	Combination of Feed and Stitch Regulator Parts, dummy shaft, 143015, 143040, 143049, 146864, 146883, and 152578 (for Agents only)
146623	Thread (looper) Take-up Stripper	146923	Looper Ball Crank Pitman Rod 146897 with Pitman End Bearing (right) Body, Body Cap, 1520(809), 128551, 146948 and two 175(830)	164232	Looper Ball Crank Connection Ball Sleeve Guide
146624	Thread (looper) Take-up Stripper Holder with 906(830)	146947	Looper Ball Crank Pitman Rod Oil Shield	350719(869)	Top Gripper Feed Drive Lever (lower) Clamping Screw
146625	Thread (looper) Take-up Stripper Plate	146948	Looper Ball Crank Pitman Ball Screw Stud (right)	350719(869)	Top Gripper Feed Drive Lever (upper) Clamping Screw
146626	Thread (looper) Take-up Stripper Plate Support Plate(2) Note: One 146626 is screwed onto Machine Bed	146962	Needle Bar Thread Guide		
146627	Thread (looper) Take-up Thread Guide (left)	146963	Looper Ball Crank Pitman Rod		
146628	Thread (looper) Take-up Thread Guide (right) Bracket with Bracket Pin	146964	Looper Ball Crank Pitman Rod 146963 with 51769(803)		
		147005-001	Arm Shaft (horizontal) Flanged Bushing (front) with Oil Drain Tube		
		147022	Feed Bar Carrier with two each 158(805) and 176(805)		
		147023	Feed Bar Carrier Hinge Pin		
		147024	Feed Bar Carrier Oil Wick Holder 143032 with 143031		
		147028	Feed Lifting Rock Shaft Bushing (back)		