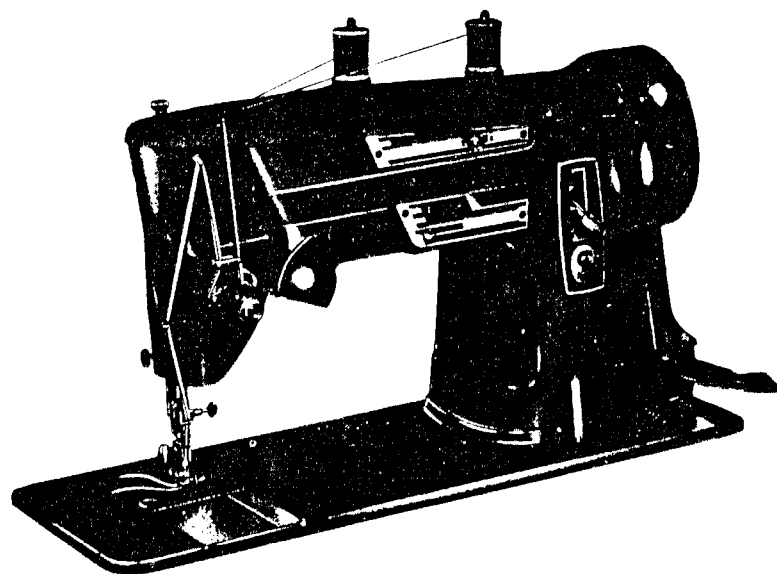


SINGER
328K

List of Parts—Machine No. 328K

ATTACHMENT SET 161615

32773	Presser Foot
86742	Ruffler
81245	Binder
161172	Seam Guide
161294	Screwdriver (LG)
161295	Screwdriver (SM)
161609	Tube of Oil
161611	Attachment Box
161613	Button Foot
161614	Throat Plate
161671	Hemmer Foot
161771	Applique Foot
161894	Raising Plate
172336	Bobbin (Plastic) (4)
276302	Fashion Disc 2
276303	Fashion Disc 3
276305	Fashion Disc 5
276306	Fashion Disc 6
276309	Fashion Disc 9
276310	Fashion Disc 10
276313	Fashion Disc 13
276331	Fashion Disc 31
2020(15x1)	Needles 14 (3)

List of Parts—Machine No. 328K

