SINGER 52-17

List of Parts Complete

For

Machine No. 52-17

No.								Name
* 1 35 7 6		Arm	with 4	450 C ,	300S	and 2	2803	
8582		Ħ	Dowel	Pin ((back)	ı		
4389		11	84	11	(front	;)		
123	E	11	Screw	(left	t, bac	k)		
138	E	Ħ	**	(rigi	nt)			
C88	E	Ħ	n	(left	t, fro	nt)		
13502		17	Shaft					
2006		**	#	Bushi	ing (b	ack)		
450	С	n	ŧŦ	Ħ		Ħ	Set	Screw
* 2803		Ħ	Ħ	Ħ	(f	ront))	
144	D	#1	n	Screv	ð			
15196		tı	Side (over				
51224	W	91	n	n	Thumb	Scre	W	
* 13577		Bed						
2811		Crar	ık Conr	nect1r	ng Rod			
158	E	n		11	Ħ	Cap	Scre	•W
3 7 5	C	17		11	Ħ	Hing	ge Sc	rew

No.							Nar	ne
1518	E	Crank	c Con	nectin	ig Rod	Hinge	Screw	Nut
13578		Face	Plat	е				
190	В	Ħ	Ħ	Scre	W			
13506		Feed	Bar					
315	С	11	**	Screw	Cente:	r		
1519	E	ŧı	Ħ	17	Ħ	Nut		
2039		11	Conn	ecting	; Link			
378	C	17		22	ŧŧ	Hinge	Screw	
1520	E	#		91	53	11	79	Nut
30272		н	Dog					
30273		st	**					
30274		11	#					
30275		11	Ħ					
30276		Ħ	ŧt					
30277		eż	Ħ					
30278		¥f	п					
30279		11	n					
30280		11	18					
3 1 566		11	н					
191	C	tf	n	Screw	-			
2261		π	Ecce	ntric	with	448AL		
448	AL	Ħ		11	Set So	crew		
2042		***	Fork	ed Con	necti	on		

No.							Name			
378	С	Feed	Forked (Conne	ction]	Hinge	Screw			
1520	E	14	Ħ	f	**	tt	n	Nut		
13508		n	Lifting	Rock	Shaft					
13509		Feed	Lifting	Rock	Shaft	comple	ete, N	os. 2509	and 135	30
2509		Feed	Lifting	Rock	Shaft	Crank	with	157E and	1813	
157	E	я	**	11	Ħ	17	Clamp	ing Screw	i	
1813		ŧŧ	Ħ	n	Ħ	15	Rolle	r and Stu	ıd	
867	С	#	Ħ	Ħ	87	Screw	Cente	r (right))	
30 7	С	29	Ħ	π	n	#	#	(left)		From the library of: Diamond Needle Corp
1513	С	п	83	n	Ħ	11	ŧŧ	91	Nut	Needl
2164		Ħ	Regulate	or						puomi
74	E	Ħ	Ħ	Hir	ige Sci	ew				of: Dia
747	E	Ħ	Ħ	Thu	ımb Sci	rew				ibrary
2047		Ħ	Rock Sha	ıft						m the l
2046		Feed	Rock She	ift co	mplete	, Nos	2047	and 2048	3	Froi
2048		Ħ	\$\$ \$*	Cı	rank wi	th 465	5 C			
2049		11	n ;	ı	" Pi	.n				
4 65	С	Ħ	ff 6	r	» Se	et Scre	∋₩			
307	С	Ħ	н в	' So	rew Ce	enter				
1513	С	ŧi	11 11	1	•	" <i>y</i>	lut			
13616		Loope	er, small	(lef	t hand	l)				
13617		24	Ħ	(rig	ht han	ıd)				
1362 9		#	Carri	er wi	th two	23 7 AI	Land	seven 853	AL for :	13617

No.						Name
237	AL	Looper,	C ar r ier	Set So	rew	
13516		98	#1	Shaft		
13517		#	ŧ?	6 ‡	Bushin	S
448	AL	#	11	н	94	Set Screw
237	AL	11	tŧ	н	Set Sc	rew
13579		n	Driving	Shaft		
13519		#	88	11	Crank	with 460AL and 1962
2269		Ħ	n	n	99	Pin
1962		95	11	ts	## ·	Roller and Stud
460	AL	99	11	ts	**	Set Screw
13520		**	11	11	Head w	ith 211C
2273		**	11	12	" P	in
13521		11)	11	17	Link w	ith 329E
32 9	E	31	άf	11	" A	djusting Screw
829	С	Looper D	riving S	Shaft I	dnk Hi	nge Screw
1520	E	**	† ?	ST	Ħ	" " Nut
1358 0		Looper D 1357		Shaft c	omplet	e, Nos. 2273, 13529 and
853	AL	Looper S	et Screv	₹		
1 5503		Machine	Pulley,	2-1/2	in. pu	lley, with two 448AL
448	AL	Machine	Pulley S	Bet Scr	rew	
13581		Needle B	ar (holl	Low)		
13582		n	" Conne	ecting	Link w	ith 794E

No.	Name	
794 E	Needle Bar Connecting Link Adjusting Screw	
831 C	" " " Hinge Screw	
13374	" " Stud with 1904 and two 6400	
640 C	" " " Clamping Screw	
1904	" " " Roller (roller only)	
1 3585	" Crank with 435AL and 1295AL	
435 AL	" " Set Screw	
1293 AL	" " Position Screw	
13644	" Clamp with seven 460 or 620	
2273	# Pin	
460	" Set Screw, for 9/64 in. gauge and above	
620	" " for 1/8 in. gauge and above	
13 526	Oscillating Rock Shaft	
5052	" Hinge Pin	
1513 C	n n n Nut	
635 C	" " " Screw Bearing	
1513 C	n n n n n n Nu	t
2058	Presser Bar	
2062	" " Lifter	
1058 C	" " Hinge Screw	
1 520 E	n n Nut	
2 9 53	" " Lifting Bracket with 453AL	
453 AL	" " " Set Screw	

No.	Name
2303	Presser Bar Spring
2070	" " Washer
39418	" Foot (hinged)
30418	" (double hinged) for cross tucking
190 D	Presser Foot Screw
233 D	Pressure Regulating Thumb Screw
1 3660	Tension Bracket with nine 13589
13680	Tension Bracket complete, Nos. 828, 13660, six each 637, 1547D, seven each 15600, 13710 and fourteen 2921
914 A	
2921	M Disc
13589	Tension Bracket Screw " Disc " " Steady Pin " Regulating Thumb Nut " Screw Stud " " Nut
1560 C	" Regulating Thumb Nut
928	" Screw Stud
1547 D	" " Nut
13710	" Spring
13672	Thread Guide (back of arm) eight holes
1 3904	" (side of arm)
219 A	" (side of arm) Screw
1809 D	" Nipper Adjusting Thumb Nut
13 533	" Body
460 AL	" " Set Screw
13534	" Cam with 382AL

No.			Name
882	AL Thread	Nipper Ca	am Set Screw
13667	n	u E	yelet
1527	D "	" L	ock Nut
13567	ព	" P	late
12162	Ħ	e 7	" Guide Pin
13537	n	n S	tud with 13538
13538	Ħ	87	Position Pin
13539	Ħ	11	Roller
13540	21	19	F Pin Spring
2026	11	11	* Spring
1 355 9	Thread	Nipper S	tud complete, Nos. 13537, 13539 and 13540
13714			omplete, Nos. 1527D, 1609D, 2026, 13535, 7 and four 13567
13704	Thread	Take-up	Plate " Screw Egg
883	В	71	" Screw
30837	Throat	Plate fo	r 30272
30838	н	\$10 E9	3 0 27 3
30839	Ħ	16 17	30274
30840	Ħ	n n	30275
30841	Ħ	12 10	30276
30842	Я	tt tt	30277
30843	11	n tt	30278
30844	Ħ	\$1 EE	30279
30845	11	\$1 \$ \$	30280

No.				Name
31766	Throat	Plate	for	31566
3046]	ęŧ	37	11	30009, for cording
30462	51	81	11	30009, for bottom cording
30463	81	#	ŧŧ	30010
30464	#	11	99	30011
30466	**	#	n	30013
30467	11	91	#	30014
30468	97	Ħ	n	30015
30469	11	##	11	30016 (cut for lap seam feller)
30477	n Pl	" ush wii	n Fb to	30016, for under strip, with strip plate op 30017 30018, for under strip 30019 30020 30020 for under strip
	7 - 17	MDII MI	OII O)D
30470	Throat	Plate	for	39917 <u>Build</u>
30471	**	51	11	30018, for under strip
30 47 2	н .	Ħ	11	30019
39473	11	87	Ħ	30020
30478	n	ŧŧ	Ħ	30020 for under strip
30474	n	Ħ	Ħ	30021
30479	37	Ħ	Ħ	30022
30480	Ħ	11	11	30023
30481	Ħ	Ħ	17	30024
39482	Ħ	11	17	30025, for under strip
30483	Throat	Plate	for	30026
30 484	\$	#	11	30027, milled for folder

No. Name

30476 Throat Plate for 30196

691 A " " Screw

13635 Drip Pan with four 1 in. wire nails