

HISTORICAL COPY

NUMBERING DEPARTMENT

JANUARY 16, 1913

DO NOT REMOVE

LIST OF PARTS COMPLETE

FOR

MACHINE NO. 58-10

For regular and Milo shoe buttons. Has automatic adjustable Button Carrier and Automatic Thread Cutting Device. Makes 12 stitches in button shank and four fastening stitches, no stitches between buttons.

*43590	Arm and Cylinder with 21503.....	25	00
21633	" Shaft.....	2	00
*21503	" " Bushing (front).....	30	
43591	" " Collar with two 445c.....	30	
445c	" " " Set Screw.....	03	
21634	" " Flanged Bushing (back).....	50	
437c	" " " Adjusting Screw.....	04	
1517E	" " " " " Nut.....	04	
448c	" " " " " Set Screw.....	03	
1069D	" " " " " Screw.....	12	
43592	Button Carrier.....	1	75
43593	" " " 43592 with 43606 to 43608.....	3	00
43594	" " " Adjusting Arm with 1159D.....	1	75
1159D	" " " " " Clamping Screw.....	03	
43595	" " " " " Lever.....	2	00
43596	" " " " " Connection (latch end) with 43602 and 43604.....	2	00
43597	Button Carrier Lever Connection (lever end) with 43604.....	1	50
43598	Button Carrier Lever Connection Adjusting Collar with 454c.....	50	
454c	Button Carrier Lever Connection Adjusting Collar Set Screw.....	02	
43599	Button Carrier Lever Connection Adjusting Collar Set Screw Lock Stud.....	01	
652D	Button Carrier Lever Connection Hinge Screw.....	08	
1637E	" " " " " " Nut.....	03	
43600	" " " " " " Latch with 43602.....	1	00
184D	" " " " " " H i n g e Screw.....	02	
43601	Button Carrier Lever Connection Latch Spring.....	02	
43602	" " " " " " Hook.....	01	

Use the library of Diamond Needle Corp

<b>50174C</b>	Button Carrier Lever Connection Latch Trip Screw Stud.....	10
1520E	Button Carrier Lever Connection Latch Trip Screw Stud Nut.....	03
<b>43603</b>	Button Carrier Lever Connection Spring.....	10
<b>43604</b>	" " " " Stud.....	10
<b>43605</b>	Button Carrier Lever Connection complete, Nos. 184D, 43596 to 43601 and 43603.....	5 15
802C	Button Carrier Lever Hinge Screw.....	10
2269	" " Pin.....	01
<b>43606</b>	" " Plate.....	1 25
<b>43607</b>	" " Hinge Pin.....	01
<b>43608</b>	" " Spring.....	01
<b>43609</b>	" " Rod.....	25
<b>43610</b>	" " Adjusting Collar with 457C.....	20
457C	" " " " Set Screw.....	02
<b>43611</b>	" " " " " " Lock Stud.....	01
<b>43612</b>	Button Carrier Rod Head with 457C.....	75
457C	" " " " Set Screw.....	02
652D	" " " Hinge Screw.....	08
1637E	" " " " Nut.....	03
<b>43613</b>	" " Supporting Arm.....	75
2269	" " " " Pin.....	01
<b>43614</b>	" " " " Shaft.....	30
207F	" " " " " Cap Screw.....	02
<b>43615</b>	" " " " " Washer.....	03
<b>43616</b>	Button Carrier Supporting Stud with 175D.....	1 00
233D	" " " " Cap Screw.....	02
<b>43617</b>	" " " " " Washer.....	03
175D	" " " " Clamping Screw.....	02
43588	" Guide with 43589 and two 1053D.....	1 00
21597	" " Adjusting Block.....	25
43589	" " Extension.....	10
1053D	" " " Screw.....	02
715D	" " Thumb Screw.....	20
<b>43618</b>	" Retaining Spring.....	03
337D	" " " Screw.....	02
43563	" Switch Stud (lower).....	25
460C	" " " " Set Screw.....	02
43564	" " " (upper).....	25
1019C	" " " " Set Screw.....	02
<b>43619</b>	Chute Cover with 50079D.....	1 00
1711H	" " Lock Nut.....	02
50079D	" " Screw Stud.....	08
43566	" " Spring.....	03
1538D	" " Thumb Nut.....	06

<b>43620</b>	Chute Frame with 50079D.....	3 00
207F	" " Screw (lower).....	02
171F	" " " (upper).....	03
<b>43621</b>	" Support Bracket.....	30
43569	" " Washer.....	10
<b>43622</b>	Chute complete, Nos. 43619, 43620 and two each 1538D, 1711H and 43566.....	4 30
12108	Crank Connecting Rod with 4349 and two 158E.....	70
*4349	" " " Cap.....	15
158E	" " " Screw.....	03
375c	" " " Hinge Screw.....	12
1518E	" " " " Nut.....	04
<b>43623</b>	Hopper Base with 460c, 1019c, 2273, 43563, 43564, 43635 and 50024E.....	8 00
944F	Hopper Base Screw.....	06
21538	" Brush.....	15
21539	" " Carrier.....	60
<b>43624</b>	" " " Eccentric with two 456c.....	1 00
456c	" " " " Set Screw.....	02
<b>43625</b>	" " " Forked Connection with 457C.....	3 00
<b>43626</b>	" " " " " Shaft.....	25
<b>43627</b>	" " " " " Bushing.....	35
448c	Hopper Brush Carrier Forked Connection Shaft Bushing Set Screw.....	03
43804	Hopper Brush Carrier Forked Connection Shaft Collar with 1053c.....	10
1053c	Hopper Brush Carrier Forked Connection Shaft Collar Set Screw.....	02
457c	Hopper Brush Carrier Forked Connection Set Screw.....	02
<b>43628</b>	" " " Handle.....	50
14026	" " " Pin.....	01
946D	" " " Screw.....	08
21542	" " " Shaft.....	1 00
<b>43629</b>	" " " Ratchet Wheel.....	1 50
<b>43630</b>	" " " " Brake Lever.....	2 00
<b>43631</b>	Hopper Brush Carrier Shaft Ratchet Wheel Brake Lever Block.....	25
<b>43632</b>	Hopper Brush Carrier Shaft Ratchet Wheel Brake Lever Block Pin.....	10
<b>43633</b>	Hopper Brush Carrier Shaft Ratchet Wheel Brake Lever Block Spring.....	03
445c	Hopper Brush Carrier Shaft Ratchet Wheel Brake Lever Block Spring Adjusting Screw.....	03
<b>43634</b>	Hopper Brush Carrier Shaft Ratchet Wheel Brake Lever Spring.....	05
<b>43635</b>	Hopper Brush Carrier Shaft Ratchet Wheel Brake Lever Spring Hook.....	01

<b>43636</b>	Hopper Brush Carrier Shaft Ratchet Wheel Brake Lever Stop Bracket.....	25
190D	Hopper Brush Carrier Shaft Ratchet Wheel Brake Lever Stop Bracket Screw.....	03
<b>43637</b>	Hopper Brush Carrier Shaft Ratchet Wheel Hub with two 454C.....	1 00
454C	Hopper Brush Carrier Shaft Ratchet Wheel Hub Set Screw.....	02
<b>43638</b>	Hopper Brush Carrier Shaft Ratchet Wheel Lever.....	1 50
<b>43639</b>	" " " " " " " " Guide Bracket.....	1 00
190D	Hopper Brush Carrier Shaft Ratchet Wheel Lever Guide Bracket Screw.....	03
184D	Hopper Brush Carrier Shaft Ratchet Wheel Lever Guide Screw.....	02
184D	Hopper Brush Carrier Shaft Ratchet Wheel Lever Hinge Screw.....	02
<b>43640</b>	Hopper Brush Carrier Shaft Ratchet Wheel Lever Pawl with 2273.....	75
184D	Hopper Brush Carrier Shaft Ratchet Wheel Lever Pawl Hinge Screw.....	02
<b>43641</b>	Hopper Brush Carrier Shaft Ratchet Wheel Lever Pawl Spring.....	03
2273	Hopper Brush Carrier Shaft Ratchet Wheel Lever Pawl Spring Pin.....	01
229D	Hopper Brush Carrier Shaft Ratchet Wheel Lever Pawl Spring Screw.....	02
2049	Hopper Brush Carrier Shaft Ratchet Wheel Pin.....	01
171F	" " " " " " " " Screw.....	03
21603	" " " " " " " " Lifter.....	05
43511	" " " " " " " " Gate.....	35
50024E	" " " " " " " " Screw Stud.....	03
2273	" " " " " " " " Pin.....	01
1538D	" " " " " " " " Thumb Nut.....	06
43573	" " " " " " " " Rim.....	2 50
207F	" " " " " " " " Screw.....	02
<b>43642</b>	" " " " " " " " Washer.....	10
<b>43643</b>	Hopper complete, Nos. 445C, 715D, 946D, 1538D, 2049, 14026, 21539, 21542, 21597, 43511, 43573, 43588, 43622, 43623, 43628 to 43634, 43636, 43637, 43639, 43642, two 21603, four each 171F, 190D, 207F and six 21538.....	26 50
21549	Needle Bar with 857H.....	45
3045	" " " " " " " " Connecting Link.....	30
377C	" " " " " " " " Hinge Screw.....	12
1518E	" " " " " " " " Nut.....	04
<b>43644</b>	" " " " " " " " Stud with 187D.....	1 00
187D	" " " " " " " " Clamping Screw.....	02

<b>43645</b>	Needle Bar Frame.....	2 00
21551	" " " " " " " " Driving Lever.....	2 00
802C	" " " " " " " " Hinge Screw.....	10
1887	" " " " " " " " Roller and Screw Stud.....	30
1906	Needle Bar Frame Driving Lever Roller and Screw Stud 1887 with 1520E and 14017.....	40
1520E	Needle Bar Frame Driving Lever Roller and Screw Stud Nut.....	03
14017	Needle Bar Frame Driving Lever Roller and Screw Stud Nut Washer.....	05
43534	Needle Bar Frame Pitman Connection (frame end).....	1 50
43535	" " " " " " " " (lever end).....	1 00
191F	" " " " " " " " Screw.....	03
43536	Needle Bar Frame Pitman (adjustable) complete Nos. 43534, 43535 and two 191F.....	2 50
377C	Needle Bar Frame Pitman Hinge Screw.....	12
1518E	" " " " " " " " Nut.....	11
577C	" " " " " " " " Screw Centre (lower).....	06
1517E	" " " " " " " " Nut.....	04
945E	" " " " " " " " (upper).....	10
1517D	" " " " " " " " Nut.....	04
21553	" " " " " " " " Thread Eyelet.....	05
219F	" " " " " " " " Screw.....	02
21554	" " " " " " " " Thread Eyelet.....	01
665D	" " " " " " " " Screw.....	02
<b>43646</b>	" " " " " " " " Plate with 43547 and two 1053D.....	3 50
691F	" " " " " " " " Screw.....	04
857H	" " " " " " " " Set Screw.....	02
21555	Oscillating Rock Shaft (steel).....	1 00
21630	" " " " " " " " 21555 with 4784 and 12388.....	1 50
12388	" " " " " " " " Hinge Pin.....	50
448C	" " " " " " " " Set Screw.....	03
4784	" " " " " " " " Oil Pad.....	01
21556	" " " " " " " " Shaft.....	40
21557	" " " " " " " " Crank with 460C and 1921.....	50
2049	" " " " " " " " Pin.....	01
1921	" " " " " " " " Roller and Stud.....	25
460C	" " " " " " " " Set Screw.....	02
43576	Presser Bar.....	60
21559	" " " " " " " " Lifting Bracket with 446C.....	3 00
<b>43647</b>	" " " " " " " " Guide Bar.....	20
456C	" " " " " " " " Set Screw.....	02
446C	" " " " " " " " Set Screw.....	03
<b>43648</b>	" " " " " " " " Lever with 119D, 1528E, 1810, 21658 and two 2017.....	2 50
119D	Presser Bar Lifting Lever Adjusting Screw.....	05
21658	" " " " " " " " Bracket.....	25

2017	Presser Bar Lifting Lever Adjusting Screw Bracket Rivet.....	PER 100	25
1528E	Presser Bar Lifting Lever Adjusting Screw Nut.....		03
25C	" " " " Hinge Screw.....		15
1810	" " " " Roller and Stud.....		30
21586	" " " " Spring.....		10
191c	" " " " " Screw.....		03
21709	" " " " (intermediate) with 1419c, 1521E, 1611E and 21710.....		80
21700	Presser Bar Lifting Lever (intermediate) Hinge Stud.....		15
448C	Presser Bar Lifting Lever (intermediate) Hinge Stud Set Screw.....		03
1419C	Presser Bar Lifting Lever (intermediate) Trip Stud.....		12
1521E	" " " " " " " " Lock Nut.....		03
1611E	Presser Bar Lifting Lever (intermediate) Trip Stud Nut.....		03
21710	Presser Bar Lifting Lever (intermediate) Trip Stud Spring.....		02
11167	Presser Bar Spring.....		05
11170	" " " Washer.....		01
43649	" Foot with 43663 and four 1329D.....		7 00
172F	" " " Screw.....		04
688E	Pressure Regulating Thumb Screw.....		25
21638	Pulley (loose).....		1 00
43650	" (tight).....		1 50
43651	Pulley (tight) complete, Nos. 871E, 21615 to 21617, 21647, 21653, 43650 and two 997E.....		4 25
23668	Pulley (tight) Pin.....		01
43652	Pulleys complete, Nos. 21638 and 43651.....		5 25
2996	Shuttle Bobbin.....		05
15140	" " Case Latch.....		10
2973	" " " " Lever.....		10
2974	" " " " " Fulcrum Pin.....	PER 100	10
2975	" " " " " Spring.....		02
592E	" " " " " Stop Screw.....		02
15141	" " " " Hinge, Nos. 2973, 2974 and 15140.....		25
4820	Shuttle Bobbin Case Position Finger.....		10
2523	" " " " " Rivet.....	PER 100	25
43653	Shuttle Bobbin Case complete, Nos. 591F, 592E, 2523, 2975, 4820, 15098 and 15141.....		75
21562	Shuttle Body.....		75
591F	" Tension Regulating Screw.....		02
15098	" " Spring.....		10
43654	Shuttle, 1 1/4 in. diam., Nos. 2996, 21562 and 43653.....		1 50
21563	" Driver.....		1 25

2049	Shuttle Driver Pin.....		01
43542	" Race Body.....		1 50
43543	" " Cap.....		15
662D	" " " Screw.....		02
2523	" " " Steady Pin.....	PER 100	25
43544	" " Ring.....		3 00
18413	" " " Spring.....		03
1289D	" " " " Screw.....		03
43545	Shuttle Race (flexible) complete, Nos. 662D, 2523, 43542 to 43544 and two each 1289D and 18413.....		4 75
171F	Shuttle Race Screw.....		03
43655	Starting Lever with 1811.....		3 50
43656	Starting Lever complete, Nos. 159F, 717c, 913c, 1520E, 1638E, 21643, 21645, 21649, 21651, 43583, 43655, 43658, two each 158E, 399F and three 14277.....		8 00
43657	Starting Lever Bell Crank with 1920.....		3 00
802c	" " " " Hinge Screw.....		10
1920	" " " " Roller and Stud.....		20
21643	" " " Belt Shifter.....		75
159F	" " " Set Screw.....		03
21644	" " Bracket.....		1 00
8582	" " " Dowel Pin.....		02
123E	" " " Screw.....		06
21645	" " " Cushion (raw hide).....		03
399F	" " " Screw.....		02
43658	" " Extension.....		1 25
158E	" " " Screw.....		03
1811	" " " Roller and Stud.....		20
564c	" " " Screw Centre.....		12
1508E	" " " " Nut.....		06
14174	" " " Spring.....		08
717c	" " " Stop Screw.....		08
1520E	" " " " Nut.....		03
43659	Stitch Forming Cam, 2 5/8 in. diam., 17 teeth.....		10 00
14250	" " " Driver.....		4 00
21707	" " " Cam with 448c and 765c.....		1 00
765c	Stitch Forming Cam Driver Cam Position Screw.....		05
448c	" " " " Set Screw.....		03
14253	" " " " Sliding Block.....		45
810D	" " " " " C a p		03
21647	Stop Cam with 21652.....		1 50
43583	" " Interlocking Rod.....		50
21649	" " " Guide with 1070c.....		1 00
1070c	" " " " Set Screw.....		08
14277	" " " " Washer (raw hide).....		05

From the Library of the Disarmament Needle Club

21651	Stop Cam Interlocking Rod Spring.....	10
913C	" " " " Regulating Thumb Screw.....	40
1638E	Stop Cam Interlocking Rod Spring Regulating Thumb Screw Nut.....	12
21652	Stop Cam Pin.....	05
21615	" " Spring (long).....	08
21616	" " " (short).....	05
21653	" " " Cover.....	25
997E	" " " Screw.....	05
21617	" " " Stop Block.....	25
871E	" " " " Screw.....	04
2921	Tension Disc.....	05
1560C	" Regulating Thumb Nut.....	04
20037	" Releaser.....	15
43660	" Releasing Lever.....	60
90D	" " " Hinge Screw.....	05
413F	" Screw Stud.....	10
2923	" Spring.....	05
12149	" Thread Guard.....	05
43547	Thread Cutter for 43645.....	30
1053D	" " Screw.....	02
43661	" Clamping Blade.....	20
43662	" Cutting Blade.....	20
43663	" " " Cap.....	100
1329D	" " " " Screw.....	02
43664	" " " Connection.....	50
93C	" " " Hinge S c r e w (holder end).....	04
86D	Thread Cutting Blade Connection Hinge Screw (lever end).....	05
43665	Thread Cutting Blade Holder.....	80
43666	" " " Lever with 190C and 1975.....	00
2049	" " " Pin.....	01
1975	" " " " Roller and Screw Stud with 1520E and 14017.....	40
190C	Thread Cutting Blade Lever Roller and Screw Stud Adjusting Screw.....	03
1520E	Thread Cutting Blade Lever Roller and Screw Stud Nut.....	03
14017	Thread Cutting Blade Lever Roller and Screw Stud Nut Washer.....	05
43667	Thread Cutting Blade Lever Shaft.....	40
43668	" " " " " Arm with 207F and 1906.....	75
8554	Thread Cutting Blade Lever Shaft Arm Pin.....	02
1887	" " " " " Roller and Screw Stud.....	30

1906	Thread Cutting Blade Lever Shaft Arm Roller and Screw Stud 1887 with 1520E and 14017.....	40
1520E	Thread Cutting Blade Lever Shaft Arm Roller and Screw Stud Nut.....	03
14017	Thread Cutting Blade Lever Shaft Arm Roller and Screw Stud Nut Washer.....	05
207F	Thread Cutting Blade Lever Shaft Arm Set Screw.....	02
233D	" " " Screw.....	02
21577	" Eyelet (side of arm) back.....	05
29642	" " " " front.....	15
460C	" " " " Set Screw.....	02
21578	" Take-up Cam with 446C.....	50
3012	" " " Pin.....	01
446C	" " " Set Screw.....	03
21579	" " Lever with 1819.....	60
76C	" " " Hinge Screw.....	06
1819	" " " Roller and Stud.....	20
8511	" " Spring (music wire).....	03
7336	" " Regulator.....	20
448C	" " " Set Screw.....	03

## ACCESSORIES

599E	Bolt with 1524E, to secure machine to table.....	03
1524E	" Nut.....	02
6055	" " Washer.....	01
35859	Oiler with Cap and 35861.....	07
35860	" 35859, filled with oil.....	10
35861	" Spout, 3 1/2 in. long.....	03
26026	Screw Driver (machine).....	10
26485	" " (shuttle tension).....	05
4822	Wrench for 1521, 1528 and 1637.....	05
10875	" " 1517, 1518, 1520 and 1611.....	10
21654	" " 1508 and 1638.....	10

**BOBBIN WINDER**

(SWINGING AUTOMATIC, RIGHT HAND)

27540	Base.....		15
15072	Bobbin Position Pin.....	PER 100	10
27302	Frame.....		15
32D	" Hinge Screw.....		10
27303	" Spring.....		03
27541	Pulley.....		25
27538	Spindle with 15072.....		20
27306	Spool Pin.....		05
27307	" Stand.....		10
27308	Spool Stand complete, Nos. 418D, 1562, 2106, 10141, 11241, 27306, 27307 and two each 2455 and wood screws 1 in. No. 10.....		35
11241	Spool Washer (cloth).....	PER 100	25
27312	Stop Latch.....		08
35D	" " Hinge Screw.....		07
2455	Tension Disc.....		02
1562	" Regulating Thumb Nut.....		04
418D	" Screw Stud.....		08
10141	" Spring.....		01
2106	" Thread Guide.....		01
27647	Bobbin Winder, Nos. 32D, 35D, 27302, 27303, 27312, 27538, 27540, 27541 and two wood screws 1 in. No. 7.....		90
27544	Bobbin Winder (swinging automatic, right hand) complete, Nos. 27308 and 27647.....		125

**STARTING TREADLE PARTS**

14209	Starting Treadle.....		30
14081	" " Connection (lower).....		10
21581	" " " (upper).....		10
9079	" " " Clamp with 354c.....		12
354c	" " " Screw.....		06
21582	Starting Treadle Connection complete, Nos. 9079, 14081 and 21581.....		32
7585	Starting Treadle Shaft.....		05
14210	" " Stand.....		25
14211	Starting Treadle complete, Nos. 7585, 14209, 14210 and four wood screws 1 1/4 in. No. 12.....		60

**TABLE BELT GUIDE PARTS**

14229	Bracket with 448c.....		30
14230	Pulley.....		35
14231	" Shaft with 858c.....		35
858c	" " Plug Screw.....		03
448c	" " Set Screw.....		03
14232	Table Belt Guide complete, Nos. 14229 to 14231 and four wood screws 1 1/4 in. No. 10, R. H. B.....		100

**THREAD UNWINDER**FOR TWO LARGE SPOOLS OR TWO LARGE CONES  
OF THREAD

27623	Spool Pin.....		08
155c	" " Set Screw.....		03
41530	" Rest.....		30
41531	" " 41530 with 1149c and two each 155c and 27623.....		50
1149c	Spool Rest Set Screw.....		04
27940	" Stand with 453c.....		20
41514	" Weight, 4 in. diam., with 41515.....		15
41515	" " Centre Pin.....		05
27739	Thread Cone (wood).....		05
41631	" Guard with 208E and two 41569.....		35
41569	" " Eyelet.....		03
41637	" " Rod (lower).....		10
41638	" " " (upper).....		15
41639	" " " Coupling with two 456c.....		20
456c	" " " Set Screw.....		02
41640	Thread Guard Rod complete, 30 in. long, Nos. 41637 to 41639.....		45
453c	Thread Guard Rod Set Screw.....		02
208E	" " Screw.....		02
41533	Thread Unwinder complete, Nos. 27940, 41531, 41631, 41640, two each 27739, 41514 and three wood screws 1 in. No. 12.....		180

From the library of: Diamond Products Corp.