

Singer 69-29

May 8, 1951

Department #54

FOR AGENTS ONLY
List of Parts Complete

for

Machine No. 69-29

HISTORICAL COPY
DO NOT REMOVE

COPY FOR M. T. D. FILE

69-29

ALS:CC

May 8, 1951
 Department #54

List of Parts Complete
 for
 Machine No. 69-29

No.		Name
39355		Arch Clamp Foot (left)
63729		39355 with 219K and 63731
39355		" " " (right)
63730		" " " " 39355 with 219K and 63732
17958		" " " Lifter with 17868
190 X		" " " " Screw
63726	2	" " " Lifting Stud
18477		" " " Plate
190 X	4	" " " " Screw
219 K	2	" " " Screw
63731		" " " Shank (left) with 63726
63732		" " " " (right) with 63726
63733	2	" " " Spring
1229 F	2	" " " " Adjusting Screw
1547 X	2	" " " " " " " Look Nut
63734		Arch Clamp Frame
14079	2	" " " Dowel Pin
181 X	2	" " " Screw
55484		Arch Clamp Complete, Nos. 1854C, 18387, 18477, 18486, 39358, 63729, 63730, 63734, two each 181X, 1229F, 1547X, 14079, 63733 and four 190X
*55405		Arm with 15404, 17844 and two each 184E and 15405
4389	2	" Dowel Pin
4448		" Oil Tube for intermediate bearing

From the library of: Diamond Needle Corp

No.		Name
880 E	3	Arm Screw
17702		" Shaft
55440		" " 17702 with 55302 and 68717
17703		" " Bushing (back)
50333 AL		" " " " Adjusting Screw
1520 E		" " " " " " Nut
124674		" Side Cover
190 J	2	" " " Screw
18498		Belt Cover
39290		" " Bracket with 184E and 17741
184 E		" " " Screw Stud
17741		" " " Stud
217 J	2	" " Screw
39222		" Shifter
63976		" " Clamp
1255 D	2	" " " Screw
4292		Crank Connecting Rod with 125044 and two 145E
145 E	2	" " " Cap Screw
375 C		" " " Hinge Screw
1518 E		" " " " " Nut
125044		" " " Oil Pad (felt)
*55407		Cylinder
18388		" Block
1300 J		" " Screw
18427		" End Cover with 18428, 18444 and three 4604
18428		" " " Bracket
18444		" " " " Hinge Pin
4604	3	" " " " Rivet

No.	Name
18379	Cylinder End Cover Spring
217 J	" " " " Screw
17724	Face Plate
*63736	" " 17724 with 2105
17725	Face Plate complete, Nos. 448AL, 2107, 2124, 2127, 56791, 63736 and two 233J
164 J	Face Plate Screw
2107	" " Thread Guard
233 J	" " " " Screw
55376	Feed Across Connection with four 1057AL
55380	" " " 55376 with 50598C and 55383
1057 AL 2	" " " Cap (lower) Screw
1057 AL 2	" " " " (upper) Screw
18356	" " Regulator with 1952
50598 C	" " " Ball Screw Stud
1676 C	" " " " " " Nut
17738	" " " " " " Washer
18357	" " " Hinge Stud
690 D	" " " " " Clamping Screw
1952	" " " Roller and Stud
18358	" " Shaft
18359 2	" " " Collar with two 200F
200 F 4	" " " " Set Screw
18421	" " " Crank (back) with 160E and 200C
55383	" " " " " Ball Stud
200 C	" " " " " " Set Screw
160 E	" " " " " Clamping Screw
18362	" " " " (front) with 160E and 18363

No.	Name
160 E	Feed Across Shaft Crank (front) Clamping Screw
18363	" " " " " Stud
18364	" " " " " Slide Block
55485	" Cam with two 17874 and two each 190J and 1192C
18415	" " Driving Worm with 1441AL and 1442C
1442 C	" " " " Position Screw
1441 AL	" " " " Set Screw
17797	" " " " Wheel with 453AL
18384	" " " " Pin
453 AL	" " " " Set Screw
18384	" " Pin
1192 C	2 " " Set Screw
62155	" " Shaft
62264	" " " 62155 with 1653C and 17797
1653 C	" " " Nut
39358	" Plate
18486	Feed Plate Carrier Bar with 810D, 934J, 1195E, 1221C, 8505, 18366, 18390, 18488, 18489, two 55300 and four 17806
18366	Feed Plate Carrier Bar Block
18367	" " " " " Cover
1221 C	" " " " " Screw
55300	2 " " " " " Steady Pin
17805	" " " " " Pivot Block
1194 D	" " " " " Screw
18390	" " " " " Plate
934 J	" " " " " Screw
1654 C	" " " Nut

No.		Name
17806	4	Feed Plate Position Stud
1195 E		" " Screw Stud
8505		" " " " Rivet
39361		" Regulator with 1953
18469		" " Bracket with 690D, 39310 and two 160J
55375		" " " 18469 with 18356, 18357, 39313, and 39361
39310		Feed Regulator Bracket Cap
160 J	2	" " " " Screw
8589		" " " Dowel Pin
1177 E		" " " Screw
17744		" " Hinge Stud
18488		" " Post
18489		" " " Guide
810 D		" " " " Cap Screw
1953		" " Roller and Screw Stud with 1655C and 37310
1655 C		Feed Regulator Roller and Screw Stud Nut
37310		" " " " " " Washer
1190 C		" " Stop Screw
39313		" " Swivel
1191 D		" " Thumb Screw
55458		Knife (needle thread)
55459		" (shuttle thread)
55321		" (stationary)
50117 J		" " Screw
18370		" Bar with 18373 and two 17822
18371		" " Cap
217 J	2	" " " Screw

No.	Name
18372	Knife Bar Connection with 17917
190 J 2	" " " Screw
7071 2	" " " " Washer
17915	" " " Slide Block
17917	" " " " " 17915 with 17916
17916	" " " " " Stud
39297	" " Driving Lever with 190J, 1420E, 17919 and 39298
1382 F	Knife Bar Driving Lever Hinge Screw
1681 C	" " " " " " Nut
39298	" " " " Lock Stud
17919	" " " " " " Spring
190 J	" " " " " " Screw
1420 E	" " " " " " Stop Screw
18373	" " Rack
17822 2	" " " Rivet
68757	" Cam Lever Body
68758	Knife Cam Lever Body 68757 with 1258D, 39330 and 39331
68759	Knife Cam Lever complete, Nos. 19793 and 68758
55468	" " " Bracket with 1396E
8589	" " " " Dowel Pin
670 E 2	" " " " Screw
50029 C	" " " Hinge Screw
68762	" " " " " Bushing with 51140E
1396 E	" " " " " Clamping Screw
51140 E	" " " " " Position Screw
1980	" " " Roller and Screw Stud with 1654C
1654 C	" " " " " " Nut

No.	Name
39330	Knife Cam Lever Slide with 1980
1255 D	" " " " Screw
39331	" " " " " Washer
19793	" " " " Steady Pin
17825	" HÖlder with 17826, 17830 and two 7298
55460	" " 17825 with 1198C, 17829, 55458 and 55459
17826	" " Pinion
7298	2 " " " Dowel Pin
17827	" " " Stud
17828	" " " " Bracket with 17827
50018 F	" " " " " Screw
1698 C	" " " " " " Nut
1198 C	" Screw
17829	" Thread Holder
17830	" " " Position Pin
17831	Needle Bar with 237F
68768	" " Connecting Link with 68769
377 C	" " " " Hinge Screw
1518 E	" " " " " " Nut
68769	" " " Stud with 1258AL
1258 AL	" " " " Set Screw
39350	" " Thread Nipper Driving Lever (adjustable) with 39351 and two 335J
39351	Needle Bar Thread Nipper Driving Lever Extension
335 J	2 " " " " " " " Screw
1196 C	" " " " " " Hinge Screw
39352	" " " " " " Spring
17834	" " " " Lever with 17835

No.	Name
17835	Needle Bar Thread Nipper Lever Bushing
1200 D	" " " " " Hinge Screw
39276	" " " " " Spring
1329 J	" " " " " " Screw
17837	" " " " " Rod
17838	" " " " " Adjusting Stud
1651 E	" " " " " " Lock Nut
17839	" " " " " Arm with 196F
196 F	" " " " " " Set Screw
17840	" " " " " Support
190 J	" " " " " " Screw
237 F	" Set Screw
6022	Oscillating Rock Shaft with 4784
55278	Oscillating Rock Shaft complete, Nos. 6022 and 55453
55452	" " " " " Hinge Pin
55453	" " " " " 55452 with 1513J
1513 J	" " " " " Nut
4784	" " " " " Oil Pad
18385	Oscillating Shaft
18386	" " " Crank
18387	Oscillating Shaft Crank complete, Nos. 237F, 1519E, 15171 and 18386
2049	Oscillating Shaft Crank Pin
237 F	" " " " " Set Screw
15170	" " " " " Slide Block
226 E	" " " " " Cap Screw
12424	" " " " " " Washer
1035 C	" " " " " Screw Stud

No.	Name
1519 E	Oscillating Shaft Crank Slide Block Screw Stud Nut
15171	Oscillating Shaft Crank Slide Block complete, Nos. 226E, 1035C 12424 and 15170
2058	Presser Bar
17841	" " Collar with two 196F
196 F 2	" " " Set Screw
17842	" " Guide Bracket with 453AL
453 AL	" " " Set Screw
17843	" " Lifting Lever
17844	" " " " Bracket
164 E 2	" " " " " Screw
1201 C	" " " " Hinge Screw
17845	" " " " Rod
39408	" " " " " 17845 with 17846
17846	" " " " " Chain
32675	" " Spring
68712	Pulley (loose) 2 3/4 in. diam., with 200584D
68713	" " 68712 with 68714
68714	" " Ball Bearing
51387 R	" " Cap Screw
200584 D	" " Oil Plug Screw
68715	" " Spacing Collar
68716	" (tight) 2 7/8 in. diam.
68720	" " 68716 with 1206C and 17854
2022	Pulley (tight) Pin
68717	Pulleys (ball bearing) complete, Nos. 51387R, 68713, 68715 and 68720
2996	Shuttle Bobbin
15140	" " Case Latch
2973	" " " " Lever

No.	Name
2974	Shuttle Bobbin Case Latch Lever Fulcrum Pin
2975	" " " " Spring
592 E	" " " " Stop Screw
15141	" " " Hinge, Nos. 2973, 2974 and 15140
15277	Shuttle Bobbin Case complete, Nos. 591F, 592E, 2975, 15141 and 15278
21562	Shuttle Body
591 F	" Tension Regulating Screw
15278	" " Spring
21561	" 1 11/16 in. diam., Nos. 2996, 15277 and 21562
68751	" Driver
68752	" " 68751 with two 462AL
462 AL 2	" " Set Screw'
18411	" Race Body
21623	" " Cap
662 AL	" " " Screw
2523	" " " Steady Pin
18429	" " Ring
55439 2	" " " Spring
1289 D 2	" " " " Screw
18430	Shuttle Race (flexible) complete, ^{Nos.} 662AL, 2523, 18411, 18429, 21623 and two each 1289D and 55439
171 J 2	Shuttle Race Screw
17853	Starting Lever
1262 C	" " Hinge Screw
1662 C	" " " " Nut
17886	" " Pitman
17854	Stop Cam
17855	" " Interlocking Rod
55388	" " " " Case

No.	Name
55389	Stop Cam Interlocking Rod Case 55388 with 18443 and two 193J
55418	Stop Cam Interlocking Rod Case 55389 with 63976 and two 1255D
55285	Stop Cam Interlocking Rod Case 55418 with 1318D, 17855, 17863, 17864, 39222 and 68739
39348	Stop Cam Interlocking Rod Case Bracket
55305	Stop Cam Interlocking Rod Case Bracket complete, Nos. 1182J, 1196C, 1204E, 1254C, 1262C, 1508E, 1662C, 17853, 17859, 17861, 17862, 17872, 17873, 39348, 55285 and two 898D
18494	Stop Cam Interlocking Rod Case Bracket 55305 with 39343, 39344 and two 1186D
16532	Stop Cam Interlocking Rod Case Bracket Dowel Pin
1343 E	" " " " " " Screw
1204 E	" " " " " Hinge Screw
17859	" " " " " Socket Joint
898 D	2 " " " " " " Cap Screw
39343	" " " " " Spring (flat)
50682 C	" " " " " Adjusting Screw
1520 E	" " " " " " " Nut
39344	" " " " " Bracket with 1520E and 50682C
1186 D	2 Stop Cam Interlocking Rod Case Spring Bracket Screw
17861	" " " " " Stop Stud
1254 C	" " " " " Screw Bushing
1508 E	" " " " " " " Lock Nut
17862	Stop Cam Interlocking Rod Case Stop Stud Spring
18443	" " " " " Wearing Block
193 J	2 " " " " " " Screw
17863	" " " " " Spring

No.	Name
17864	Stop Cam Interlocking Rod Stop
1318 D	" " " " " Screw
68739	" " " " " " Washer
3012	" " Pin
1206 C	" " Screw
2102 2	Tension Disc
1560 C	" Regulating Thumb Nut
600 C	" Screw Stud
16202	" " " 600C with 1560C
448 AL	" " " Set Screw
2103	Tension Spring
2105	" Thread Guard
56791	Tension complete, Nos. 2103, 2124, 16202 and two 2102
18392	Thread Take-up Cam with 446AL
446 AL	" " " Set Screw
18393	" " Lever with 1822
68775	" " " 18393 with 140414C
140414 C	" " " Hinge Screw
1822	" " " Roller and Stud
2124	" " Spring
2127	" " " Regulator Plate
233 J	" " " " " Adjusting Screw
17865	Thread Wiper Body
1207 D	" " " Hinge Screw
17866	" " " Hook
17867	" " " Support
641 C	" " " " Set Screw
17868	" " " Wire

No.		Name
337 J		Thread Wiper Body Wire Screw
17869		" " " " " Washer
55324		Throat Plate
55328		" " 55324 with 55326 and two 1208D
55326		" " Needle Hole Bushing
1208 D	2	" " " " " Screw
55462		Throat Plate complete, Nos. 1698C, 17828, 50018F, 50117J, 55321, 55328 and 55460
691 F	4	Throat Plate Screw
*15404		Trade Mark
15405	2	" " Rivet
17872		Trip Lever
1196 C		" " Hinge Screw
17873		Trip Lever Spring
1182 J		" " " Screw
17874	2	Tripping Point
190 J	2	" " Screw