

▲ BOTTLE IRON ▲ SAPPORO

PRESSING WITH SAPPORO IRON

NOW THAT YOUR IRON IS PROPERLY SET-UP, PLEASE READ THE FOLLOWING TIPS FOR PRESSING WITH PROFESSIONAL RESULTS:

- INITIALLY, TO ALLOW WATER TO ENTER INTO THE HOSE AND IRON, PRESS THE STEAM SWITCH. THIS MAY TAKE A FEW SECONDS, THEN YOU WILL SEE STEAM.
- BEGIN TO PRESS.
- FOR BEST RESULTS, IT IS ONLY NECESSARY TO PRESS THE STEAM SWITCH FOR A FEW SECONDS AT A TIME. IT IS NOT NECESSARY TO ACTIVATE THE STEAM SWITCH CONTINUOUSLY.
- THERE ARE SEVERAL SETTINGS ON YOUR TEMPERATURE DIAL. RECOMMENDED TEMPERATURE SETTINGS ARE AS FOLLOWS:
 - # 1, 2 – PREHEAT
 - # 3 – SILK AND DELICATE FABRICS (LOW TEMPERATURE)
 - # 4 – COTTON AND WOOL (MEDIUM TEMPERATURE)
 - # 5 – LINEN (HIGH TEMPERATURE)
- A TEFLON SHOE IS RECOMMENDED AND IS AVAILABLE FROM YOUR DISTRIBUTOR TO PREVENT GARMENT SHINE AND STARCH BUILD-UP.
- WHEN UNATTENDED OR NOT IN USE, ALWAYS TURN OFF AND UNPLUG YOUR IRON.

TROUBLE SHOOTING GUIDE


PROBLEM	PROBABLE CAUSE	SUGGESTED REMEDY
Iron does not heat.	No power to iron.	Check electric outlet
	Temperature dial is in "OFF" position.	Set temperature dial to No. 3, 4 or 5.
	Temperature dial is set on No. 1 or 2.	Set temperature dial to No. 3, 4 or 5.
No steam or very little steam.	Little or no water in bottle.	Fill bottle with water.
	Bottle not high enough.	Bottle must be 36" above the Pressing surfaces.
	Clogged filters.	Remove and rinse filter under water faucet.
	Clogged steam holes..	Clear holes with straightened paper clip.
Iron spits water.	Iron is not hot enough.	Turn temperature dial up(clockwise). Let iron heat up.
	Stream switch held down too long.	Release steam switch and let iron heat up.
Iron too hot.	Temperature dial is set too high.	Turn thermostat dial down (counter clockwise).
Iron not hot enough.	Temperature dial is set too low.	Turn thermostat dial up (clockwise).

▲ BOTTLE IRON ▲ SAPPORO

CEILING HOOK INSTALLATION INSTRUCTIONS


IMPORTANT : CAUTION – DO NOT SLIDE ELECTRICAL WIRE OR WATER HOSE OVER HOOK. SLIDE CHAIN LINK ONLY OVER HOOK.

CAUTION – INJURY TO PERSONS OR DAMAGE TO THE CEILING MAY RESULT IF THE BOTTLE OR MOUNTING HARDWARE IS PULLED FROM THE CEILING. TO AVOID SUCH INJURY, MOUNT ONLY TO CEILING MEMBERS THAT ARE STRUCTURALLY SOUND.

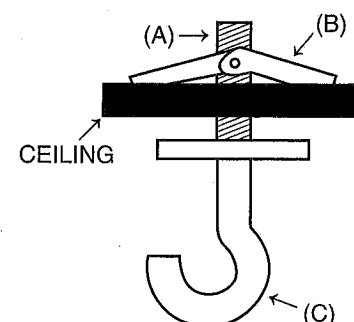

FOR HOLLOW CEILINGS:

1. DRILL 5/8" DIAMETER HOLE IN THE CEILING AT DESIRED HOOK LOCATION.
2. ASSEMBLE TOGGLE BOLT BY SCREWING BOLT (A) INTO TOGGLE (B).
3. INSERT FLAPS AND BOLT ASSEMBLY (A/B) HINGE UP INTO CEILING HOLE WITH THE BOLT (A) PROTRUDING THROUGH CEILING. LOCK ASSEMBLY BY TURNING HOOK (C) CLOCKWISE UNTIL FIRMLY SEATED.

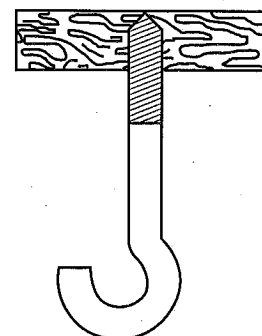

FOR WOOD BEAM CEILINGS

SCREW HOOK CLOCKWISE INTO CEILING UNTIL FIRMLY SEATED.

FOR EITHER METHOD

HANG THE BOTTLE ASSEMBLY BY A CHAIN FROM THE HOOK SO THAT THE BOTTOM OF THE BOTTLE IS 1 METER (1 YARD-STICK) FROM THE WATER INLET ON THE IRON.


▲ BOTTLE IRON ▲ **SAPPORO**

INSTRUCTIONS FOR USE AND INSTALLATION OF MODEL SP-527

HOW TO USE THE IRON

1. HANG BOTTLE 1 METER ABOVE PRESSING SURFACE. (SEE BOTTLE HANGING INSTRUCTION.)
2. CONNECT THE BLACK HOSE END TO THE IRON, AND CLEAR HOSE END TO THE BOTTLE.
3. EMPTY DEMINERALIZER PACKAGE INTO THE BOTTLE AND FILL IT WITH TAP WATER ONLY. (IF YOU WANT TO, USE THE DEMINERALIZER AS AN OPTION.)
4. TIE THE ELECTRICAL CORD AND HOSE TOGETHER.
5. PLUG THE IRON CORD INTO A GROUNDED ELECTRICAL OUTLET.
6. SET THE TEMPERATURE DIAL ON NO. 4 AND LET THE IRON HEAT UP FOR TEN MINUTES.
7. OPEN THE BOTTLE VALVE AND ALLOW THE HOSE TO FILL WITH WATER BY PRESSING THE STEAM SWITCH. THE IRON IS NOW READY FOR USE.
8. WHEN NOT PRESSING, PLACE THE IRON ON THE SUPPLIED IRON REST.
9. ALWAYS UNPLUG THE IRON WHEN UNATTENDED OR NOT IN USE.


DO NOT STAND IRON ON ITS BACK.

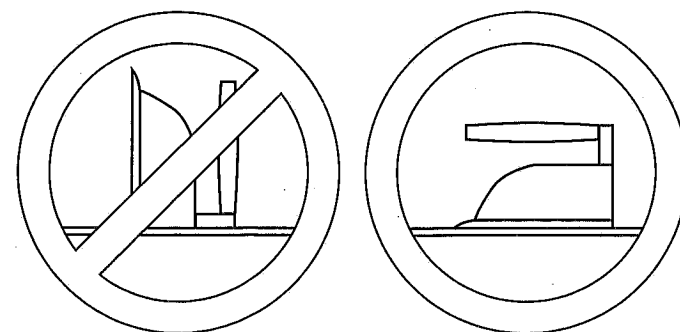

IMPORTANT NOTICE ABOUT DEMINERALIZER:


- THE DEMINERALIZER EXTENDS THE LIFE OF THE IRON & PREVENTS CALCIUM BUILD-UP.
- WHEN THE DEMINERALIZER CHANGES FROM BLUE TO BROWN, REPLACE IT BY ORDERING A NEW PACKAGE FROM YOUR DISTRIBUTOR.

DEMINERALIZER
(AVAILABLE AS AN OPTION)

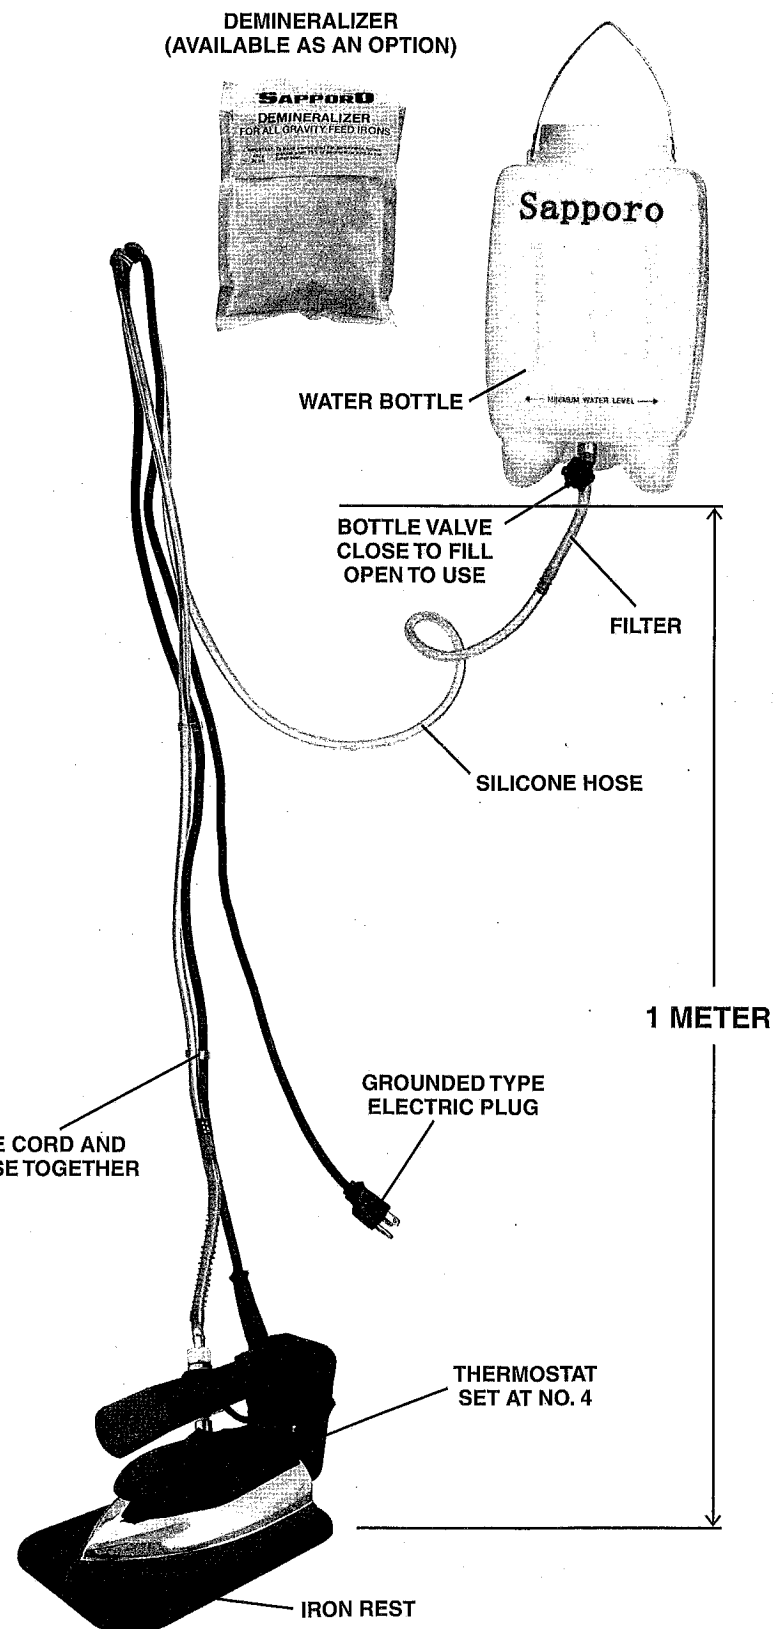

▲ BOTTLE IRON ▲ **SAPPORO**

PARTS LIST FOR MODEL SP-527

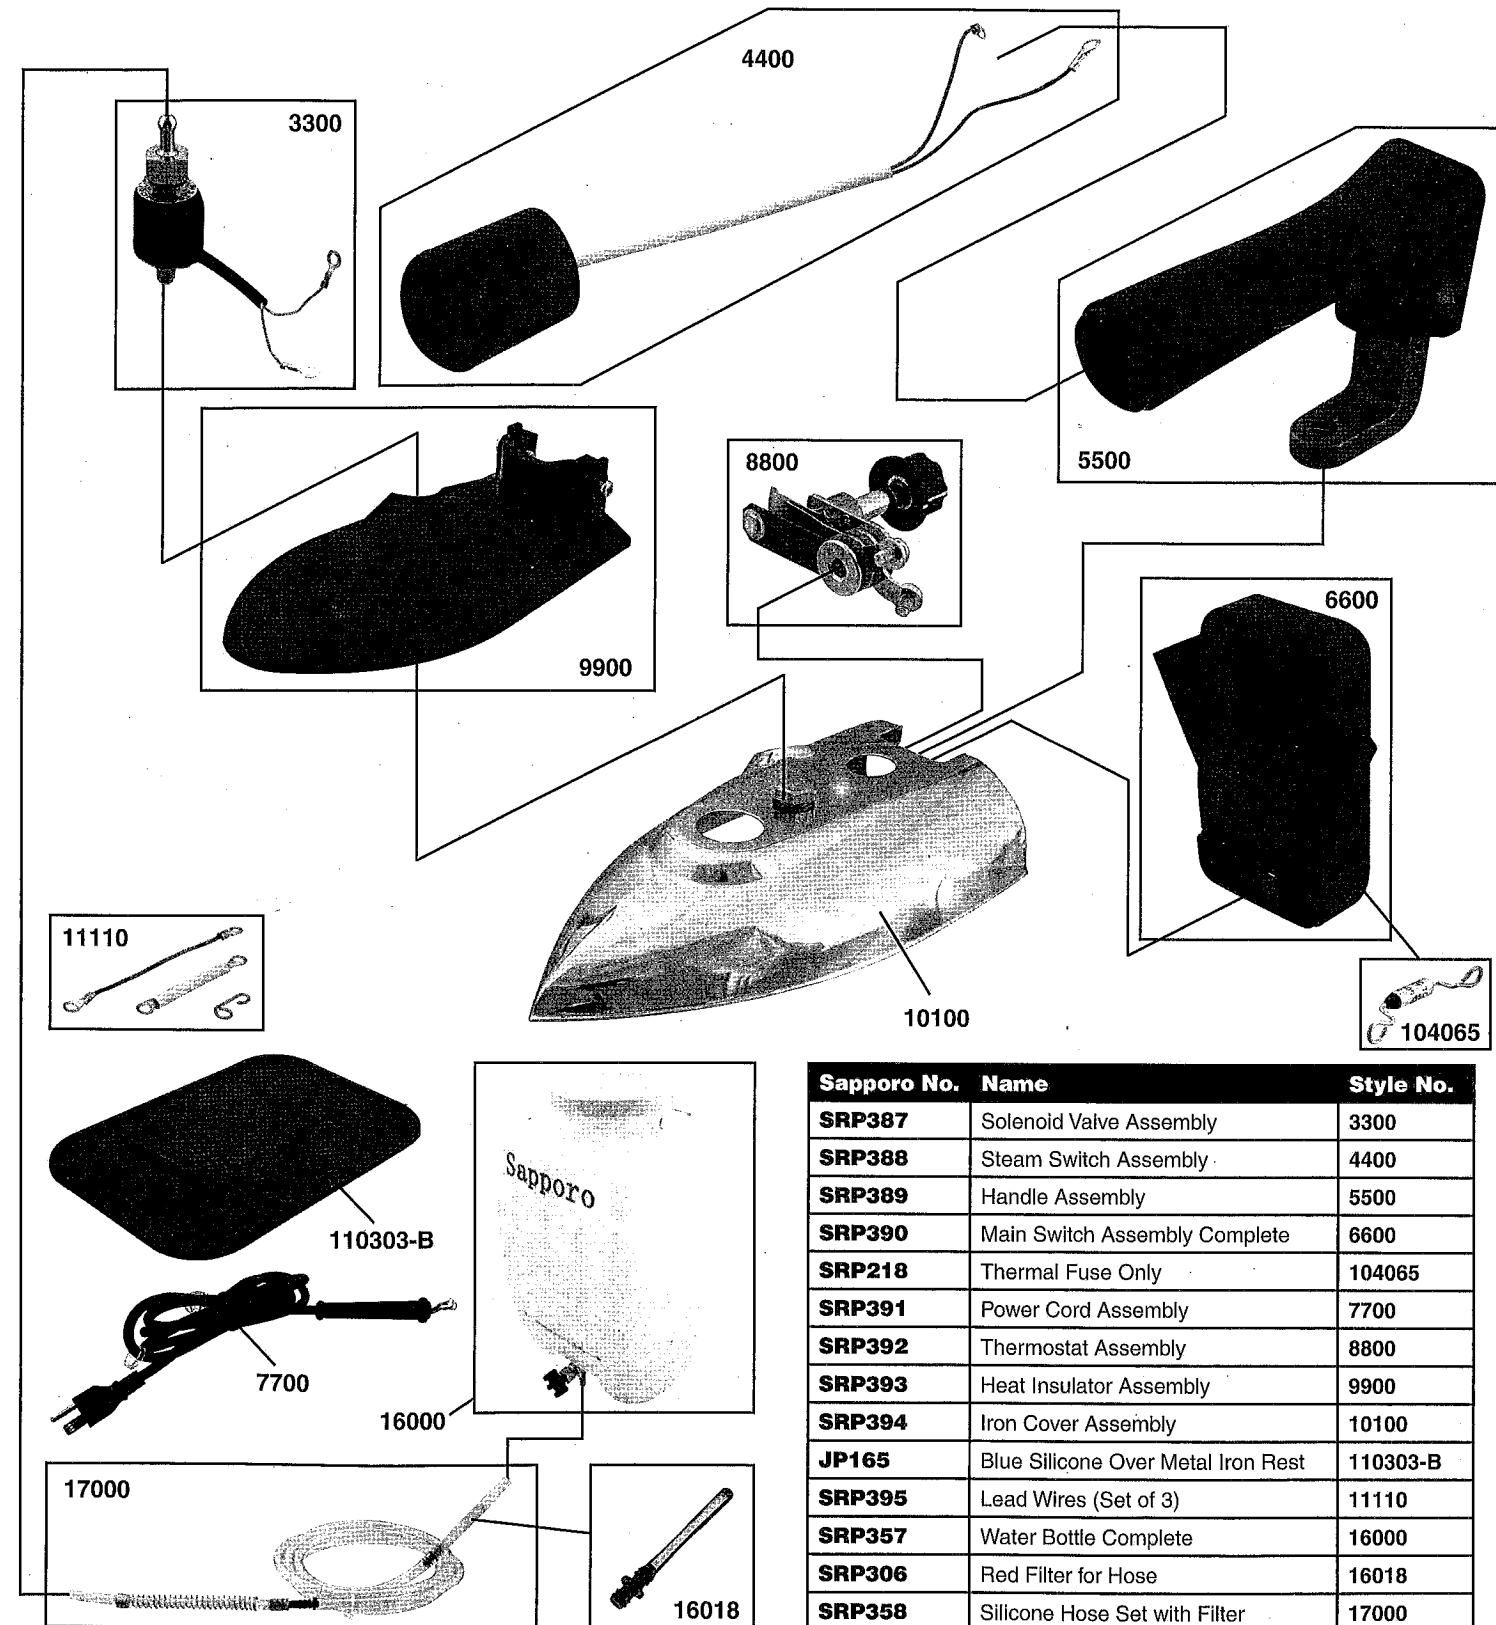

Sapporo No.	Name	Style No.
SRP387	Solenoid Valve Assembly	3300
SRP388	Steam Switch Assembly	4400
SRP389	Handle Assembly	5500
SRP390	Main Switch Assembly Complete	6600
SRP218	Thermal Fuse Only	104065
SRP391	Power Cord Assembly	7700
SRP392	Thermostat Assembly	8800
SRP393	Heat Insulator Assembly	9900
SRP394	Iron Cover Assembly	10100
JP165	Blue Silicone Over Metal Iron Rest	110303-B
SRP395	Lead Wires (Set of 3)	11110
SRP357	Water Bottle Complete	16000
SRP306	Red Filter for Hose	16018
SRP358	Silicone Hose Set with Filter	17000

JACOBSON PRODUCTS

P.O. BOX 24200
ST. LOUIS, MO USA 63130

JACOBSON PRODUCTS

P.O. BOX 24200
ST. LOUIS, MO USA 63130