



PARTS FOR MODEL: 10

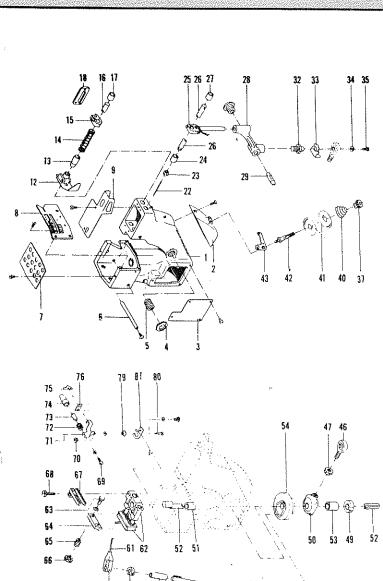

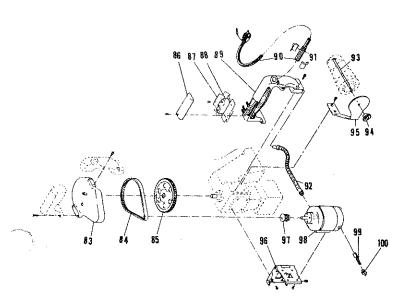

57 56

INDEX NO.	PART NO.	DESCRIPTION	OUANTETY
1	A100	Housing, Complete with Bushings	QUANTITY 1
	SA11 A121	Screw, for all Bushings Oiler	8 5
2	A119 SA27	Cover, Top	1 2
3	A103 SA20	Screw, Attaching, for A119 Cover, Side Nameplate Screw, Attaching, for A103	Î 4
4 5	A513 A512	Lock Ring Bearing, Cone	2 2
6	A214 SA20	Stud, Feed Dog Carrier Slide Screw, Attaching, for A214	1 2
7	A102 SA20	Cover, Looper Screw, Attaching, for A102	1
8	A21 SA34	Throat Plate	1 2
9	SA27 A101R	Screw, Attaching for Guide Plate Screw, Attaching for A210 Guard, Needle Bar	3 1
12	SA21 A400	Screw, Attaching, for A101R	3
16	SA04 SA14	Presser Foot, Complete Screw, set, for A400	1
13	A711 A413	Bolt, Hinging, for A400 Nut, for SA14	1
14 15	A414	Bushing, Presser Bar, Lower Spring, Presser Bar	1
16	A405R SA33	Clamp, Presser Bar Screw, Clamping, for A405R	1
17	A404 A412	Presser Bar Bushing, Presser Bar, Upper	1
18	A407R SA32	Lifter Guide Screw, Attaching, for A407P	i 2
22 23	D5 A501	Needle Locknut, Needle	
24 25	A504 A502	Bushing, Needle Bar, Lower Clamp, Needle Bar Complete Screw, Clamping, for A502	1
26	SA26 A500	Needie Bar	1
27 28	A508 A505	Bushing, Needle Bar, Upper Lever, Needle Bar	1
29	SA10 A511	Screw, for A505 Stud, Needle Bar Lever	<u>2</u> 1
32 33	A507 . A510	Stud Connecting Rod End Spring	1
34 35	A208 SA13	Washer, for SA13 Screw for A607R	1
37 40	A116 A115R	Screw for A607R Nut, Tension Spring, Tension	1
41 42	A114 A113	Disc, Tension Stud, Tension	2
43 46	A109R A607R	Thread Guide	î
47 49	A60BR	Bearing, Rod End Lockma, for D607	Ī
50	A603 SA03	Collar, Retaining for A600 Screw Clamping, for A605	1
50	A605 SA02	Connecting Rod and Eccentric, Complete Screw, Cone Point, for A605	ì
51	SA09 A602	Screw, Set for A605 Bushing, Main Shaft, Front	1
52 53	A600 A601	Main Shaft Bushing, Main Shaft, Rear	1
54	A310 SA24	Cam, Looper, Complete Screw, Cone Point, for A310 Screw, Set, for A310	1 1
55	SA23 A308	Stud, Cam Follower	1
56	A509 A307	Locknut, for D308 Arm, Cam Follower	1 1
57	SA26 A304	Screw, for A307 Collar, Looper Shaft	1
58	SA25 A303R	Screw, Clamping, for A304 Shaft, Looper	1
59 60	A306 A301R	Bushing, for A303R Holder, Looper	1
	SA29 SA19	Screw, Looper Set Screw, Clamping, for A301R	1
61 62	A300 A200	Looper Feed Dog Carrier Block and Slide	1
63	SA30 SA13	Screw, Feed Bog Adjusting Screw, for A205	4 2
64	A208 A205	Washer, for SA15 Slide Block, Adjusting	2
65 66	A206 A209	Stud, Slide, Block Adjusting Support Locknut, for A206	2 2
67 68	A203 SA22	Feed Dog Screw, Attaching for A203	1
69	SA15 A714	Screw, knife Bracket Lockwasher, for SA13	1
70 71	N001 A700	Locknut Bracket, Knife	1
72 73	A704 A707	Spring, Knife Tension Shaft	1
74 75	A708 A702	Bushing, for A707 Knife, Moving	l E
76	SA08 A703	Screw, Attaching, for A702 Knife, Stationary	2
79	SA07 A709R	Screw, Attaching, for A703 Roller	2 1
80 81	SA15 A712	Bolt, for A709 Extension, Knife Bracket Support	1
83	SA12	Screw, Attaching, for A712	2
84	A105 SA09	Guard, Belt Screw, Attaching, for 105	1
85	A909 A904	Belt Pulley, Machine	.]
86	A802 SA27	Cover, Switch Screw, Attaching, for A802	1 2
87 88	A807 A806	Insulation Switch	1
89	A814 A800	Screw, Switch Terminal Handle, Complete, with Cover	5
90	SA18 A808	Screw, Attaching, for A800 Cord Set	1
91	A809 SA11	Clamp, for A808 Screw, Attaching, for A809	2
92	A913-2 SA11	BX Moter Lead Serew, Attaching for A913-2 Bolt, Thread Clampling	1
93 94	A804 A805	Nut	1
95	A815 SA17	Thread Stand Screw, Attaching, for A815	1 2
96	A901 SA21	Motor Set Screw, for A901	1 4
97	A902 SA29	Pulley, Motor Screw, for A902	2
98	A900 SA16	Motor Screw, for motor	1 2
99 100	A915R A917R	Brush Screw, Brush-Holder Cap	2 2