

SINGER
12W12,W113,W116

LIST OF PARTS



MACHINES Nos. 12w12, 12w113 and 12w116

THE SINGER MANUFACTURING COMPANY

INDEX

| | PAGE |
|-------------------------------|------------|
| ACCESSORIES | 25 |
| BED FRAMES | 25 |
| BOBBIN WINDER | 26 |
| CABINET TRIMMINGS | 26 |
| FEED WHEELS | 30 |
| KNEE LIEGER | 27, 28, 29 |
| MACHINE No. 12w12 | 16 |
| " " 12w113 | 16 |
| " " 12w116 | 16 |
| NUMERICAL LIST OF PARTS | 4 |
| OBSOLETE PARTS | 40 |
| PRESSER FEET | 3 |
| ROLLER PRESSERS | 3 |
| STAND | 38 |
| THROAT PLATES | 34 |

From the library of: [William Needie Corp](#)

Instructions for Ordering

In ordering from this list, use **ONLY** the **PART** number in the **FIRST** column.

The number stamped on a Sewing Machine Part is the number of the Single Part only, except when the part includes Set Screws, Clamping Screws, Studs and Rollers spun on, Small Wires riveted, or Parts soldered together, etc., which it is necessary to furnish in combination.

Every combination of parts sent out has its specific number which, although not stamped on Parts (except in above cases) must be used when ordering the combination.

Each number always indicates the **SAME PART** in whatever list it appears, or for whatever Machine.

The letters after some of the numbers indicate the style of finish only, as follows:

- A. Hardened, Polished and Plated.
- B. Polished and Plated.
- C. Hardened only.
- D. Polished only.
- E. Soft, not polished.
- F. Hardened and Polished.
- H. Blued.

These letters **MUST BE USED** when they appear in the list and **AFTER** the number, as in the list.

In this series

- 200001 to 201500 are Screw Numbers.
- 201501 to 201800 are Nut Numbers.
- 201801 to 202000 are Roller Numbers.
- 202001 and upward are numbers of Machine Parts.

The figures in the second column refer only to the plate in which the illustration of the part is shown and are **NOT TO BE USED** in ordering.

Two or more numbers over a cut indicate that the difference between such parts is not visible in an illustration.

Parts marked with an asterisk (*) are furnished only when repairs are made at the factory.

LIST OF PARTS COMPLETE

FOR

MACHINE No. 12w12

WHEEL FEED, ROLLER PRESSER

For Leather and Gloves.

| No. | Plate | Name |
|---------|-------|--|
| *204161 | - | Arm with 200439c, 202036 and 204705 |
| 204163 | 12718 | " Cap |
| 200278u | 10431 | " " Screw |
| 202248 | 12726 | " " Washer |
| 204235 | 12725 | " Position Pin (3) |
| 200963e | 10434 | " Screw (3) |
| 202005 | 10434 | " " Washer (3) |
| 204164 | 12719 | " Shaft |
| 204705 | 10569 | " " Bushing (front) |
| 200439c | 10434 | " " " Position Screw.. |
| 204165 | 10569 | " " Connection with four 200054e (2) |
| 200054e | 10434 | Arm Shaft Connection Screw |
| 204173 | 12727 | Balance Wheel, 5 1/2 in. diam. (belt groove 2 1/2 in. diam.), with 200328c and 200335c |
| 200062u | 10434 | Balance Wheel Adjusting Screw .. |
| 200328c | 10434 | " " Position Screw ... |
| 200335c | 10434 | " " Set Screw |
| *204175 | - | Bed with 202062, 204245, 204393 and two 200516e |
| 202258 | 12153 | Bed Hinge Connection (2) |
| 200570e | 10434 | " " " Screw (4) |
| 206105 | 10569 | " Slide (back) |
| 204177 | 10569 | " " (front) |
| 204178 | 10442 | Bobbin |
| 208462 | - | " Case (solid center bearing) with 204181 |
| 204181 | 10442 | Bobbin Case Position Finger |
| 204182 | 10442 | " " Tension Spring |
| 200598c | 10442 | " " " " Ad- justing Screw |
| 200592c | 10442 | Bobbin Case Tension Spring Screw |
| 208463 | 10442 | Bobbin Case complete, Nos. 200592c, 200598c, 204182 and 208462 |

From the library of: Diamond Needle Corp

| No. | Plate | Name |
|---------|-------|--|
| 204184 | 10570 | Face Plate with 200355c, 200368a, 200688c, 200999, 204185, 204281 and two 200397H |
| 200053c | 12725 | Face Plate Screw |
| 204185 | 12725 | " " Thread Guide |
| 200397H | 12309 | " " " " Set Screw |
| 204300 | 12719 | Face Plate complete, Nos. 200113c, 200135c, 200399c, 200319c, 200577H, 204059, 204184, 204267, 204272, 204277 to 204280 and 204330 .. |
| 204301 | 10468 | Feed Driving Cam with 200382c and 200437 |
| 204192 | 10436 | Feed Driving Cam Fork Lever with 204195 and 204293 |
| 204193 | 10569 | Feed Driving Cam Fork Lever Con- nection with 200668c and 201525c |
| 204194 | 10438 | Feed Driving Cam Fork Lever Con- nection Clamp with 200031 .. |
| 200031F | 10438 | Feed Driving Cam Fork Lever Con- nection Clamp Pinch Screw |
| 200668c | 10438 | Feed Driving Cam Fork Lever Con- nection Clamp Screw Stud |
| 201525c | 12725 | Feed Driving Cam Fork Lever Con- nection Clamp Screw Stud Nut |
| 200002E | 10436 | Feed Driving Cam Fork Lever Con- nection Hinge Screw |
| 201522E | 10436 | Feed Driving Cam Fork Lever Con- nection Hinge Screw Nut |
| *204195 | --- | Feed Driving Cam Fork Lever Shaft |
| 204197 | 10436 | Feed Driving Cam Fork Lever Shaft Collar with 200113c |
| 200113c | 10436 | Feed Driving Cam Fork Lever Shaft Collar Set Screw |
| 204293 | 10436 | Feed Driving Cam Fork Lever Shaft Position Pin |
| 204196 | 10436 | Feed Driving Cam Fork Lever Shaft Sleeve (split) |
| 200043c | 10436 | Feed Driving Cam Fork Lever Shaft Sleeve Set Screw |
| 201524E | 10436 | Feed Driving Cam Fork Lever Shaft Sleeve Set Screw Nut .. |
| 204198 | 10569 | Feed Driving Cam Fork Lever com- plete, Nos. 204192 and 204194 .. |
| 200437c | 10436 | Feed Driving Cam Position Screw |
| 200382c | 12725 | " " " Set Screw |
| 204199 | 12719 | " " Rock Shaft |
| 206554 | --- | " " " " 204199 with 200002E, 201522E and 204193 |

| No. | Plate | Name |
|---------|-------|--|
| 202305 | 10436 | Feed Driving Rock Shaft Center (2) |
| 200043c | 10436 | " " " " " Set Screw (2) |
| 204201 | 12725 | Feed Lifting Cam Crank with 200335c, 200431c, 200669c and 201530c |
| 200431c | 12725 | Feed Lifting Cam Crank Position Screw |
| 200335c | 10434 | Feed Lifting Cam Crank Set Screw |
| 204206 | 10571 | " Regulating Handle |
| 204207 | 10569 | " " " 204206 with 200098c, 202622, 204208 to 204210, 204213 and 204925 |
| 204208 | 10438 | Feed Regulating Handle Adjustable Stop |
| 200098c | 10438 | Feed Regulating Handle Adjustable Stop Screw |
| 204925 | 12718 | Feed Regulating Handle Adjustable Stop Screw Washer |
| 204209 | 10438 | Feed Regulating Handle Position Pin |
| 204210 | 10438 | Feed Regulating Handle Shaft .. |
| 204211 | 10438 | " " " " Crank with 200098c |
| 204212 | 10438 | Feed Regulating Handle Shaft Crank Link |
| 200271c | 10438 | Feed Regulating Handle Shaft Crank Link Hinge Screw (lower) |
| 200291c | 10438 | Feed Regulating Handle Shaft Crank Link Hinge Screw (upper) |
| 200098c | 10438 | Feed Regulating Handle Shaft Crank Set Screw |
| 204213 | 10438 | Feed Regulating Handle Shaft Sleeve (split) |
| 200362c | 10441 | Feed Regulating Handle Shaft Sleeve Set Screw |
| 202622 | 10438 | Feed Regulating Handle Shaft Sleeve Washer |
| 202036 | 10438 | Feed Regulating Handle Stop Pin |
| 204214 | --- | Feed Regulating Handle complete, Nos. 200291c, 204207, 204211 and 204212 |
| 204302 | 10465 | Feed Wheel |
| 223010 | 12725 | " " Driver with 204189, 204311, two each 201209E and 201515E |
| 201209E | 12725 | Feed Wheel Driver Clutch Stud .. |
| 201515E | 12725 | " " " " " Nut |
| 204308 | 10467 | " " " Crank with two 200383c |

| No. | Plate | Name |
|---------|-------|--|
| 200266D | 10467 | Feed Wheel Driver Crank Hinge Screw |
| 200383C | 10467 | Feed Wheel Driver Crank Set Screw |
| 204335 | 12725 | Feed Wheel Driver Guide |
| 200162D | 10467 | " " " " Screw .. |
| 204310 | 10467 | " " " " Link |
| 200263F | 10467 | " " " " Hinge Screw |
| 201528E | 10467 | " " " " " " " " Nut |
| 204311 | 10467 | Feed Wheel Driver Position Pin |
| 204312 | 10467 | " " " " Spring (spiral) |
| 204189 | 12725 | " " " " " Hook (lower) |
| 204190 | 12725 | Feed Wheel Driver Spring Hook (upper) |
| 223011 | ---- | Feed Wheel Driver and Clutch complete, Nos. 200263F, 200266D, 201528E, 204308, 204310 and 223010 |
| 204314 | 10465 | Feed Wheel Frame with 200383C, 204190 and 204321 |
| 204315 | 10467 | Feed Wheel Frame Adjusting Eccentric |
| 200347C | 10467 | Feed Wheel Frame Adjusting Eccentric Set Screw |
| 200383C | 10467 | Feed Wheel Frame Set Screw |
| 204316 | 10468 | " " " " Shaft |
| 202305 | 10436 | " " " " " Center (2) |
| 200043C | 10436 | " " " " " " " " Set Screw (2) |
| 204317 | 10467 | Feed Wheel Friction Spring |
| 200162D | 10467 | " " " " " " Screw |
| 204318 | 10466 | Feed Wheel Frame complete, Nos. 204302, 204314, 204317, 204320, 204335, 206047, two each 200162D and 200162D |
| 200162D | 10467 | Feed Wheel Guide Screw |
| 206047 | 12725 | " " " " Retaining Clutch with 204189 |
| 204320 | 10467 | Feed Wheel Retaining Clutch Spring |
| 204189 | 12725 | " " " " " " " " Hook |
| 204321 | 10467 | Feed Wheel Retaining Clutch Spring Pin |
| 207811 | ---- | Feed Wheel complete, Nos. 204318 and 223011 |
| 204216 | 10571 | Hook (sewing) with 204217 |
| 204217 | 12726 | " " Bobbin Case Stud |

| No. | Plate | Name |
|---------|-------|--|
| 204218 | 10572 | Hook Bracket with 200379C and three 204234 |
| 204219 | 10448 | Hook Bracket 204218 with 204226C |
| 204223 | " | " " " 204219 with 204222, 204224, 204225, 204221, two each 204223 and 204233 |
| 200379C | 10572 | Hook Bracket Adjusting Screw (lower) |
| 200334C | 10572 | Hook Bracket Adjusting Screw (upper) |
| 204222 | 10571 | Hook Bracket Bobbin Case Stop (hinged) |
| 204223 | 10448 | Hook Bracket Bobbin Case Stop Hinge Pin |
| 204224 | 10572 | Hook Bracket Bobbin Case Stop Latch |
| 204223 | 10448 | Hook Bracket Bobbin Case Stop Latch Hinge Pin |
| 204225 | 10572 | Hook Bracket Bobbin Case Stop Latch Spring |
| 200562C | 10572 | Hook Bracket Screw (lower) |
| 200564C | 10572 | " " " " (upper) |
| 204225 | | Hook Bracket complete, Nos. 204216 and 204223 |
| 204239 | 10571 | Hook Driver with 204242 and 204243 |
| 204292 | 10571 | " " " Bushing |
| 208246 | " | " " " Crank |
| 204240 | 12726 | " " " " 208246 with 200378C, 200662C, 201530C and two 200345C |
| 204241 | 12725 | Hook Driver Crank Link |
| 200669C | 10448 | " " " " " Stud |
| 201530C | 10448 | " " " " " " Nut |
| 200345C | 10448 | " " " " " Set Screw (long) |
| 200378C | 10426 | " " " " " " (short) |
| 200662C | 10448 | " " " " " Stud |
| 201530C | 10448 | " " " " " Nut |
| 204242 | 12726 | " " " Pin |
| 204242 | 12726 | " " " Washer |
| 204244 | 12719 | " " " Driving Shaft |
| 204245 | 10569 | " " " " Bearing |
| 209126 | 10434 | " " " " " Position Pin |
| 200516F | 10434 | Hook Driving Shaft Bearing Screw |
| 204246 | 10434 | " " " " Collar with two 200383C |
| 200383C | 10467 | Hook Driving Shaft Collar Set Screw |
| 204226C | 10447 | Hook Race, .156 in. thick, 1.906 in. diameter |

| No. | Plate | Name |
|---------|-------|--|
| 204324 | 11482 | Hook Race Cap (steel) |
| 204230 | 10572 | " " " Spring |
| 204233 | 10448 | " " " " 204230 with 200802E |
| 200802E | 10448 | Hook Race Cap Spring Screw |
| 204234 | 10572 | " " Position Pin |
| 202445 | 11125 | Knee Lifter Connection Lever with 202446 |
| 227311 | - - - | Knee Lifter Connection Lever 202445 with 200224u, 200262u, 227302 and 227308 |
| 200224u | 10573 | Knee Lifter Connection Lever Hinge Screw |
| 227308 | 11125 | Knee Lifter Connection Lever Lift- ing Rod with 202302 |
| 202302 | 12718 | Knee Lifter Connection Lever Lift- ing Rod Cotter Pin |
| 202446 | 12718 | Knee Lifter Connection Lever Pin |
| 227302 | 11125 | " " Lifting Lever |
| 200262u | 12718 | " " " " Hinge Screw |
| 208613 | 12719 | Needle Bar (hollow) |
| 204247 | - - - | " " 208613 with 200425e, 200175b and 204250 |
| 204248 | 10442 | Needle Bar Connecting Link |
| 200658c | 10573 | " " " " Hinge Screw Stud |
| 201519c | 10573 | Needle Bar Connecting Link Hinge Screw Stud Nut |
| 204249 | 10573 | Needle Bar Connecting Stud with 200072c and 202277 |
| 202277 | - - - | Needle Bar Connecting Stud Oil Packing (wick) |
| 200072c | 10573 | Needle Bar Connecting Stud Pinch Screw |
| 204326 | - - - | Needle Bar Packing Cord (2) |
| 200504E | 10573 | " " Screw Bushing (lower) |
| 200503B | 10573 | " " " " (upper) |
| 204250 | 10573 | " " Thread Guide |
| 200175b | 10442 | " " " " Set Screw |
| 200125F | 10442 | " Set Screw |
| 204252 | 10441 | Presser Bar Lifter |
| 200550c | 10441 | " " " Hinge Screw .. |
| 204253 | 10441 | " " Lifting Bracket with 200086c |
| 200086c | 10441 | Presser Bar Lifting Bracket Pinch Screw |
| 204254 | 10441 | Presser Bar Lifting Bracket Posi- tion Guide |

| No. | Plate | Name |
|---------|-------|---|
| 200362c | 10441 | Presser Bar Lifting Bracket Posi- tion Guide Set Screw |
| 204327 | - - - | Presser Bar Packing Washer (felt) |
| 200504E | 10573 | " " Screw Bushing (lower) |
| 204258 | 12718 | " " Spring |
| 200491B | 10441 | " " Thumb Screw (pres- sure regulating) |
| 201910 | 10169 | Roller Presser, 1 1/2 in. diam., 1/2 in. face (coarse), with 200551E and 201534u |
| 204328 | 11293 | Roller Presser Arm |
| 204570 | 11293 | " " " " 204328 with 201910 |
| 202560 | 11293 | Roller Presser Arm Bracket (swing) |
| 204575 | - - - | " " " " 202560 with 200096b and 204570 |
| 200675c | 11293 | Roller Presser Arm Bracket Posi- tion Screw Stud |
| 202558 | 11293 | Roller Presser Arm Bracket Spring |
| 202559 | 11293 | " " " " " " Stop |
| 200141E | 11293 | Roller Presser Arm Bracket Spring Stop Screw |
| 200096b | 11293 | Roller Presser Arm Screw |
| 204495 | - - - | " " Bar |
| 200551E | 11293 | " " Hinge Screw |
| 201534u | 11293 | " " " " Nut |
| 204576 | - - - | Roller Presser and Bar complete, Nos. 200675c, 202558, 202559, 204495, 204575 and two 200141E . |
| 202068 | 12153 | Spool Holder Base |
| 200575u | 12718 | " " " Screw |
| 204296 | 12153 | " " Wire |
| 200079u | 12718 | " " " Hinge Screw .. |
| 204297 | 12153 | Spool Holder complete, Nos. 200079u, 202068 and 204296 |
| 204261 | 10445 | Take-up Cam with 200335c, 200383c, 200430c, 200658c and 201519c .. |
| 203172 | 10445 | Take-up Cam Friction Washer |
| 200430c | 10445 | " " Position Screw |
| 200383c | 10467 | " " " " Check Screw |
| 200335c | 10434 | Take-up Cam Set Screw |
| 204262 | 10445 | " Lever |
| 206556 | - - - | " " 204262 with 204263 ... |
| 204263 | 10445 | " " Bearing with 204264 .. |
| 204264 | 10445 | " " " Position Pin .. |
| 200042c | 10445 | " " " Screw |
| 201816 | 10445 | " " Roller |

| No. | Plate | Name |
|---------|-------|--|
| 201266 | 10445 | Take-up Lever complete, Nos. 200012f, 201816 and 206556 |
| 202402 | 12309 | Tension Disc |
| 202090 | 12309 | " " Position Pin |
| 204267 | 10573 | " Release Lever |
| 200688c | 12725 | " " " Position Screw |
| 200309e | 12309 | " " " Screw |
| 202075 | 12309 | " " Plunger |
| 215609 | — | " " Slide |
| 204268 | 10573 | " " " 215609 with 204269 |
| 204269 | 10573 | " " " Spring |
| 202407 | 12309 | " Spring |
| 200632n | 12309 | " Stud |
| 200397n | 12309 | " " Set Screw |
| 201572n | 12309 | " Thumb Nut |
| 204271 | 12309 | " Washer |
| 204272 | 12309 | Tension complete, Nos. 200632n, 201572n, 202075, 202407, 204271 and two 202402 |
| 204273 | 10573 | Thread Controller Adjusting Collar with 200684n (for Presser Bar) |
| 200684n | 10573 | Thread Controller Adjusting Collar Screw |
| 204274 | 12309 | Thread Controller Plate |
| 200577n | 10573 | " " " Screw |
| 202098 | 12309 | " " Roller |
| 204275 | 12309 | " " " Guard |
| 202084 | 12309 | " " " Washer |
| 200300c | 12309 | " " " Screw |
| 204276 | 12309 | " " Spring |
| 204333 | 12309 | " " " Guard |
| 200581n | 12309 | " " " Screw |
| 204277 | 12309 | " " " Stop |
| 204278 | 12309 | " " " Driving Gear |
| 200319c | 12309 | Thread Controller Spring Stop Driving Gear Hinge Screw |
| 200135c | 12309 | Thread Controller Spring Stop Screw |
| 204279 | 12309 | Thread Controller Spring Stud with 204925 |
| 200355n | 10573 | Thread Controller Spring Stud Set Screw |
| 204925 | 12718 | Thread Controller Spring Stud Washer |
| 205987 | 12309 | Thread Controller complete, Nos. 200300c, 200581n, 202084, 202098, 204274, 204275 and 204333 |
| 204280 | 12309 | Thread Controller and Spring complete, Nos. 204276 and 205987 |

| No. | Plate | Name |
|---------|-------|--|
| 204329 | 10468 | Thread Oiler (felt) |
| 204330 | 10468 | " " Bracket with 204329 |
| 200413f | 10436 | " " " Screw |
| 204281 | 12309 | " Retainer Guide Wire |
| 204091 | 12309 | " " Sleeve |
| 204092 | 12309 | " " Spring |
| 204058 | 12309 | " " Stud |
| 204368n | 12309 | " " " Set Screw |
| 204059 | 12309 | Thread Retainer complete, Nos. 202091, 202092 and 204058 |
| 204222 | 10606 | Throat Plate, 53 elongated needle hole, for needle sizes 14 and 15 |
| 204062 | 10573 | Throat Plate Position Pin |
| 204577n | 10573 | " " Screw |

MACHINE No. 12w113

WHEEL FEED. ROLLER PRESSER

For Leather and Gloves

The same as Machine No. 12w12 with the following exception:

| No. | Plate | Name |
|---------|-------|--|
| *204290 | ----- | Arm with 200439c, 202036 and 204705, in place of 204161 |
| 204291 | 12727 | Arm Shaft, in place of 204164 |
| *204292 | ----- | Bed with 202062, 204245, 204393 and two 200516E, in place of 204175 |
| 204294 | 12727 | Feed Driving Rock Shaft, in place of 204199 |
| 206555 | ----- | Feed Driving Rock Shaft 204294 with 200002e, 201522e and 204193, in place of 206554 |
| 204295 | 12727 | Hook Driving Shaft, in place of 204244 |
| 227312 | ----- | Knee Lifter Connection Lever 202445 with 200224u, 200262u, 227303 and 227308, in place of 227311 |
| 227303 | 11125 | Knee Lifter Lifting Lever, in place of 227302 |

From the library of: Diamond Needle Corp

LIST OF PARTS COMPLETE

FOR

MACHINE No. 12w116

WHEEL FEED. ROLLER PRESSER. LOOSE PULLEY

For Leather and Gloves.

| No. | Plate | Name |
|---------|-------|--|
| *204290 | ----- | Arm with 200439c, 202036 and 204705 |
| 204163 | 12718 | Arm Cap |
| 200278u | 10434 | " " Screw |
| 202248 | 12726 | " " " Washer |
| 204235 | 12725 | " Position Pin (2) |
| 200963u | 10434 | " Screw (3) |
| 202005 | 10434 | " " Washer (3) |
| 204291 | 12727 | " Shaft |
| 204705 | 10569 | " " Bushing (front) |
| 200439c | 10434 | " " " Position Screw .. |
| 204165 | 10569 | " " Connection with four 200054e (2) |
| 200054e | 10434 | Arm Shaft Connection Screw ... |
| 204168 | 10570 | Balance Wheel, 6½ in. diam., with 200328e and 200335e |
| 200062u | 10434 | Balance Wheel Adjusting Screw .. |
| 213734 | 10571 | " " Friction Washer .. |
| 200328e | 10434 | " " Position Screw |
| 208783 | 10569 | " " Pulley (loose), 2½ in. diameter |
| 204341 | 10434 | Balance Wheel Pulley Spring Washer |
| 200335e | 10434 | Balance Wheel Set Screw |
| 201569R | 10434 | " " Thumb Nut with 200609F |
| 200609F | 10434 | Balance Wheel Thumb Nut Stop Screw |
| 202016 | 10434 | Balance Wheel Thumb Nut Stop Washer |
| 204171 | 10570 | Balance Wheel (belt groove 2½ in. diam.) complete, Nos. 201569R, 202016, 204168, 204341 and 208783 |
| *204292 | ----- | Bed with 202062, 204245, 204393 and two 200516E |

| No. | Plate | Name |
|---------|-------|--|
| 202258 | 12153 | Red Hinge Connection (2) |
| 200570E | 10434 | " " " " Screw (1) |
| 206105 | 10569 | " Slide (back) |
| 204177 | 10569 | " " (front) |
| 204178 | 10442 | Bobbin |
| 208462 | ---- | " Case (solid center bearing) with 204181 |
| 204181 | 10442 | Bobbin Case Position Finger |
| 204182 | 10442 | " " Tension Spring |
| 200598C | 10442 | " " " " Adjust- ing Screw |
| 200592C | 10442 | Bobbin Case Tension Spring Screw |
| 208463 | 10442 | Bobbin Case complete, Nos. 200592C, 200598C, 204182 and 208462 |
| 202186 | 11115 | Bobbin Winder Frame |
| 202187 | 11115 | " " " " 202186 with 202135, 202136, 202189 and 204925 |
| 208461 | ---- | Bobbin Winder Frame 202187 with 200219C and 202188 |
| 200219D | ---- | Bobbin Winder Frame Hinge Screw |
| 202188 | 11115 | " " " Spring |
| 202135 | 11115 | " " " Stop Pin |
| 202136 | 11115 | " " Pulley |
| 202189 | 11115 | " " Spindle |
| 204925 | 12718 | " " Washer |
| 204184 | 10570 | Face Plate with 200355B, 200363B, 200688C, 202090, 204185, 204281 and two 200397B |
| 200053C | 12725 | Face Plate Screw |
| 204185 | 12725 | " " Thread Guide |
| 200397B | 12309 | " " " " Set Screw |
| 204300 | 12719 | Face Plate complete, Nos. 200413E, 200435C, 200309E, 200319C, 200571B, 204059, 204181, 204267, 204272, 204277 to 204280 and 204330 |
| 204301 | 10468 | Feed Driving Cam with 200382C and 200437C |
| 204192 | 10436 | Feed Driving Cam Fork Lever with 204195 and 204293 |
| 204193 | 10569 | Feed Driving Cam Fork Lever Con- nection with 200668C and 204525E |
| 204194 | 10438 | Feed Driving Cam Fork Lever Con- nection Clamp with 200031E ... |
| 200031E | 10438 | Feed Driving Cam Fork Lever Con- nection Clamp Pinch Screw ... |
| 200668C | 10438 | Feed Driving Cam Fork Lever Con- nection Clamp Screw Stud |
| 201525E | 12725 | Feed Driving Cam Fork Lever Con- nection Clamp Screw Stud Nut |

| No. | Plate | Name |
|---------|-------|---|
| 200002E | 10436 | Feed Driving Cam Fork Lever Con- nection Hinge Screw |
| 201522E | 10436 | Feed Driving Cam Fork Lever Con- nection Hinge Screw Nut |
| 204195 | ---- | Feed Driving Cam Fork Lever Shaft |
| 204197 | 10436 | Feed Driving Cam Fork Lever Shaft Collar with 200113E |
| 200113E | 10436 | Feed Driving Cam Fork Lever Shaft Collar Set Screw |
| 204293 | 10436 | Feed Driving Cam Fork Lever Shaft Position Pin |
| 204196 | 10436 | Feed Driving Cam Fork Lever Shaft Sleeve (split) |
| 200043C | 10436 | Feed Driving Cam Fork Lever Shaft Sleeve Set Screw |
| 201524E | 10436 | Feed Driving Cam Fork Lever Shaft Sleeve Set Screw Nut ... |
| 204198 | 10569 | Feed Driving Cam Fork Lever com- plete, Nos. 204192 and 204194 ... |
| 200437C | 10436 | Feed Driving Cam Position Screw |
| 200382C | 12725 | " " " Set Screw ... |
| 204291 | 12727 | " " Rock Shaft |
| 206555 | ---- | " " " " 204294 with 200002C, 201522C and 204193 ... |
| 202305 | 10436 | Feed Driving Rock Shaft Center (2) |
| 200043C | 10436 | Feed Driving Rock Shaft Center Set Screw (2) |
| 204201 | 12725 | Feed Lifting Cam Crank with 200335C, 200431C, 200669C and 201530E |
| 200431C | 12725 | Feed Lifting Cam Crank Position Screw |
| 200335C | 10431 | Feed Lifting Cam Crank Set Screw |
| 204206 | 10571 | " Regulating Handle |
| 204207 | 10569 | " " " " 204206 with 200098E, 202622, 204208 to 204210 and 204925 |
| 204208 | 10438 | Feed Regulating Handle Adjustable Stop |
| 200098E | 10438 | Feed Regulating Handle Adjustable Stop Screw |
| 204925 | 12718 | Feed Regulating Handle Adjustable Stop Screw Washer |
| 204209 | 10438 | Feed Regulating Handle Position Pin |
| 204210 | 10438 | Feed Regulating Handle Shaft |

| No. | Plate | Name |
|---------|-------|--|
| 204211 | 10438 | Feed Regulating Handle Shaft Crank with 200098E |
| 204212 | 10438 | Feed Regulating Handle Shaft Crank Link |
| 200271E | 10438 | Feed Regulating Handle Shaft Crank Link Hinge Screw (lower) |
| 200291E | 10438 | Feed Regulating Handle Shaft Crank Link Hinge Screw (upper) |
| 200098E | 10438 | Feed Regulating Handle Shaft Crank Set Screw |
| 204213 | 10438 | Feed Regulating Handle Shaft Sleeve (split) |
| 200362c | 10441 | Feed Regulating Handle Shaft Sleeve Set Screw |
| 202622 | 10438 | Feed Regulating Handle Shaft Sleeve Washer |
| 202036 | 10438 | Feed Regulating Handle Stop Pin |
| 204214 | --- | Feed Regulating Handle complete, Nos. 200291E, 204207, 204211 and 204212 |
| 204302 | 10465 | Feed Wheel |
| 223010 | 12725 | " " Driver with 204189, 204311, two each 201209E and 201515E |
| 201209E | 12725 | Feed Wheel Driver Clutch Stud ... |
| 201515E | 12725 | " " " " " Nut |
| 204308 | 10467 | " " " Crank with two 200383c |
| 200266d | 10467 | Feed Wheel Driver Crank Hinge Screw |
| 200383c | 10467 | Feed Wheel Driver Crank Set Screw |
| 204335 | 12725 | Feed Wheel Driver Guide |
| 200162d | 10467 | " " " " Screw ... |
| 204310 | 10467 | " " " Link |
| 200263F | 10467 | " " " " Hinge Screw |
| 201528E | 10467 | " " " " " " Nut |
| 204311 | 10467 | Feed Wheel Driver Position Pin.. |
| 204312 | 10467 | " " " Spring (spiral) |
| 204189 | 12725 | " " " " Hook (lower) |
| 204190 | 12725 | Feed Wheel Driver Spring Hook (upper) |
| 223011 | --- | Feed Wheel Driver and Clutch complete, Nos. 200263E, 200266d, 201528E, 204308, 204310 and 223010 |
| 204314 | 10465 | Feed Wheel Frame with 200383c, 204190 and 204321 |

| No. | Plate | Name |
|---------|-------|---|
| 204315 | 10467 | Feed Wheel Frame Adjusting Eccentric |
| 200347c | 10467 | Feed Wheel Frame Adjusting Eccentric Set Screw |
| 200383c | 10467 | Feed Wheel Frame Set Screw ... |
| 204316 | 10468 | " " " Shaft |
| 202305 | 10436 | " " " " Center (2) |
| 200043c | 10436 | " " " " " Set Screw (2) |
| 204317 | 10467 | Feed Wheel Friction Spring |
| 200162d | 10467 | " " " " Screw |
| 204318 | 10466 | Feed Wheel Frame complete, Nos. 204302, 204311, 204317, 204320, 204335, 206047 and four 200162d |
| 200162d | 10467 | Feed Wheel Guide Screw |
| 206047 | 12725 | " " Retaining Clutch with 204189 |
| 204320 | 10467 | Feed Wheel Retaining Clutch Spring |
| 204189 | 12725 | Feed Wheel Retaining Clutch Spring Hook |
| 204321 | 10467 | Feed Wheel Retaining Clutch Spring Pin |
| 207811 | | Feed Wheel complete, Nos. 204318 and 223011 |
| 204216 | 10571 | Hook (sewing) with 204217 |
| 204217 | 12726 | " Bobbin Case Stud |
| 204218 | 10572 | " Bracket with 200379c and three 204231 |
| 204219 | 10448 | Hook Bracket 204218 with 204226c |
| 204323 | | " " 204219 with 204222, 204224, 204225, 204324, two each 204223 and 204233 |
| 200379c | 10572 | Hook Bracket Adjusting Screw (lower) |
| 200334c | 10572 | Hook Bracket Adjusting Screw (upper) |
| 204222 | 10571 | Hook Bracket Bobbin Case Stop (hinged) |
| 204223 | 10448 | Hook Bracket Bobbin Case Stop Hinge Pin |
| 204224 | 10572 | Hook Bracket Bobbin Case Stop Latch |
| 204223 | 10448 | Hook Bracket Bobbin Case Stop Latch Hinge Pin |
| 204225 | 10572 | Hook Bracket Bobbin Case Stop Latch Spring |
| 200562c | 10572 | Hook Bracket Screw (lower) |

| No. | Plate | Name |
|---------|-------|--|
| 200564c | 10572 | Hook Bracket Screw (upper) |
| 204325 | -- | Hook Bracket complete, Nos. 204216 and 204323 |
| 204239 | 10571 | Hook Driver with 204242 and 204243 |
| 204393 | 10571 | " " Bushing |
| 208246 | - | " " Crank |
| 204240 | 12726 | " " " 208246 with 200378c, 200662c, 201530c and two 200348c |
| 204241 | 12725 | Hook Driver Crank Link |
| 200669c | 10448 | " " " " Stud |
| 201530c | 10448 | " " " " Nut |
| 200348c | 10448 | " " " " Set Screw (long) |
| 200378c | 10436 | " " " " " (short) |
| 200662c | 10448 | " " " " Stud |
| 201530c | 10448 | " " " " Nut |
| 204243 | 12726 | " " Pin |
| 204242 | 12726 | " " Washer |
| 204295 | 12727 | " Driving Shaft |
| 204245 | 10569 | " " " Bearing |
| 202126 | 10434 | " " " " Position Pin |
| 200516c | 10434 | Hook Driving Shaft Bearing Screw |
| 204246 | 10434 | " " " Collar with two 200383c |
| 200383c | 10467 | Hook Driving Shaft Collar Set Screw |
| 204226 | 10447 | Hook Race, .156 in. thick, 1.906 in. diameter |
| 204324 | 11482 | Hook Race Cap (steel) |
| 204230 | 10572 | " " " Spring |
| 204233 | 10448 | " " " " 204230 with 200802c |
| 200802c | 10448 | Hook Race Cap Spring Screw |
| 204234 | 10572 | " " Position Pin |
| 202445 | 11125 | Knee Lifter Connection Lever with 202446 |
| 227312 | -- | Knee Lifter Connection Lever 202445 with 200224b, 200262b, 227303 and 227308 |
| 200224b | 10573 | Knee Lifter Connection Lever Hinge Screw |
| 227308 | 11125 | Knee Lifter Connection Lever Lift- ing Rod with 202302 |
| 202302 | 12718 | Knee Lifter Connection Lever Lift- ing Rod Cotter Pin |
| 202446 | 12718 | Knee Lifter Connection Lever Pin |
| 227303 | 11125 | " " Lifting Lever |

| No. | Plate | Name |
|---------|-------|--|
| 200362b | 12718 | Knee Lifter Lifting Lever Hinge Screw |
| 208613 | 12719 | Needle Bar (hollow) |
| 201347 | -- | " " 208613 with 200125c, 200175b and 201350 |
| 201348 | 10442 | Needle Bar Connecting Link |
| 200958c | 10573 | " " " " Hinge Screw Stud |
| 201349c | 10573 | Needle Bar Connecting Link Hinge Screw Stud Nut |
| 201349 | 10573 | Needle Bar Connecting Stud with 200072c and 202277 |
| 202377 | -- | Needle Bar Connecting Stud Oil Packing (wick) |
| 200972c | 10573 | Needle Bar Connecting Stud Pinch Screw |
| 200301c | 10573 | Needle Bar Screw Bushing (lower) |
| 200303c | 10573 | " " " " (upper) |
| 201350 | 10573 | " " Thread Guide |
| 200175b | 10442 | " " " " Set Screw |
| 200125c | 10442 | " Set Screw |
| 204352 | 10441 | Presser Bar Lifter |
| 200350c | 10441 | " " " Hinge Screw |
| 204353 | 10441 | " " Lifting Bracket with 200086c |
| 200086c | 10441 | Presser Bar Lifting Bracket Pinch Screw |
| 201354 | 10441 | Presser Bar Lifting Bracket Posi- tion Guide |
| 200362c | 10441 | Presser Bar Lifting Bracket Posi- tion Guide Set Screw |
| 204327 | -- | Presser Bar Packing Washer (felt) |
| 200304c | 10573 | " " Screw Bushing (lower) |
| 204358 | 12718 | " " Spring |
| 200191c | 10441 | " " Thumb Screw (pres- sure regulating) |
| 201910 | 10169 | Roller Presser, $\frac{13}{16}$ in. diam., $\frac{1}{2}$ in. face (coarse), with 200551c and 201531b |
| 204328 | 11293 | Roller Presser Arm |
| 204570 | 11293 | " " " 204328 with 201910 |
| 202360 | 11293 | Roller Presser Arm Bracket (swing) |
| 204575 | -- | Roller Presser Arm Bracket 202560 with 200096b and 204570 |
| 200575c | 11293 | Roller Presser Arm Bracket Posi- tion Stud |

| No. | Plate | Name |
|---------|-------|---|
| 202558 | 11293 | Roller Presser Arm Bracket Spring |
| 202559 | 11293 | " " " " " |
| | | Stop |
| 200141F | 11293 | Roller Presser Arm Bracket Spring |
| | | Stop Screw |
| 200096D | 11293 | Roller Presser Arm Screw |
| 204495 | ----- | " " Bar |
| 200551F | 11293 | " " Hinge Screw |
| 201534H | 11293 | " " " " Nut ... |
| 204576 | ----- | Roller Presser and Bar complete, Nos. 200675c, 202558, 202559, 204495, 204575 and two 200141F |
| 202068 | 12153 | Spool Holder Base |
| 200575H | 12718 | " " " Screw |
| 204296 | 12153 | " " Wire |
| 200079H | 12718 | " " " Hinge Screw .. |
| 204297 | 12153 | Spool Holder complete, Nos. 200079H, 202068 and 204296 |
| 204261 | 10445 | Take-up Cam with 200335c, 200383c, 200430c, 200658c and 201519c .. |
| 203172 | 10445 | Take-up Cam Friction Washer ... |
| 200430c | 10445 | " " Position Screw |
| 200383c | 10467 | " " " " Check Screw |
| 200335c | 10434 | Take-up Cam Set Screw |
| 204262 | 10445 | " Lever |
| 206556 | ----- | " " 204262 with 201263 .. |
| 204263 | 10445 | " " Bearing with 201264 .. |
| 204264 | 10445 | " " " Position Pin .. |
| 200042F | 10445 | " " " Screw |
| 201816 | 10445 | " " Roller |
| 204266 | 10445 | Take-up Lever complete, Nos. 200042F, 201816 and 206556 |
| 202402 | 12309 | Tension Disc |
| 202090 | 12309 | " " Position Pin |
| 204267 | 10573 | " Release Lever |
| 200688c | 12725 | " " " Position Screw |
| 200309E | 12309 | " " " Screw |
| 202075 | 12309 | " " Plunger |
| 215609 | --- | " " Slide |
| 204268 | 10573 | " " " 215609 with 204269 |
| 204269 | 10573 | " " " Spring |
| 202407 | 12309 | " Spring |
| 200632B | 12309 | " Stud |
| 200397H | 12309 | " " Set Screw |
| 201572B | 12309 | " Thumb Nut |
| 204271 | 12309 | " Washer |
| 204272 | 12309 | Tension complete, Nos. 200632B, 201572B, 202075, 202407, 204271 and two 202402 |

| No. | Plate | Name |
|---------|-------|--|
| 204273 | 10573 | Thread Controller Adjusting Collar with 200684H (for Presser Bar) |
| 200684H | 10573 | Thread Controller Adjusting Collar Screw |
| 204274 | 12309 | Thread Controller Plate |
| 200577H | 10573 | " " " Screw ... |
| 202098 | 12309 | " " Roller |
| 204275 | 12309 | " " " Guard |
| 202084 | 12309 | " " " " Washer |
| 200300c | 12309 | " " " Screw |
| 204276 | 12309 | " " Spring |
| 204333 | 12309 | " " " Guard |
| 200581H | 12309 | " " " " Screw |
| 204277 | 12309 | " " " Stop |
| 204278 | 12309 | " " " " Driving Gear |
| 200319c | 12309 | Thread Controller Spring Stop Driving Gear Hinge Screw ... |
| 200135c | 12309 | Thread Controller Spring Stop Screw |
| 204279 | 12309 | Thread Controller Spring Stud with 204925 |
| 200355H | 10573 | Thread Controller Spring Stud Set Screw |
| 204925 | 12718 | Thread Controller Spring Stud Washer |
| 205987 | 12309 | Thread Controller complete, Nos. 200300c, 200581H, 202084, 202098, 204274, 204275 and 204333 |
| 204280 | 12309 | Thread Controller and Spring com- plete, Nos. 204276 and 205987 .. |
| 204329 | 10468 | Thread Oiler (felt) |
| 204330 | 10468 | " " Bracket with 204329 |
| 200113F | 10436 | " " " Screw |
| 204281 | 12309 | " Retainer Guide Wire |
| 202091 | 12309 | " " Sleeve |
| 202092 | 12309 | " " Spring |
| 204058 | 12309 | " " Stud |
| 200368H | 12309 | " " " Set Screw |
| 204059 | 12309 | Thread Retainer complete, Nos. 202091, 202092 and 204058 |
| 207222 | 10606 | Throat Plate, 53 elongated needle, hole, for needle sizes 14 and 15 |
| 202062 | 10573 | Throat Plate Position Pin |
| 200577H | 10573 | " " Screw |

ACCESSORIES

FOR MACHINE NO. 12w12.

| No. | Plate | Name |
|---------|-------|---|
| 204178 | 10442 | Bobbin (5) |
| *225482 | - - | " Case Screw Driver Blade .. |
| *225483 | ----- | " " " " Handle .. |
| 225497 | 12153 | Bobbin Case Screw Driver com- plete, Nos. 225482 and 225483 .. |
| 225487 | ----- | Roller Presser Hinge Screw Nut Wrench |
| 128 x 6 | - - - | Needles, three each, sizes 13 and 14 |
| 225480 | - - - | Drip Pan with four wood screws 1 in., No. 5 |
| 41400 | 12153 | Machine Rest Pin (wood) |
| 36578 | 12153 | Oiler with 36579 |
| 36579 | 12153 | " Spout, 31 in. long, with 120117 |
| 120117 | ----- | " " Washer (leather) |
| *225484 | ----- | Screw Driver Blade |
| *225485 | ----- | " " Handle |
| 225498 | 12153 | Screw Driver complete (71 in. long), Nos. 225484 and 225485 .. |
| 225554 | 12153 | Wrench (steel) |

BOBBIN WINDER

Swing Automatic, Right Hand

| | | |
|---------|-------|---|
| 202470 | 12320 | Bobbin Winder Base |
| 202471 | 12320 | " " Frame |
| 200221D | 12319 | " " " Hinge Screw |
| 202472 | 12319 | " " " Spring |
| 200161D | 12319 | " " " " Screw .. |
| 202473 | 12320 | " " Pulley with 200105c |
| 200105c | ----- | " " " Set Screw .. |
| 202474 | 12320 | " " Spindle |
| 227522 | 12319 | " " Stop Latch |
| 200056E | 12319 | " " " " Screw .. |
| 202477 | 12319 | " " " " Thumb Lever |
| 200299H | 12319 | Bobbin Winder Stop Latch Thumb Lever Hinge Screw |
| 200299H | 12319 | Bobbin Winder Stop Latch Thumb Lever Joint Screw |
| 201537H | 12319 | Bobbin Winder Stop Latch Thumb Lever Joint Screw Nut |

| No. | Plate | Name |
|---------|-------|--|
| 202478 | 12319 | Bobbin Winder Stop Latch Trip Lever |
| 200299H | 12319 | Bobbin Winder Stop Latch Trip Lever Hinge Screw |
| 227523 | 12320 | Bobbin Winder complete, Nos. 200056E, 200161D, 200221D, 201537H, 202470 to 202474, 202477, 201478, 227522, three 200299H and two round head wood screws 1 in., No. 13 |
| 202480 | 12320 | Bobbin Winder Spool Holder Base with 200355H and 202481 |
| 202481 | 12320 | Bobbin Winder Spool Holder Base Spool Pin |
| 202482 | 12319 | Bobbin Winder Spool Holder Ten- sion Disc (lower or upper) .. |
| 200011E | 12319 | Bobbin Winder Spool Holder Ten- sion Disc Screw |
| 200355H | 10573 | Bobbin Winder Spool Holder Ten- sion Disc Screw Set Screw .. |
| 202483 | 12319 | Bobbin Winder Spool Holder Ten- sion Disc Spring (brass) |
| 202484 | 12319 | Bobbin Winder Spool Holder Ten- sion Disc Thread Guide |
| 202485 | 12320 | Bobbin Winder Spool Holder com- plete, Nos. 200011E, 202480, 202481, 202483, two 202482 and one wood screw 1 in., No. 13 |
| 227524 | - | Bobbin Winder and Spool Holder complete, Nos. 202485 and 227523 |

KNEE LIFTER

| | | |
|---------|-------|--|
| 227781 | 11125 | Knee Lifter Rock Lever with 200522c and 200529c |
| 227782 | - - | Knee Lifter Rock Lever 227781 with two each 202451 and 202452 |
| 227783 | 11125 | Knee Lifter Rock Lever 227782 with 202985 and 227784 |
| 202453 | 11125 | Knee Lifter Rock Lever Knee Plate with 200526c |
| 202985 | - - - | Knee Lifter Rock Lever Knee Plate 202453 with 202455 |
| 202455 | 11125 | Knee Lifter Rock Lever Knee Plate Arm (short) |
| 200522c | 12319 | Knee Lifter Rock Lever Knee Plate Arm Set Screw |
| 200526c | 12319 | Knee Lifter Rock Lever Knee Plate Set Screw |

| No. | Plate | Name |
|---------|-------|---|
| 202451 | 11125 | Knee Lifter Rock Lever Lug with two wood screws $\frac{3}{4}$ in., No. 13u .. |
| 202452 | 12319 | Knee Lifter Rock Lever Lug Hinge Pin |
| 227784 | 11125 | Knee Lifter Rock Lever Rod, 3 in. long, with 227785 |
| *227785 | ---- | Knee Lifter Rock Lever Rod Cap or Oil Guard |
| 200529c | 12319 | Knee Lifter Rock Lever Rod Set Screw |

(Other Knee Lifter parts are listed with parts of machine head).

FOR MACHINE NO. 12w113

Same as for No. 12w12 with the following exceptions:

| | | |
|--------|------|--|
| 225191 | ---- | Drip Pan with four wood screws $\frac{1}{2}$ in., No. 5, in place of 225180 .. |
|--------|------|--|

KNEE LIFTER

| | | |
|---------|-------|--|
| 227781 | 11125 | Knee Lifter Rock Lever with 200522c and 200529c |
| 227782 | ---- | Knee Lifter Rock Lever 227781 with two each 202451 and 202452 .. |
| 227787 | ---- | Knee Lifter Rock Lever 227782 with 202203 and 227784, in place of 227783 |
| 202453 | 11125 | Knee Lifter Rock Lever Knee Plate with 200526c |
| 202203 | ---- | Knee Lifter Rock Lever Knee Plate 202453 with 202454 |
| 202454 | 11125 | Knee Lifter Rock Lever Knee Plate Arm (long) |
| 200522c | 12319 | Knee Lifter Rock Lever Knee Plate Arm Set Screw |
| 200526c | 12319 | Knee Lifter Rock Lever Knee Plate Set Screw |
| 202451 | 11125 | Knee Lifter Rock Lever Lug with two wood screws $\frac{3}{4}$ in., No. 13u .. |
| 202452 | 12319 | Knee Lifter Rock Lever Lug Hinge Pin |
| 227784 | 11125 | Knee Lifter Rock Lever Rod, 3 in. long, with 227785 |
| *227785 | ---- | Knee Lifter Rock Lever Rod Cap or Oil Guard |

| No. | Plate | Name |
|---------|-------|--|
| 200529c | 12319 | Knee Lifter Rock Lever Rod Set Screw |

(Other Knee Lifter parts are listed with parts of machine head).

FOR MACHINE No. 12w116

Same as for No. 12w12 with the following exceptions:

| | | |
|--------|------|--|
| 225608 | ---- | Drip Pan with four wood screws $\frac{1}{2}$ in., No. 5, in place of 225180 .. |
|--------|------|--|

KNEE LIFTER

| | | |
|---------|-------|--|
| 202450 | ---- | Knee Lifter Rock Lever with 200522c and 200529c |
| 202185 | ---- | Knee Lifter Rock Lever 202450 with two each 202451 and 202452 .. |
| 202190 | ---- | Knee Lifter Rock Lever 202185 with 202203 and 202614, in place of 227783 |
| 202453 | 11125 | Knee Lifter Rock Lever Knee Plate with 200526c |
| 202203 | ---- | Knee Lifter Rock Lever Knee Plate 202453 with 202454 |
| 202454 | 11125 | Knee Lifter Rock Lever Knee Plate Arm (long) |
| 200522c | 12319 | Knee Lifter Rock Lever Knee Plate Arm Set Screw |
| 200526c | 12319 | Knee Lifter Rock Lever Knee Plate Set Screw |
| 202451 | 11125 | Knee Lifter Rock Lever Lug with two wood screws $\frac{3}{4}$ in., No. 13u .. |
| 202452 | 12319 | Knee Lifter Rock Lever Lug Hinge Pin |
| 202614 | ---- | Knee Lifter Rock Lever Rod, 5 in. long, with 202456 |
| *202456 | ---- | Knee Lifter Rock Lever Rod Cap or Oil Guard |
| 200529c | 12319 | Knee Lifter Rock Lever Rod Set Screw |

(Other Knee Lifter parts are listed with parts of machine head.)

| | | |
|---------|------|---|
| (227524 | ---- | Bobbin Winder and Spool Holder complete not used) |
|---------|------|---|

From the library of Dartmouth College

FEED WHEELS

| No. | Plate | Name |
|--------|-------|--|
| 204302 | 10465 | Feed Wheel, for 204318, 207221, 207222, 207224 to 207226, 207246, 207247, 207331, 207429, 207442, 207443, 207467 and 207753 |
| 204304 | 10465 | Feed Wheel (extra coarse), for 207224, 207222, 207224 to 207226, 207246, 207247, 207331, 207429, 207442, 207443, 207467 and 207753 |
| 204305 | 10465 | Feed Wheel (knurled), for 207221, 207222, 207224 to 207226, 207246, 207247, 207331, 207429, 207442, 207443, 207467 and 207753 |

PRESSER FEET

| | | |
|--------|-------|---|
| 202616 | 12724 | Presser Foot, for shoe lining, used in place of Roller Presser |
| 202803 | 12724 | Presser Foot, used in place of Roller Presser |
| 229088 | 12718 | Presser Foot, for beading or top stitching, used in place of Roller Presser |
| 229089 | 12718 | Presser Foot (auxiliary), used in place of Roller Presser |

ROLLER PRESSERS

| No. | Plate | Name |
|--------|-------|--|
| 201900 | 10169 | Roller Presser, 1 $\frac{1}{2}$ in. diam., $\frac{1}{8}$ in. face (fine), with 200551F and 201534U |
| 201901 | 10169 | Roller Presser, 1 $\frac{1}{2}$ in. diam., $\frac{3}{16}$ in. face (fine), with 200551F and 201534U |
| 201902 | 10169 | Roller Presser, 1 $\frac{1}{2}$ in. diam., $\frac{1}{4}$ in. face (fine), with 200548E and 201534U |
| 201903 | 10169 | Roller Presser, 1 $\frac{1}{2}$ in. diam., $\frac{3}{8}$ in. face (fine), with 200548E and 201534U |
| 201904 | 10169 | Roller Presser, 1 $\frac{1}{2}$ in. diam., $\frac{1}{2}$ in. face (fine), with 200548E and 201534U |
| 201905 | 10169 | Roller Presser, 1 $\frac{1}{2}$ in. diam., $\frac{1}{2}$ in. face (fine), with 200548E and 201534U |
| 201907 | 10169 | Roller Presser, 1 $\frac{1}{2}$ in. diam., $\frac{5}{8}$ in. face (fine), with 200548E and 201534U |
| 201908 | 10169 | Roller Presser, 1 $\frac{1}{2}$ in. diam., $\frac{1}{2}$ in. face (fine), with 200548E and 201534U |
| 201909 | 10169 | Roller Presser, 1 $\frac{1}{2}$ in. diam., $\frac{3}{8}$ in. face (coarse), with 200551F and 201534U |
| 201910 | 10169 | Roller Presser, 1 $\frac{1}{2}$ in. diam., $\frac{1}{4}$ in. face (coarse), with 200551F and 201534U |
| 201911 | 10169 | Roller Presser, 1 in. diam., $\frac{1}{4}$ in. face (coarse), with 200551F and 201534U |
| 201912 | 10170 | Roller Presser, 1 $\frac{1}{2}$ in. diam., $\frac{3}{8}$ in. face (fine), with 200548E and 201534U |
| 201913 | 10170 | Roller Presser, 1 $\frac{1}{2}$ in. diam., $\frac{1}{4}$ in. face (fine), with 200548E and 201534U |
| 201914 | 10170 | Roller Presser, $\frac{5}{8}$ in. diam., $\frac{1}{4}$ in. face (coarse), with 200551F and 201534U |
| 201915 | 10170 | Roller Presser, $\frac{3}{8}$ in. diam., $\frac{1}{2}$ in. face (coarse), with 200554F |

| No. | Plate | Name |
|--------|-------|--|
| 201916 | 10170 | Roller Presser, $\frac{1}{2}$ in. diam., $\frac{1}{8}$ in. face (fine), with 200554F |
| 201917 | 10170 | Roller Presser, $\frac{3}{8}$ to $\frac{1}{2}$ in. diam., $\frac{1}{4}$ in. face (concave), with 200552F |
| 201918 | 10170 | Roller Presser, $\frac{3}{8}$ to $\frac{1}{2}$ in. diam., $\frac{1}{4}$ in. face (concave), with 200552F |
| 201919 | 10170 | Roller Presser, $1\frac{1}{8}$ in. diam., $\frac{1}{4}$ in. face (fine), with 200548F and 201534U |
| 201920 | 10170 | Roller Presser, $1\frac{1}{8}$ to $1\frac{3}{8}$ in. diam., $\frac{1}{4}$ in. face (concave), with 200551F and 201534U |
| 201921 | 10170 | Roller Presser, $1\frac{1}{8}$ in. diam., $\frac{3}{8}$ in. face (fine), with 200551F and 201534U |
| 204328 | 11293 | Roller Presser Arm |
| 202839 | 11293 | " " " |
| 204571 | --- | " " " |
| 204573 | --- | " " " |
| 213817 | --- | " " " |
| 204577 | --- | " " " |
| 204579 | --- | " " " |
| 204583 | --- | " " " |
| 204587 | --- | " " " |
| 204578 | 10492 | " " " 204577 with 201907 |
| 204580 | 10492 | Roller Presser Arm 204579 with 201909 |
| 204582 | 10492 | Roller Presser Arm 204579 with 201910 |
| 204584 | 10492 | Roller Presser Arm 204583 with 201914 |
| 204586 | 10492 | Roller Presser Arm 204587 with 201915 |
| 204588 | 10492 | Roller Presser Arm 204587 with 201916 |
| 204570 | 11293 | Roller Presser Arm 204328 with 201910 |
| 229798 | 12724 | Roller Presser Arm 213817 with 201900 |
| 204572 | 12718 | Roller Presser Arm 204571 with 201914 |
| 204568 | 12726 | Roller Presser Arm 204573 with 201915 |
| 204574 | 12718 | Roller Presser Arm 204573 with 201916 |
| 204569 | 11293 | Roller Presser Arm 202839 with 201907 |
| 229359 | --- | Roller Presser Arm 202839 with 201912 |

| No. | Plate | Name |
|---------|-------|---|
| 206910 | --- | Roller Presser Arm 202839 with 201905 |
| 204491 | --- | Roller Presser Arm 202839 with 201908 |
| 202560 | 11293 | Roller Presser Arm Bracket (swing) |
| 204575 | --- | " " " " 202560 with 200096D and 204570 |
| 200675C | 11293 | Roller Presser Arm Bracket Position Screw Stud |
| 202558 | 11293 | Roller Presser Arm Bracket Spring |
| 202559 | 11293 | " " " " " Stop |
| 200141F | 11293 | Roller Presser Arm Bracket Spring Stop Screw |
| 200096D | 11293 | Roller Presser Arm Screw |
| 204495 | --- | " " Bar |
| 200548F | 11293 | " " Hinge Screw |
| 200552F | 12718 | " " " " |
| 200554F | 12718 | " " " " |
| 200551F | 11293 | " " " " |
| 201534U | 11293 | " " " " Nut |
| 204576 | --- | Roller Presser and Bar complete, Nos. 200675C, 202558, 202559, 204495, 204575 and two 200141F |

THROAT PLATES

| No. | Plate | Name |
|--------|-------|--|
| 207221 | 10606 | Throat Plate, 50 elongated needle hole, for needle sizes 16 and 18, for coarse leather work, for 204302, 204304 and 204305 |
| 207222 | 10606 | Throat Plate, 53 elongated needle hole, for needle sizes 14 and 15, for fine leather work, for 204302, 204304 and 204305 |
| 207224 | 12723 | Throat Plate, 50 elongated needle hole, for needle sizes 16 and 18, for coarse glove work, for 204302, 204304 and 204305 |
| 207225 | 12723 | Throat Plate, 53 elongated needle hole, for needle sizes 14 and 15, for fine glove work, for 204302, 204304 and 204305 |
| 207226 | 10606 | Throat Plate, 56 needle hole, for needle sizes 10 and 11 (Gloversville), for 204302, 204304 and 204305 |
| 207247 | 12722 | Throat Plate, 53 needle hole, for needle sizes 12 and 13, for 204302, 204304 and 204305 |
| 207429 | 12722 | Throat Plate, 60 elongated needle hole, for needle sizes 9 to 11, for 204302, 204304 and 204305 |
| 207442 | 12723 | Throat Plate, 60 elongated needle hole, for needle sizes 9 to 11, for 204302, 204304 and 204305 |
| 207443 | 12723 | Throat Plate, 60 elongated needle hole, for needle sizes 9 to 11, for 204302, 204304 and 204305 |
| 207467 | 12724 | Throat Plate, 46 needle hole, for needle sizes 16 and 18 (Gloversville), for 204302, 204304 and 204305 |
| 207753 | 12724 | Throat Plate, 60 elongated needle hole, for needle sizes 9 to 11, for 204302, 204304 and 204305 |
| 207246 | 12722 | Throat Plate, 46 needle hole, for needle sizes 16 and 18, for 204302, 204304 and 204305 |
| 207331 | 12722 | Throat Plate, 40 needle hole, for needle sizes 20 and 22, for 204302, 204304 and 204305 |

BED FRAMES

(IRON)

| No. | Plate | Name |
|---------|-------|--|
| 227338 | | Bed Frame with four 227731 and four wood screws 1 in., No. 13 |
| 227341 | | Bed Frame with four 225589 and four wood screws 1 in., No. 13 |
| 227731 | | Bed Frame Cushion (leather) ... |
| 225589 | | " " " " " " ... |
| 225591 | | " " Stop Chain with two 225592 |
| 225592 | | Bed Frame Stop Chain Hook ... |
| 200724c | | " " Wing Screw |
| 227089 | | Bed Frame (iron) complete, Nos. 200724c, 225591 and 227338, for Machine No. 12w12 |
| 227096 | | Bed Frame (iron) complete, Nos. 200724c, 225591 and 227341, for Machine No. 12w113 |

CABINET TRIMMINGS

FOR PLAIN TABLE

| No. | Plate | Name |
|--------|-------|--|
| 227493 | 12153 | Bed Hinge Plate 202259 with two wood screws $\frac{3}{4}$ in., No. 13u |
| 25070 | 10576 | Machine Cushion Tack (rubber) .. |

FOR PLAIN TABLE AND COVER

| | | |
|--------|-------|--|
| 227493 | 12153 | Bed Hinge Plate 202259 with two wood screws $\frac{3}{4}$ in., No. 13u |
| 87428 | 10576 | Cover Hook with wood screw $\frac{1}{2}$ in., No. 7 |
| 87372 | 10576 | Cover Hook Cup Catch |
| 56251 | 10576 | " Lock |
| 28297 | 10576 | " " Cup Catch (nickeled) .. |
| 28076 | 10576 | " " Escutcheon (brass) |
| 28233 | 10576 | " " Key |
| 25070 | 10576 | Machine Cushion Tack (rubber) .. |

FOR END LEAF TABLE

| | | |
|--------|-------|--|
| 227493 | 12153 | Bed Hinge Plate 202259 with two wood screws $\frac{3}{4}$ in., No. 13u |
| 28079 | 10576 | End Leaf Hinge |
| 25168 | 10577 | " " Support Bracket |
| 25169 | 10577 | " " " Lever |
| 25143 | 10576 | " " " " Hinge Pin .. |
| 25057 | 10577 | End Leaf Support complete, Nos. 25143, 25168, 25169 and two wood screws $\frac{3}{4}$ in., No. 7 |
| 25070 | 10576 | Machine Cushion Tack (rubber) .. |

FOR END LEAF TABLE AND COVER

| | | |
|--------|-------|--|
| 227493 | 12153 | Bed Hinge Plate 202259 with two wood screws $\frac{3}{4}$ in., No. 13u |
| 87428 | 10576 | Cover Hook with wood screw $\frac{1}{2}$ in., No. 7 |
| 87372 | 10576 | Cover Hook Cup Catch |
| 56251 | 10576 | " Lock |
| 28297 | 10576 | " " Cup Catch (nickeled) .. |
| 28076 | 10576 | " " Escutcheon (brass) |
| 28233 | 10576 | " " Key |

| No. | Plate | Name |
|-------|-------|--|
| 28079 | 10576 | End Leaf Hinge |
| 25168 | 10577 | " " Support Bracket |
| 25169 | 10577 | " " " Lever |
| 25143 | 10576 | " " " " Hinge Pin .. |
| 25057 | 10577 | End Leaf Support complete, Nos. 25143, 25168, 25169 and two wood screws $\frac{3}{4}$ in., No. 7 |
| 25070 | 10576 | Machine Cushion Tack (rubber) .. |

FOR END AND BACK LEAF TABLE

| | | |
|--------|-------|--|
| 25001 | 1057 | Back Leaf Bracket with two wood screws 1 in., No. 10 |
| 25002 | 10577 | Back Leaf Scroll Bracket with one $\frac{3}{4}$ in., No. 9 and two 1 in., No. 12 wood screws |
| 25003 | 10577 | Back Leaf Sliding Hinge, Nos. 25149, three 25151 and six wood screws $\frac{5}{8}$ in., No. 7 |
| 25151 | 10577 | Back Leaf Sliding Hinge Plate |
| 25149 | 10577 | " " " " Rod |
| 227493 | 12153 | Bed Hinge Plate 202259 with two wood screws $\frac{3}{4}$ in., No. 13u |
| 28079 | 10576 | End Leaf Hinge |
| 25168 | 10577 | " " Support Bracket |
| 25060 | 10577 | " " " Button with wood screw $1\frac{1}{2}$ in., No. 12, R.H.B. |
| 25169 | 10577 | End Leaf Support Lever |
| 25143 | 10576 | " " " " Hinge Pin .. |
| 25057 | 10577 | End Leaf Support complete, Nos. 25143, 25168, 25169 and two wood screws $\frac{3}{4}$ in., No. 7 |
| 25070 | 10576 | Machine Cushion Tack (rubber) .. |

FOR END AND BACK LEAF TABLE AND COVER

| | | |
|--------|-------|---|
| 25001 | 10577 | Back Leaf Bracket with two wood screws 1 in., No. 10 |
| 25002 | 10577 | Back Leaf Scroll Bracket with one $\frac{3}{4}$ in., No. 9 and two 1 in., No. 12 wood screws |
| 25003 | 10577 | Back Leaf Sliding Hinge, Nos. 25149, three 25151 and six wood screws $\frac{5}{8}$ in., No. 7 |
| 25151 | 10577 | Back Leaf Sliding Hinge Plate |
| 25149 | 10577 | " " " " Rod |
| 227493 | 12153 | Bed Hinge Plate 202259 with two wood screws $\frac{3}{4}$ in., No. 13u |

From the library of: Diamond Needle Corp

OBSOLETE PARTS


| No. | Plate | Name |
|--------|-------|--|
| 46521 | 10577 | Brace with 296c, two 297c and three 1507E |
| 206566 | ----- | Feed Driving Cam Fork Lever Shaft Bushing |
| 204306 | 10465 | Feed Wheel Driver with 204189, 204307 and 204311 |
| 204307 | 10468 | Feed Wheel Driver Clutch |
| 204309 | 10467 | " " " Guide |
| 204322 | 10466 | Feed Wheel complete, Nos. 204313 and 204318 |
| 204313 | 10466 | Feed Wheel Driver and Clutch complete, Nos. 200263e, 200266d, 201528e, 204306, 204308, 204310 and 204312 |
| 204227 | 10447 | Hook Race, .153 in. thick, 1.898 in. diameter |
| 204228 | 10447 | Hook Race, .150 in. thick, 1.893 in. diameter |
| 206572 | 12718 | Needle Bar Connecting Link Stud |

PLATE 10169—FULL SIZE


201900




201901

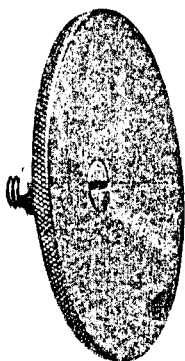


201902

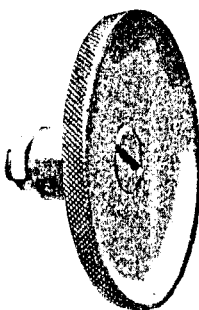


201903

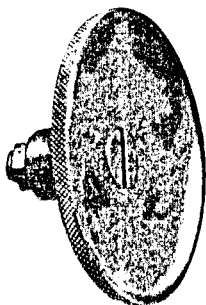


201904

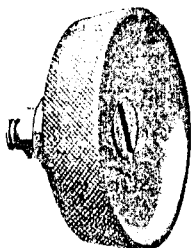


201905

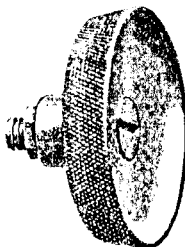


201906

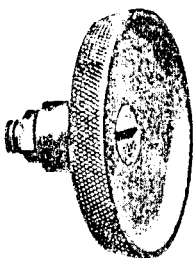


201907

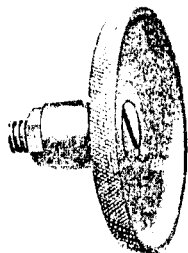


201908

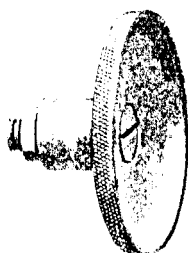

201909

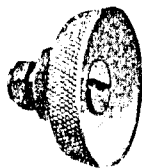

201910

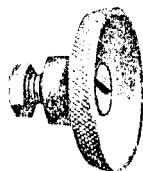

201911



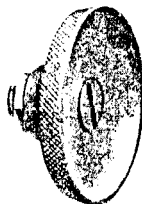


PLATE 10170—FULL SIZE

201912

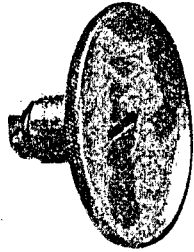

201913

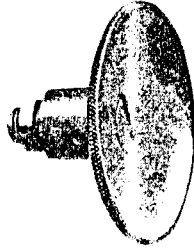

201914



201915



201916




201917




201918



201919

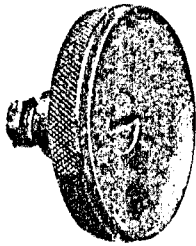

201920

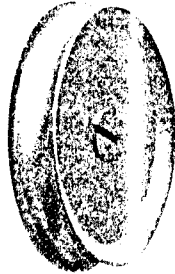

201921

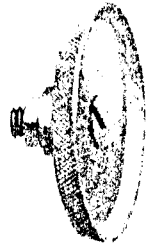


PLATE 10434—FULL SIZE

200335



200054



200278



200439



200328



200609



202248



200963



200516



200062




202126



200570



204246

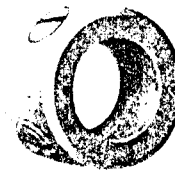


202005




202015



201569

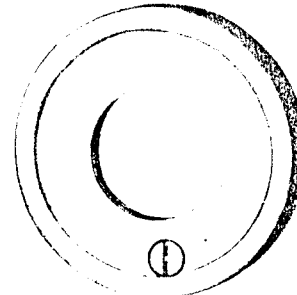

204341

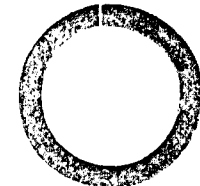

From the library of: Diamond & Gemstone Corp

PLATE 10436-FULL SIZE


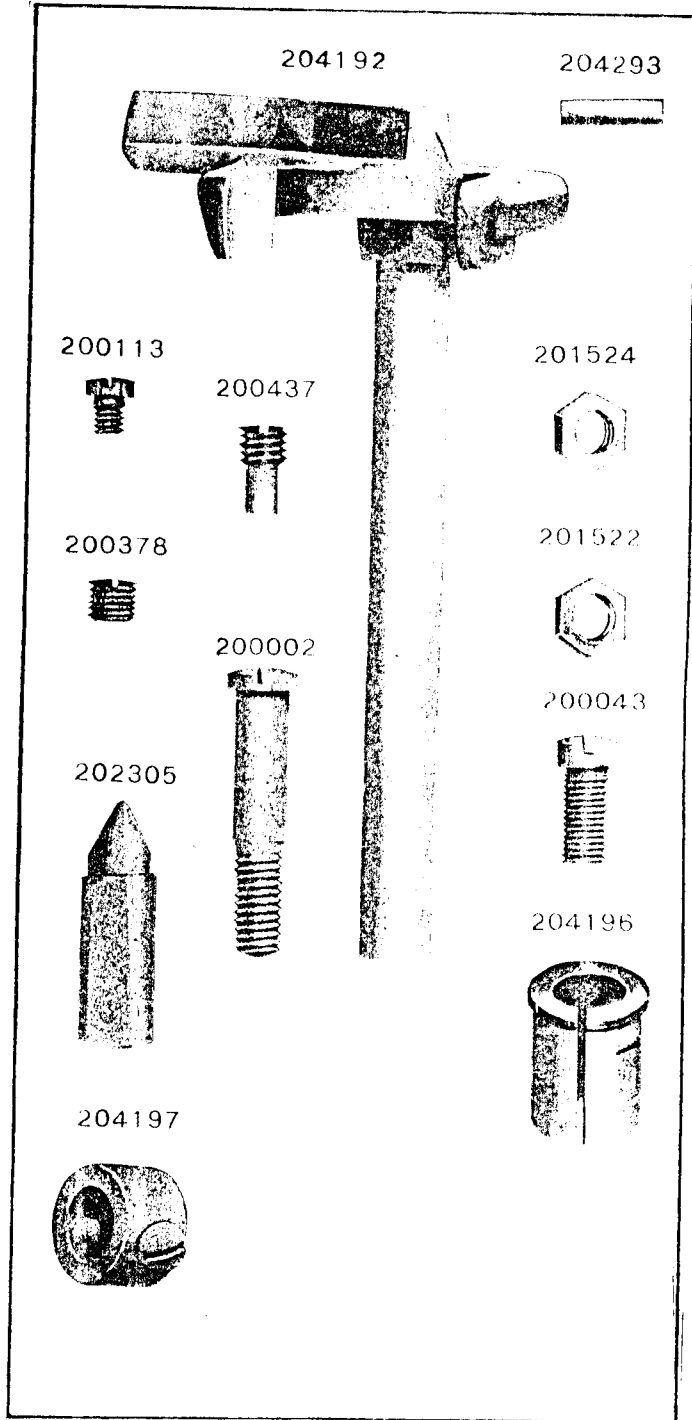


PLATE 10438-FULL SIZE

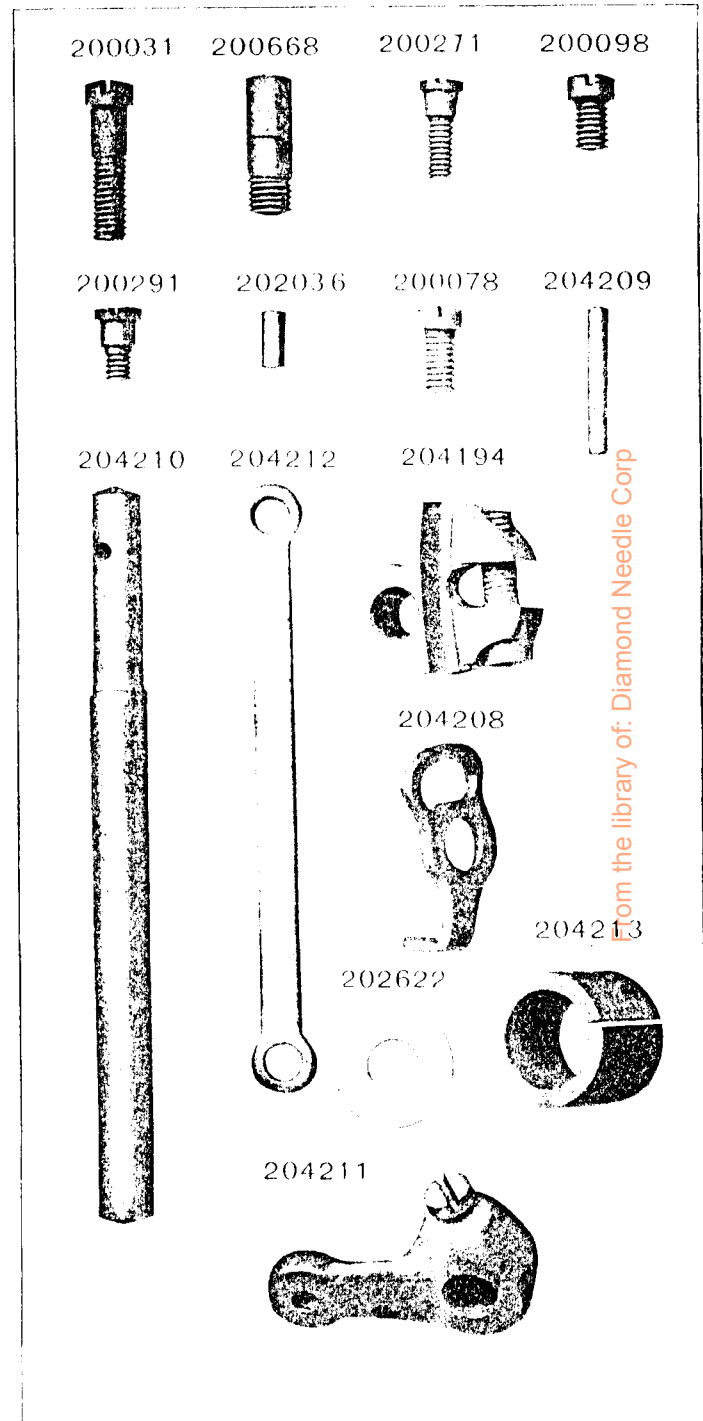


From the library of: Diamond Needle Corp

PLATE 10441—FULL SIZE

204254



200491

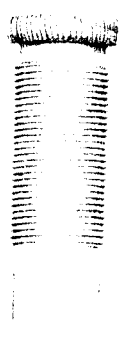

204252




200336



204253



200550



200074



200086



200362



PLATE 10442—FULL SIZE

200592



200598



200175



200125



200658



200072



201519



200503




200504 204250



204182




204248

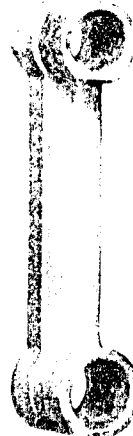


204181



208463

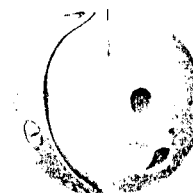

204178

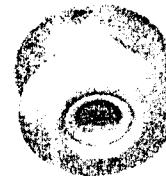

204249



From the library of: Diamond Needle Corp

PLATE 10445—FULL SIZE


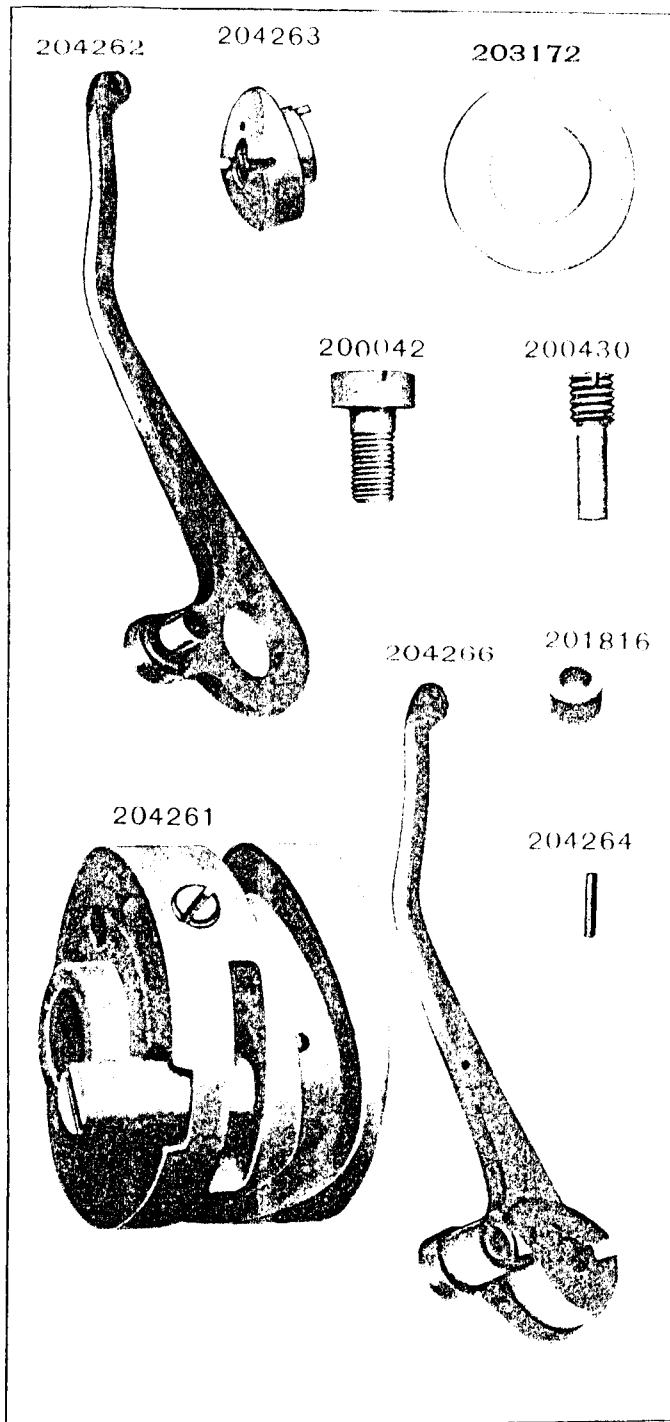


PLATE 10447—FULL SIZE

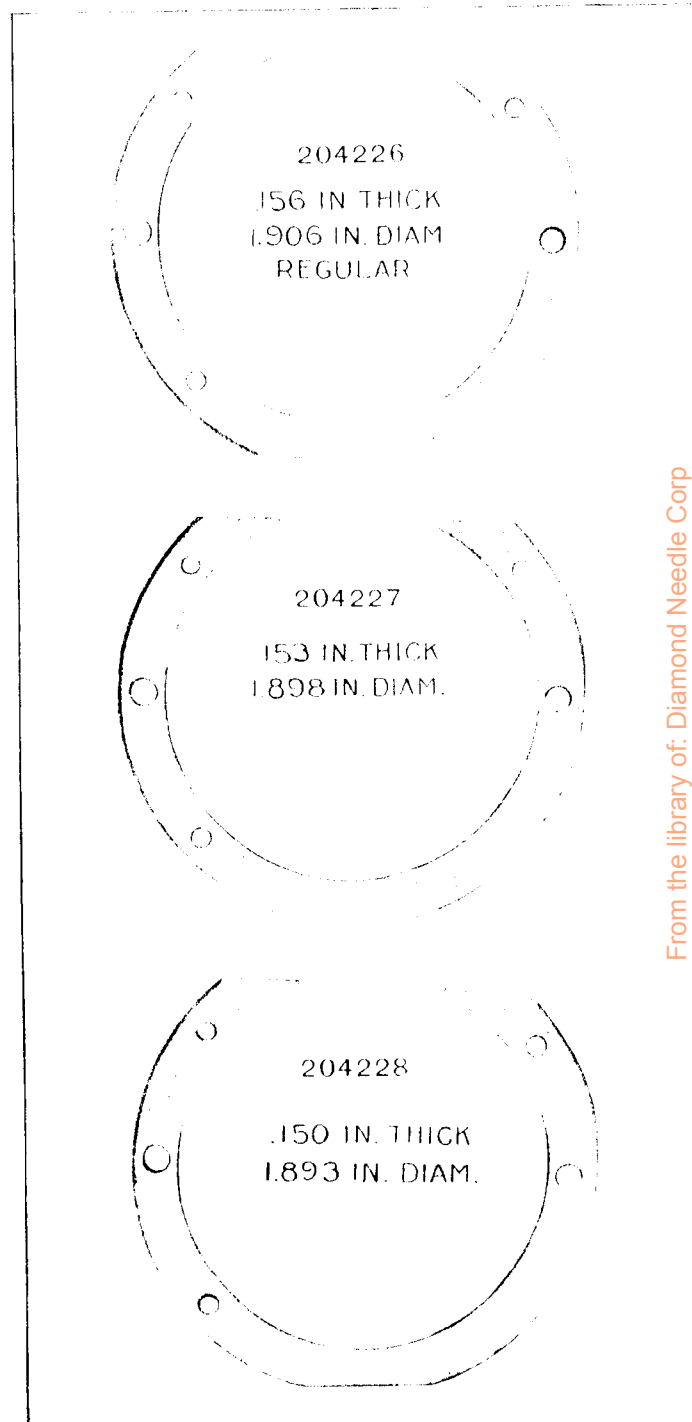

From the library of: Diamond Needle Corp

PLATE 10448—FULL SIZE

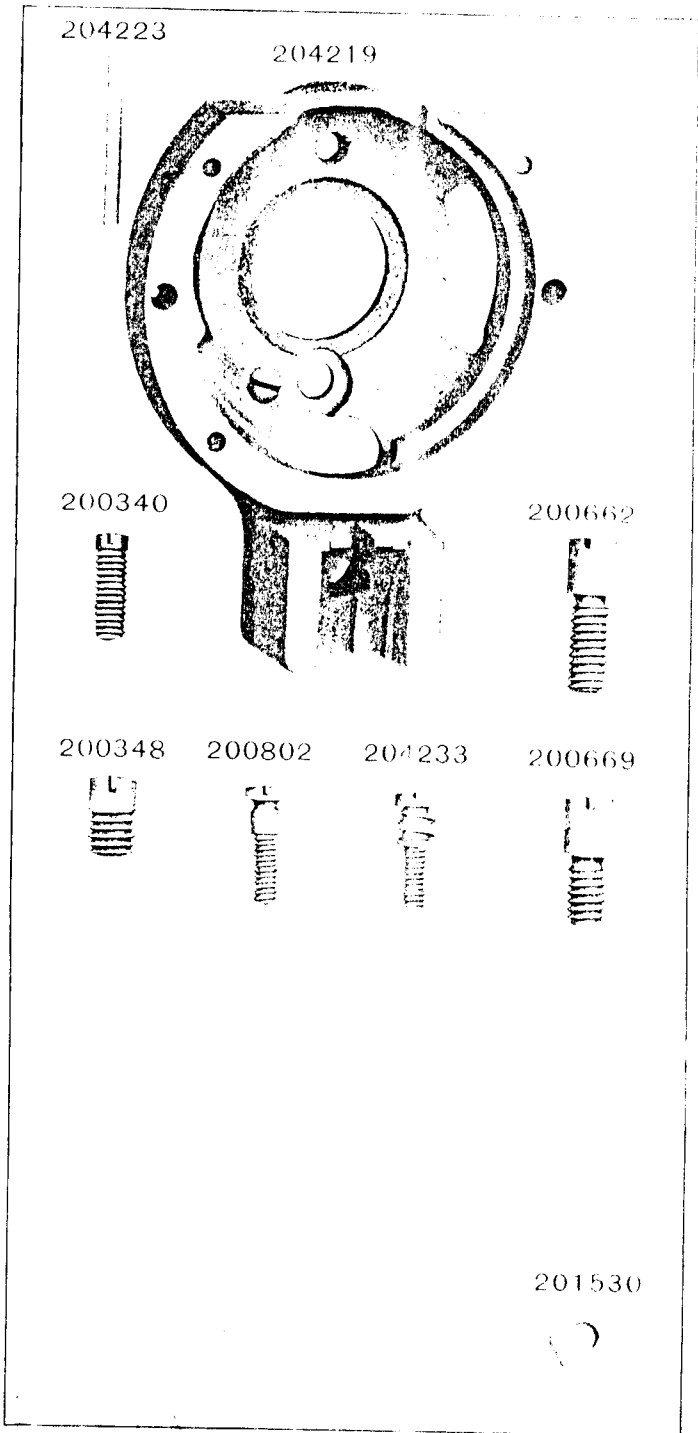


PLATE 10465—ONE-HALF SIZE

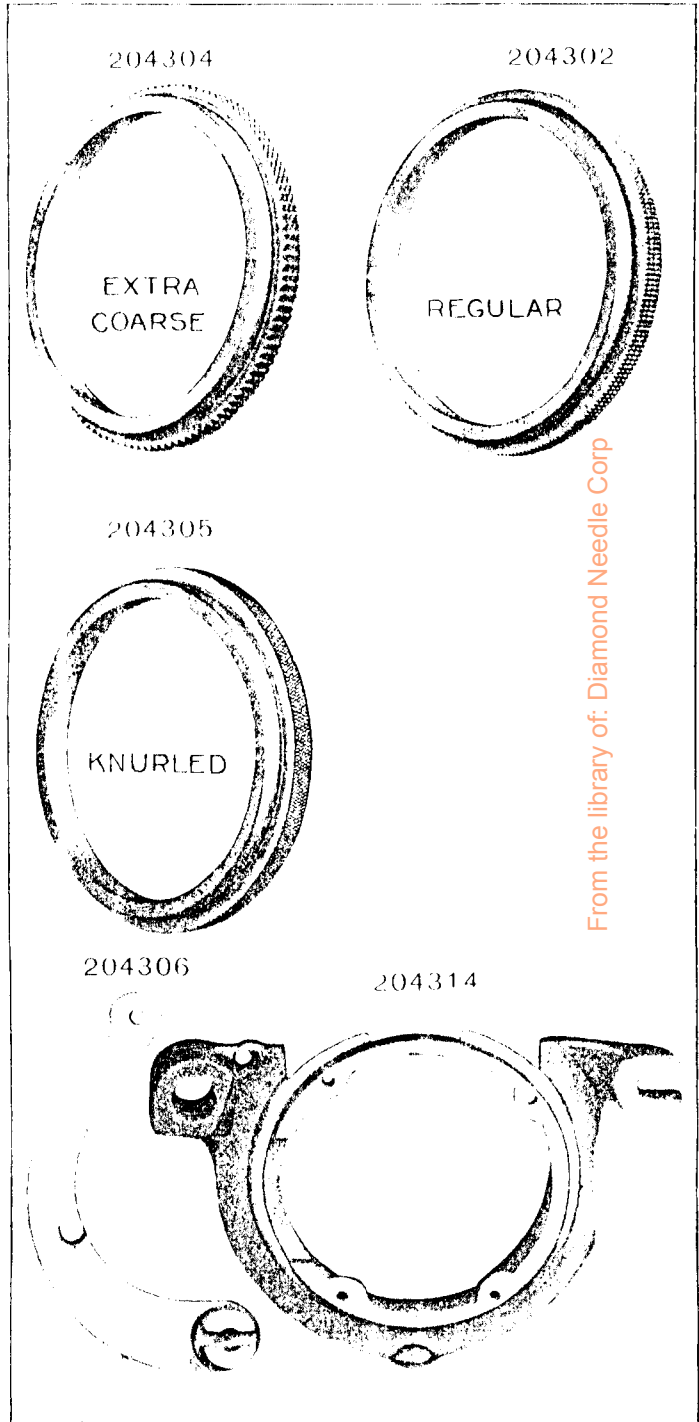


PLATE 10466 - ONE-HALF SIZE


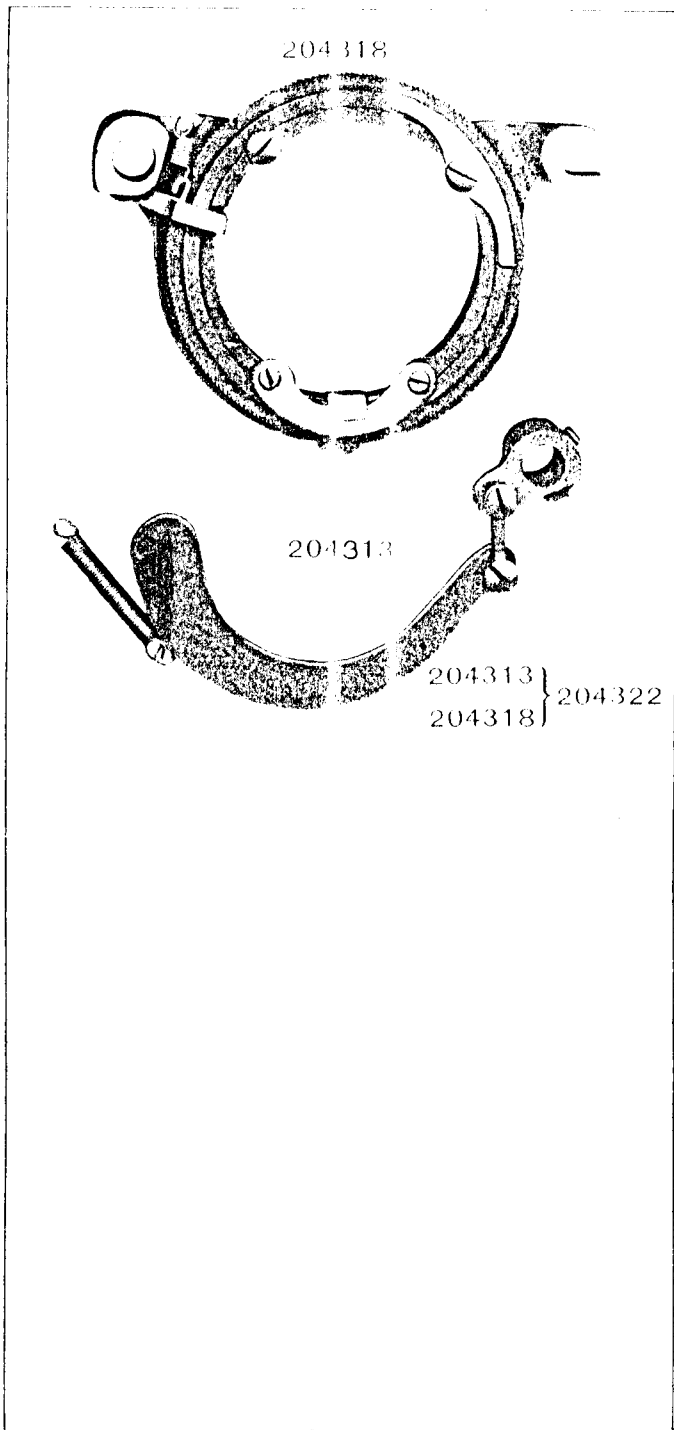


PLATE 10467—FULL SIZE

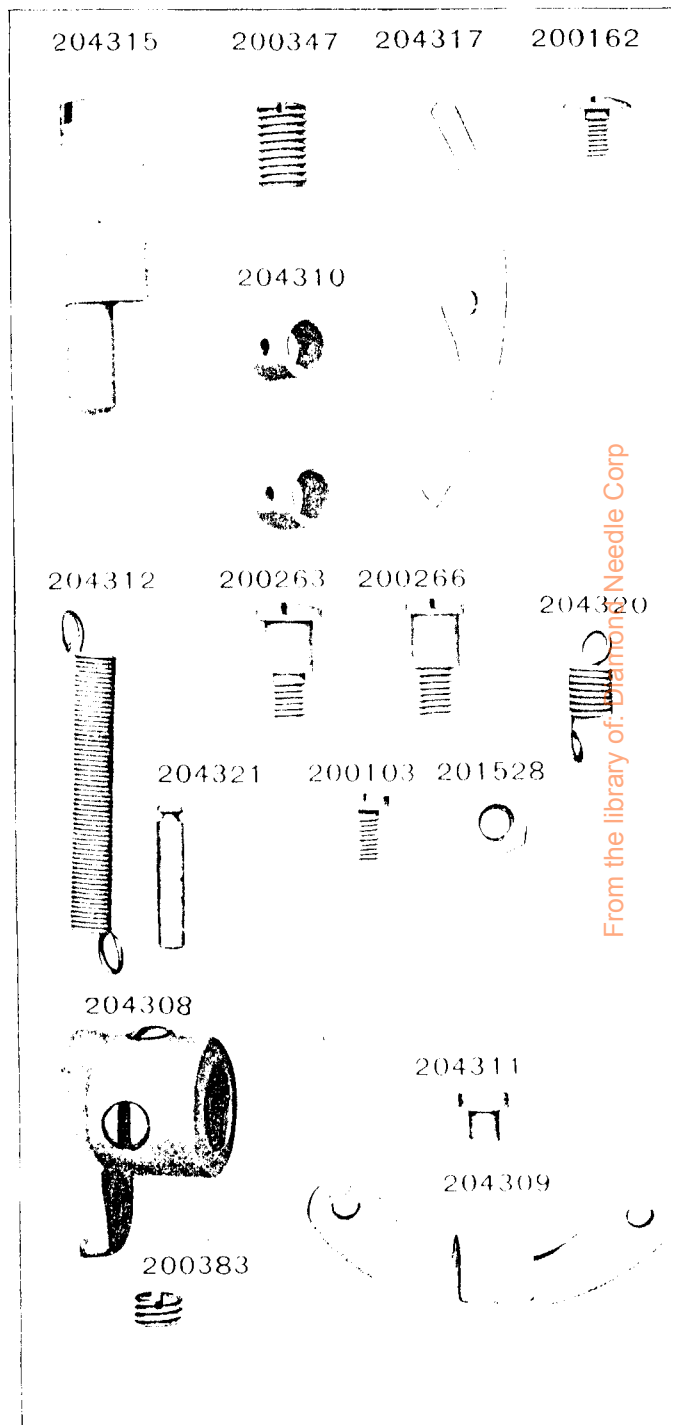

From the library of: **Warren's Needle Corp**

PLATE 10468 FULL SIZE

204330



204329



204307



200113



204316

204301


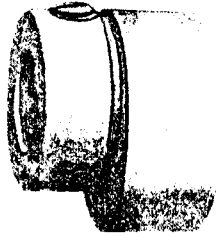


PLATE 10492—FULL SIZE


204578



204580

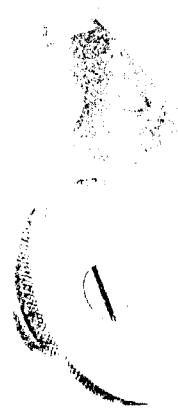

204582

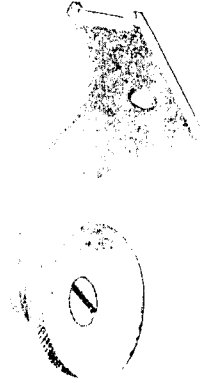

204584



204586



204588



From the library of: Diamond Needle Corp

PLATE 10569-ONE-HALF SIZE

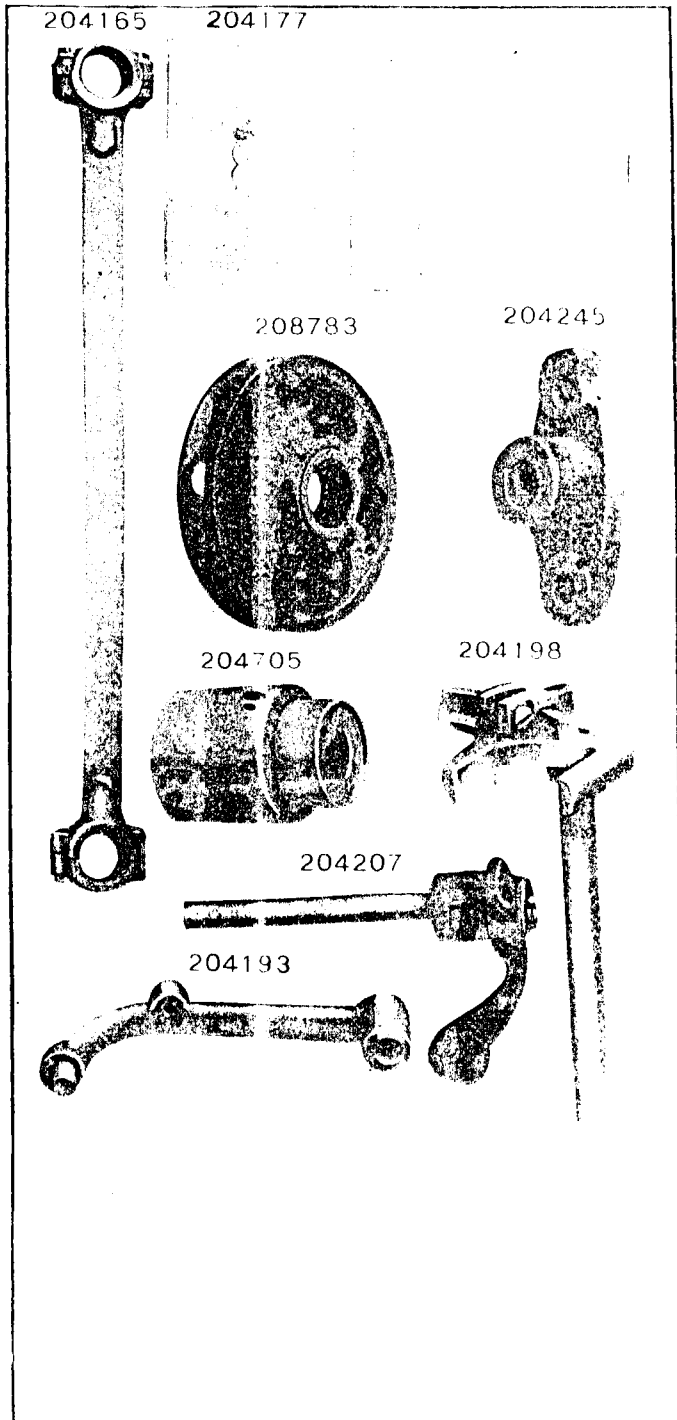


PLATE 10570-ONE-FOURTH SIZE

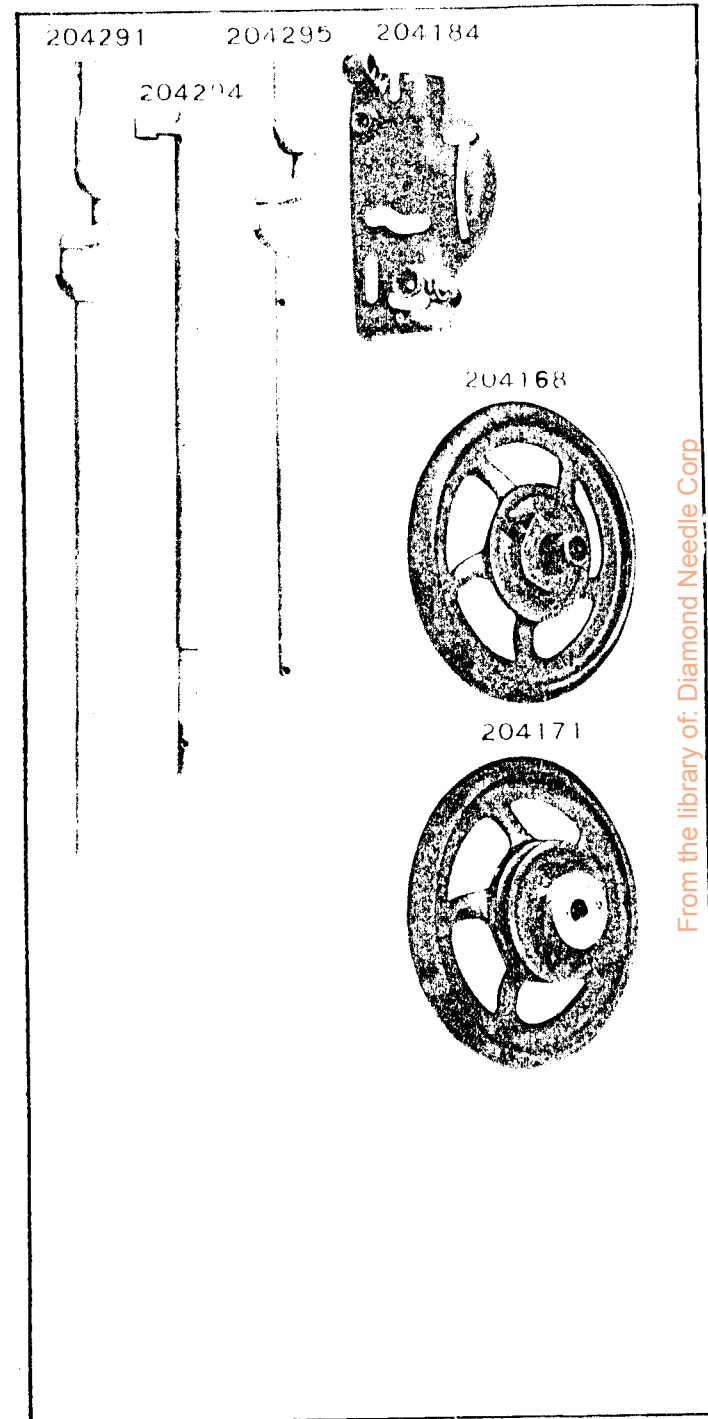


PLATE 1057.1 - FULL SIZE


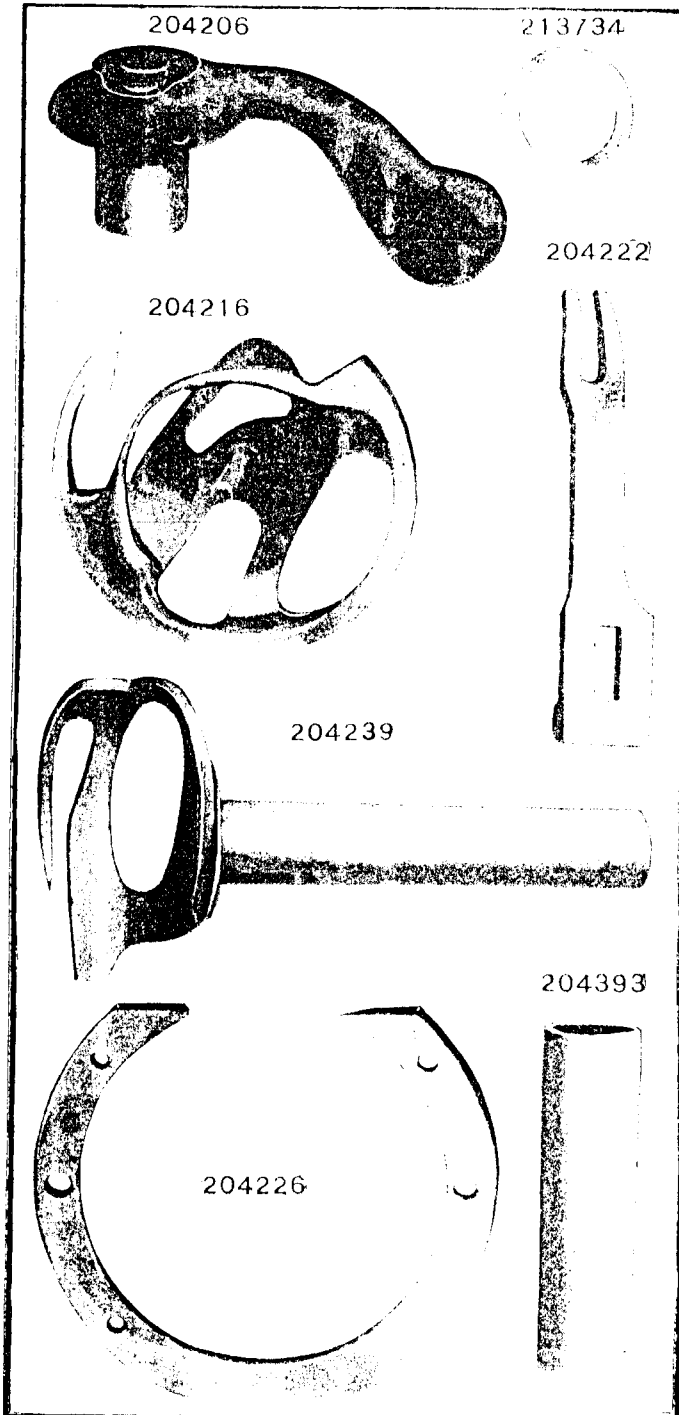


PLATE 10572 - FULL SIZE

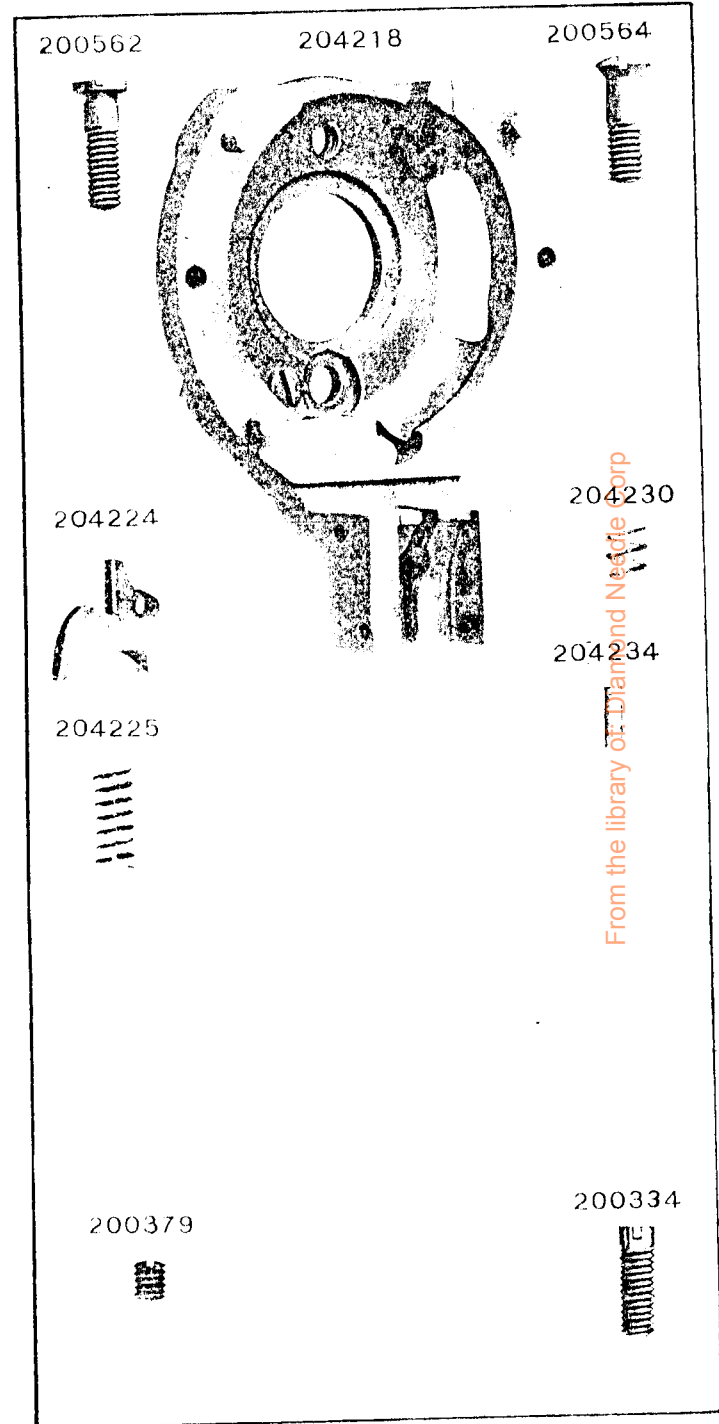

From the library of [Diamind Needle Corp](#)

PLATE 10573 FULL SIZE


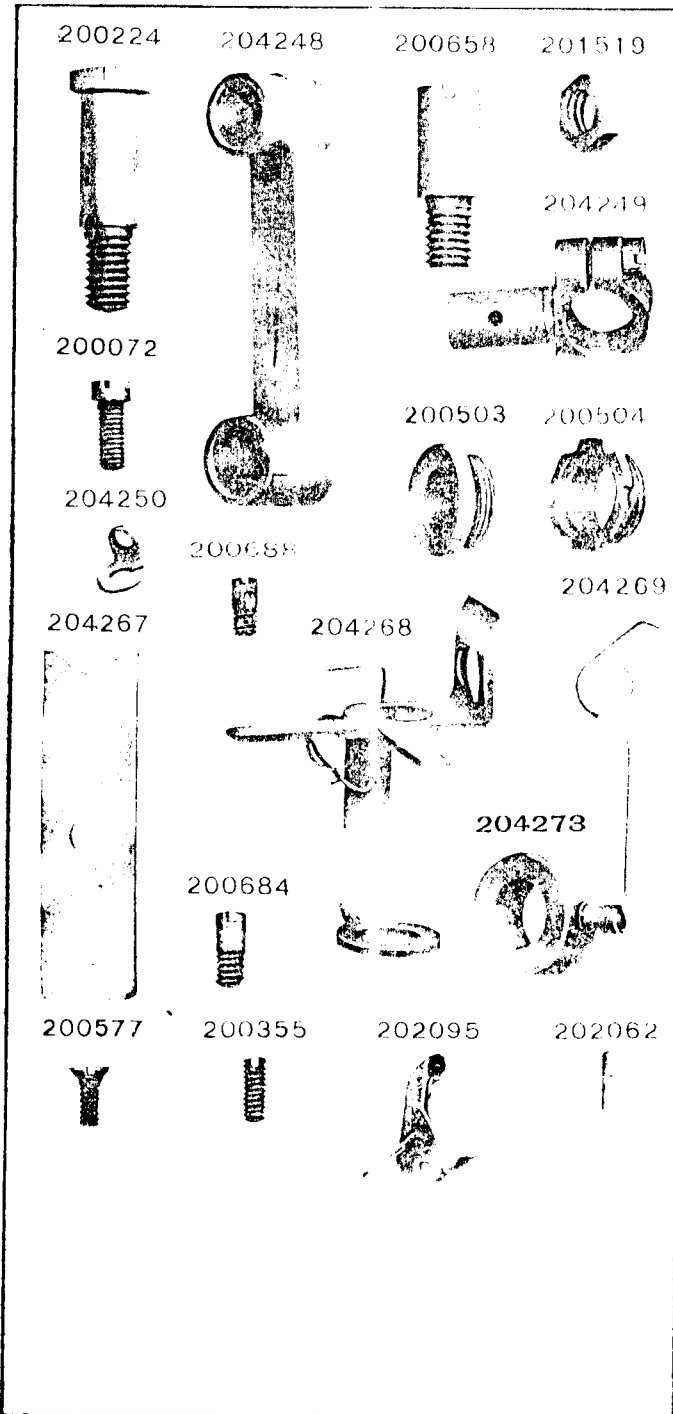


PLATE 10576 -FULL SIZE

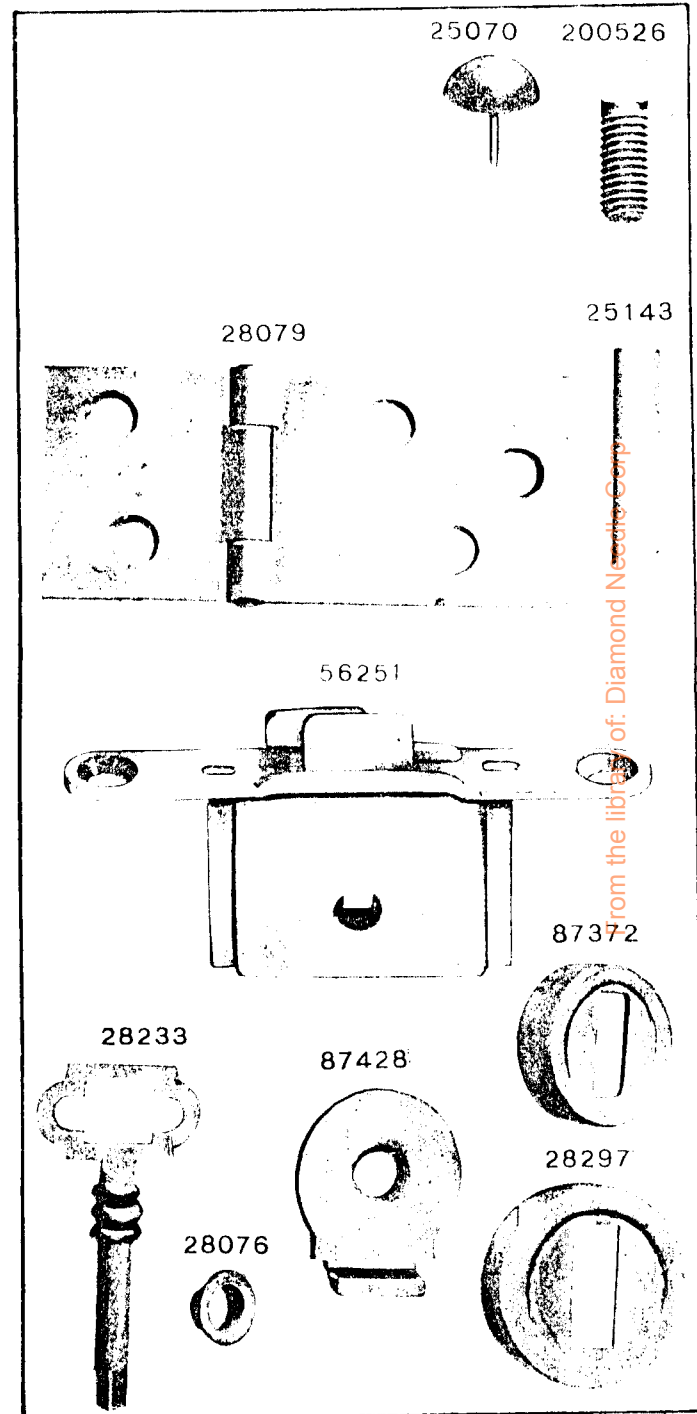

From the library of: Diamond Needle Corp.

PLATE 1057.7—ONE-NINTH SIZE


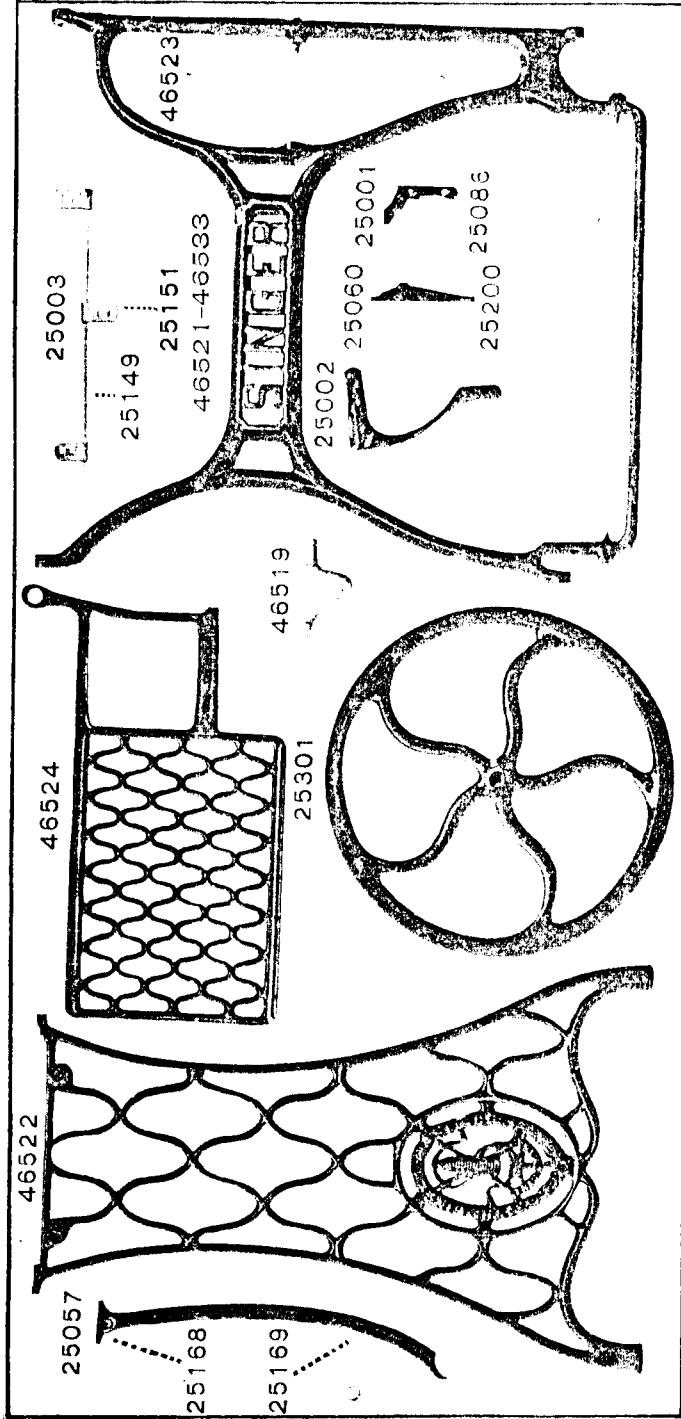



PLATE 10606—FULL SIZE

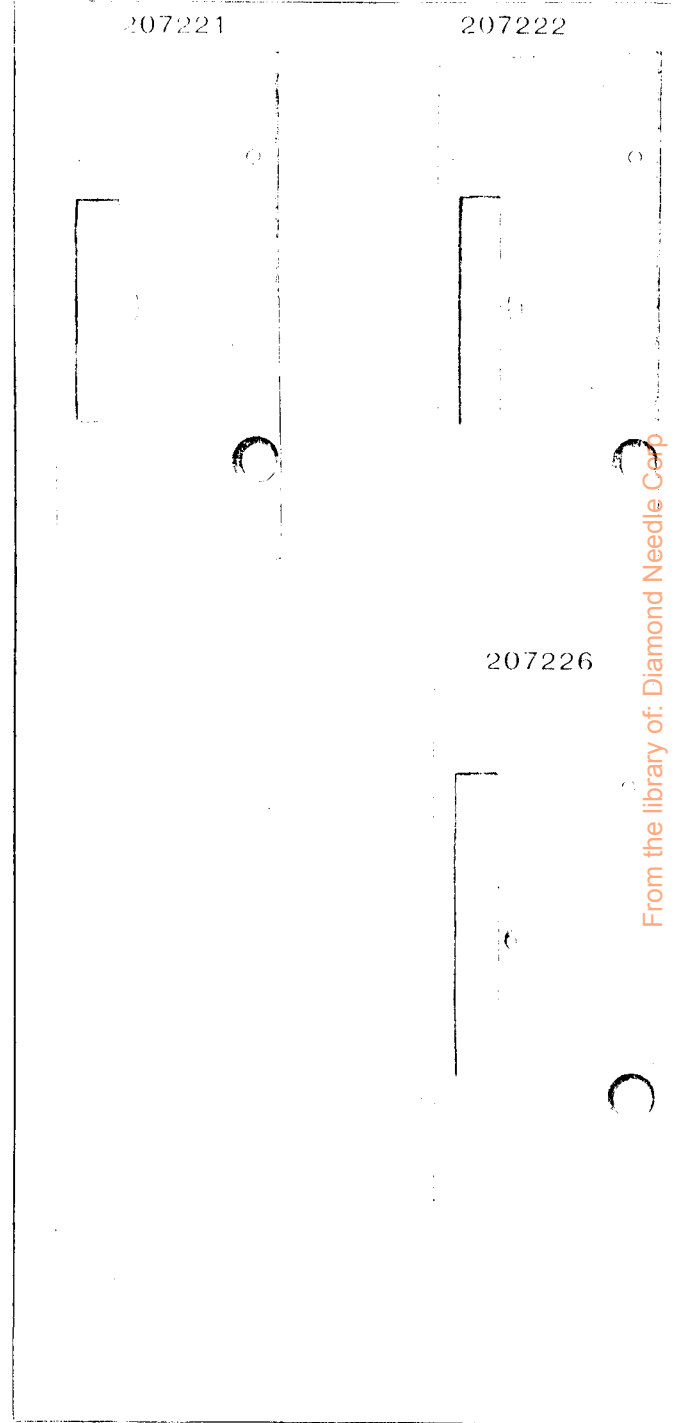


From the library of: Diamond Needle Corp

PLATE 11115 - FULL SIZE


202188

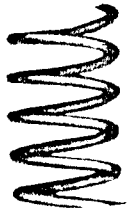

202186

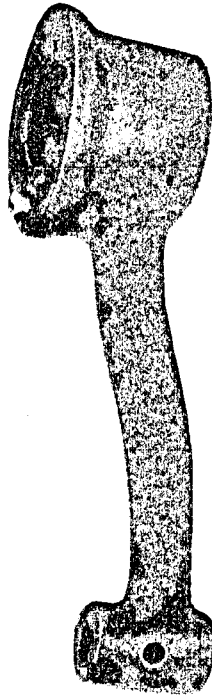

202136

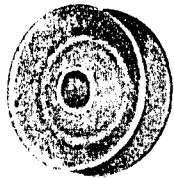

202135



202187




202189



PLATE 11125 - ONE-FOURTH SIZE

202451

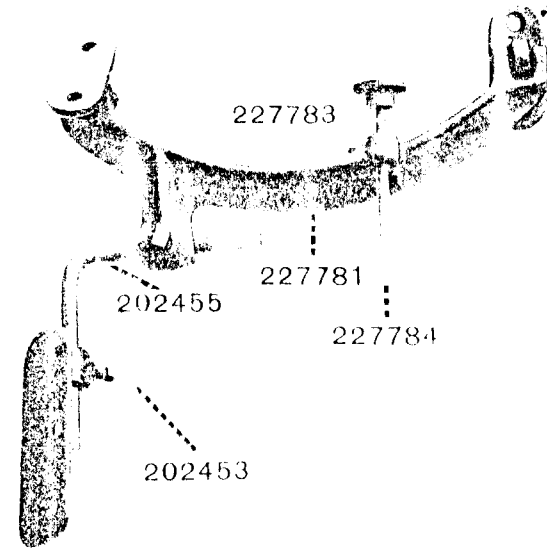

227783

227781

202455

227784


202453

202445




227303

227308



202454

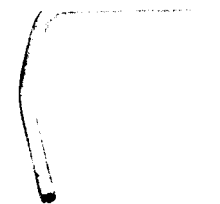

From the library of: Diamond Needle Corp

PLATE 11293 FULL SIZE



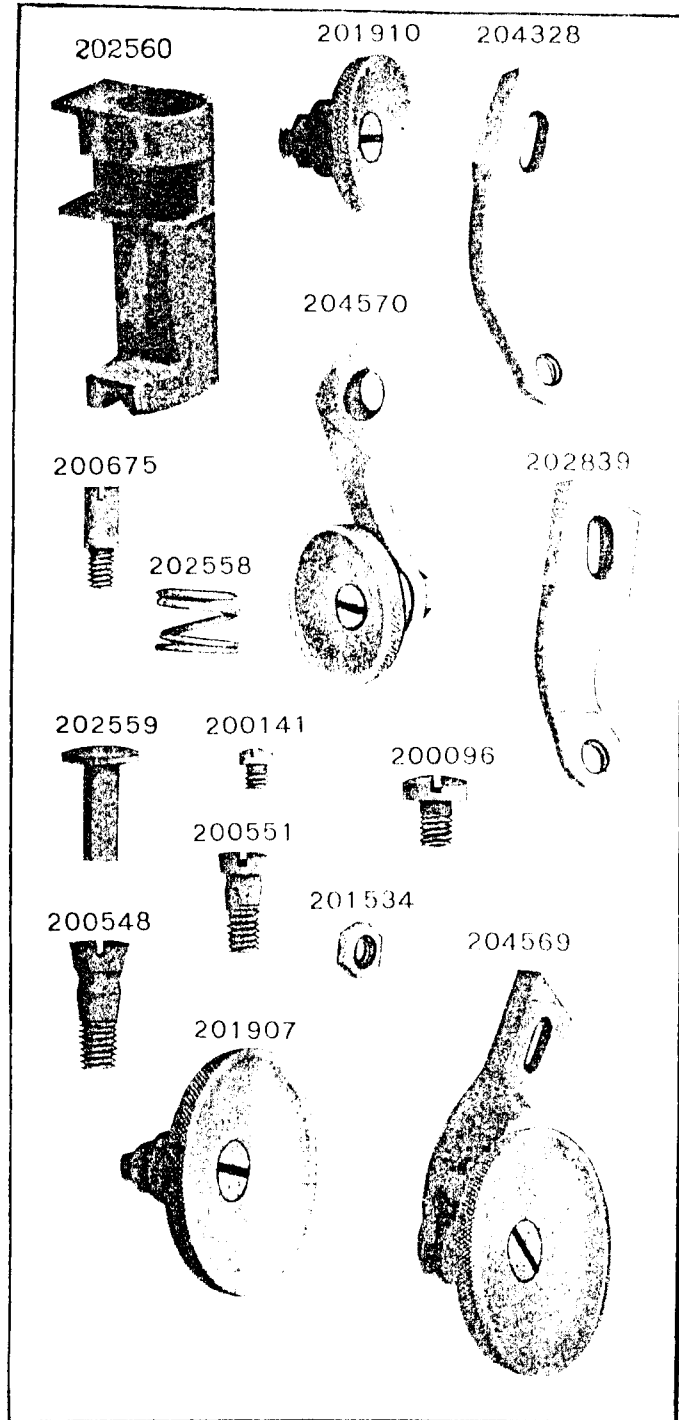


PLATE 11482 -FULL SIZE

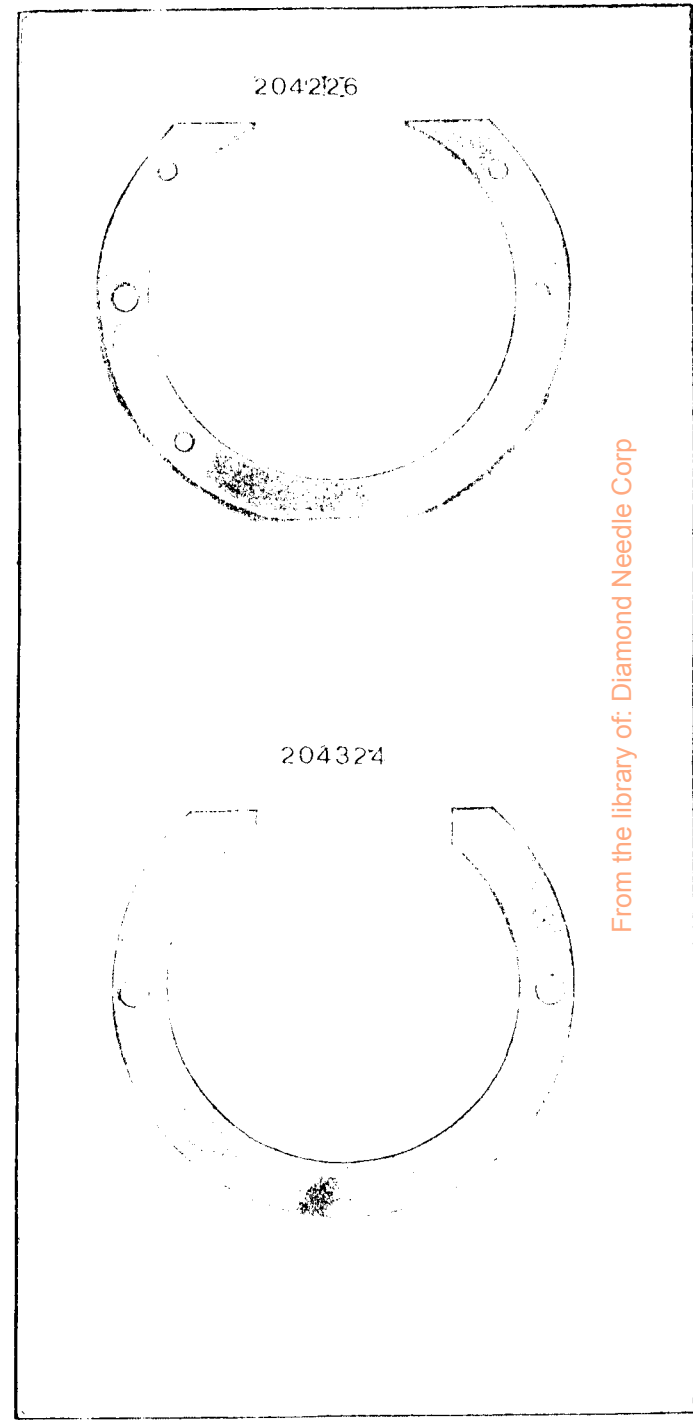


From the library of: Diamond Needle Corp

PLATE 12153-ONE-HALF SIZE

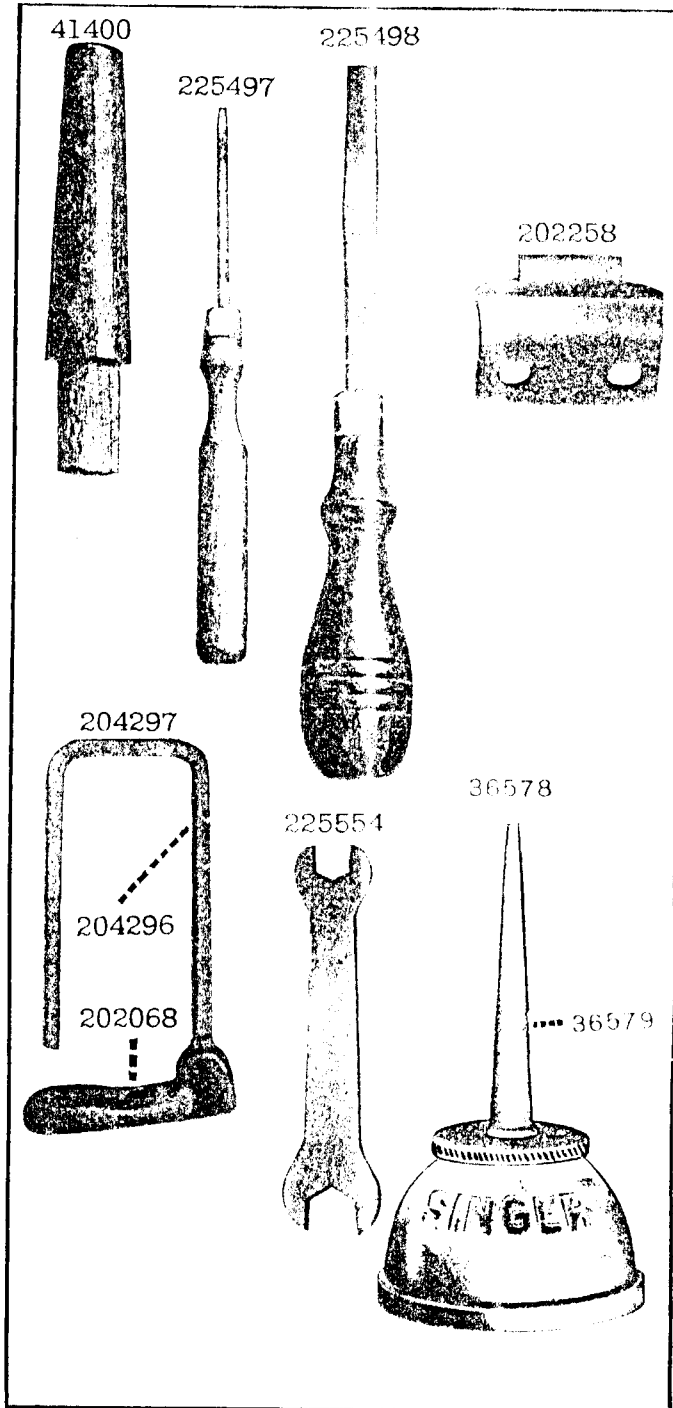

2857
PLATE 12309-FULL SIZE

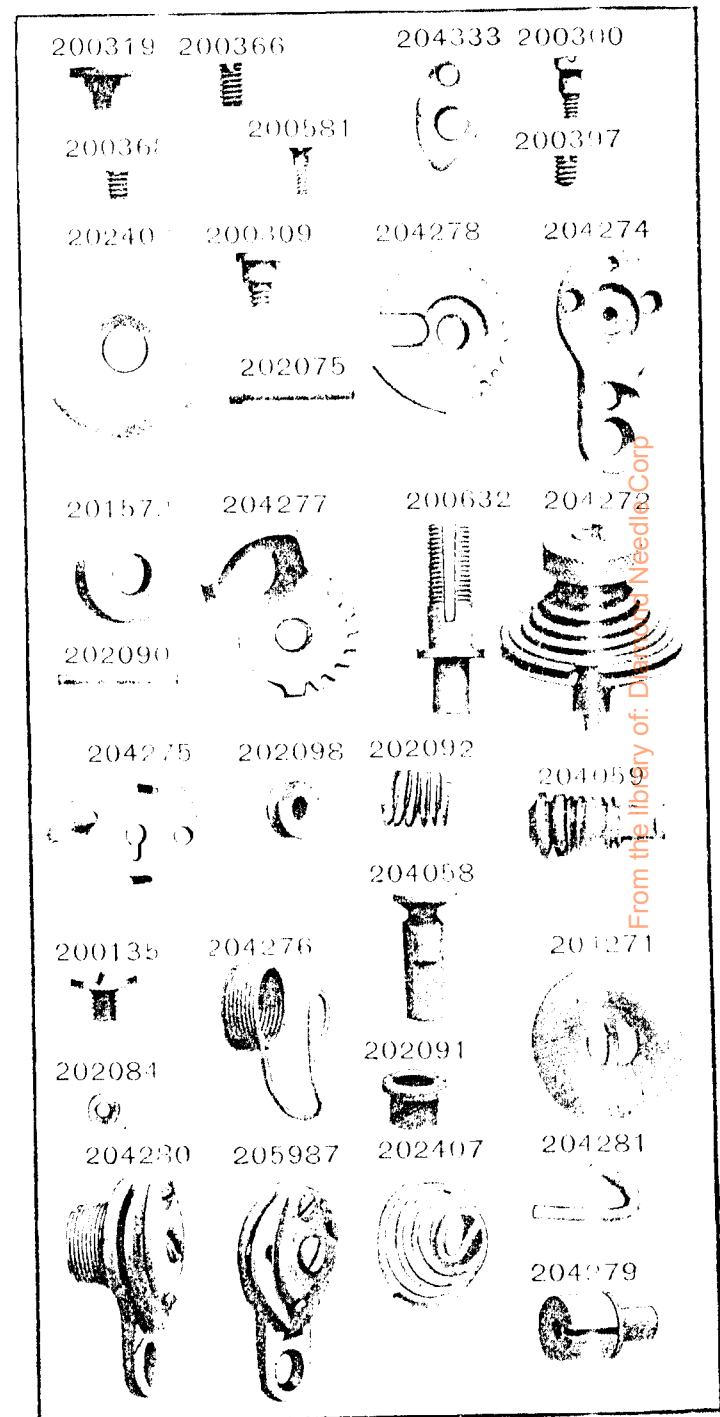

From the library of: [Dillon & Needles Corp](#)

PLATE 12319 - FULL SIZE

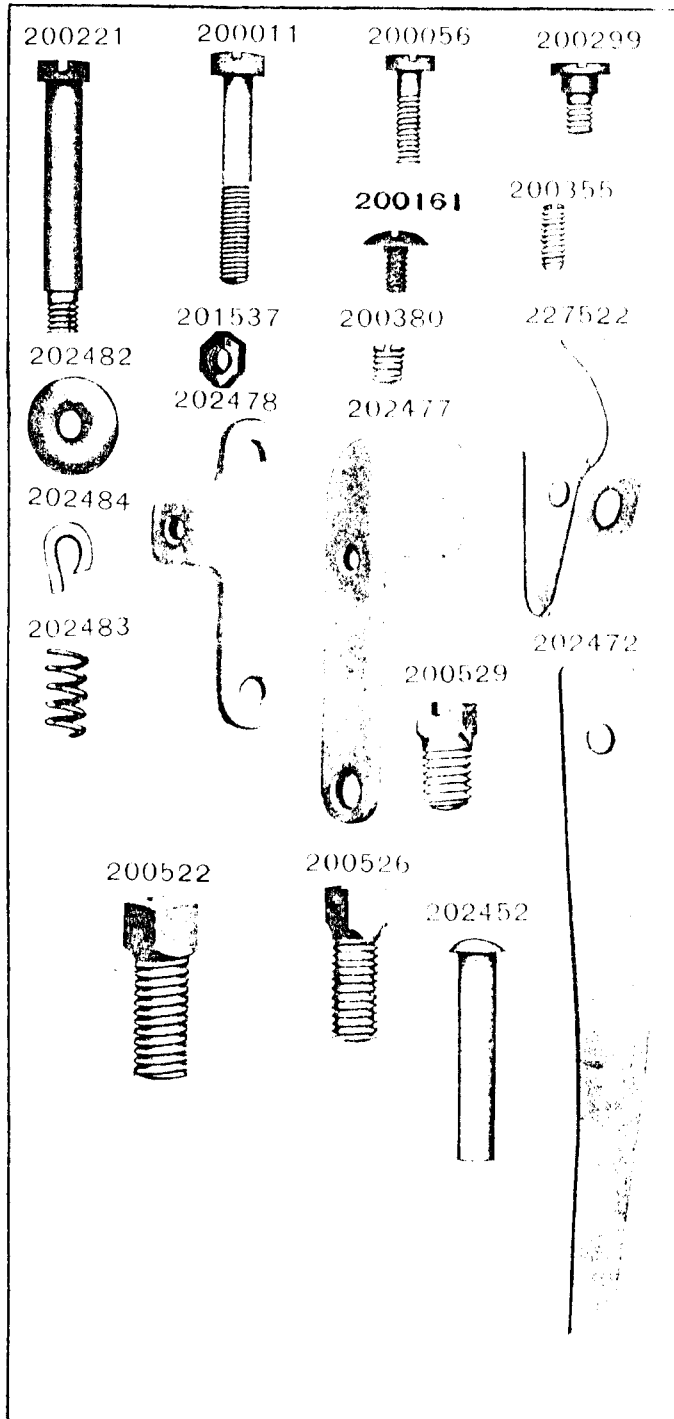


PLATE 12320 - ONE-HALF SIZE

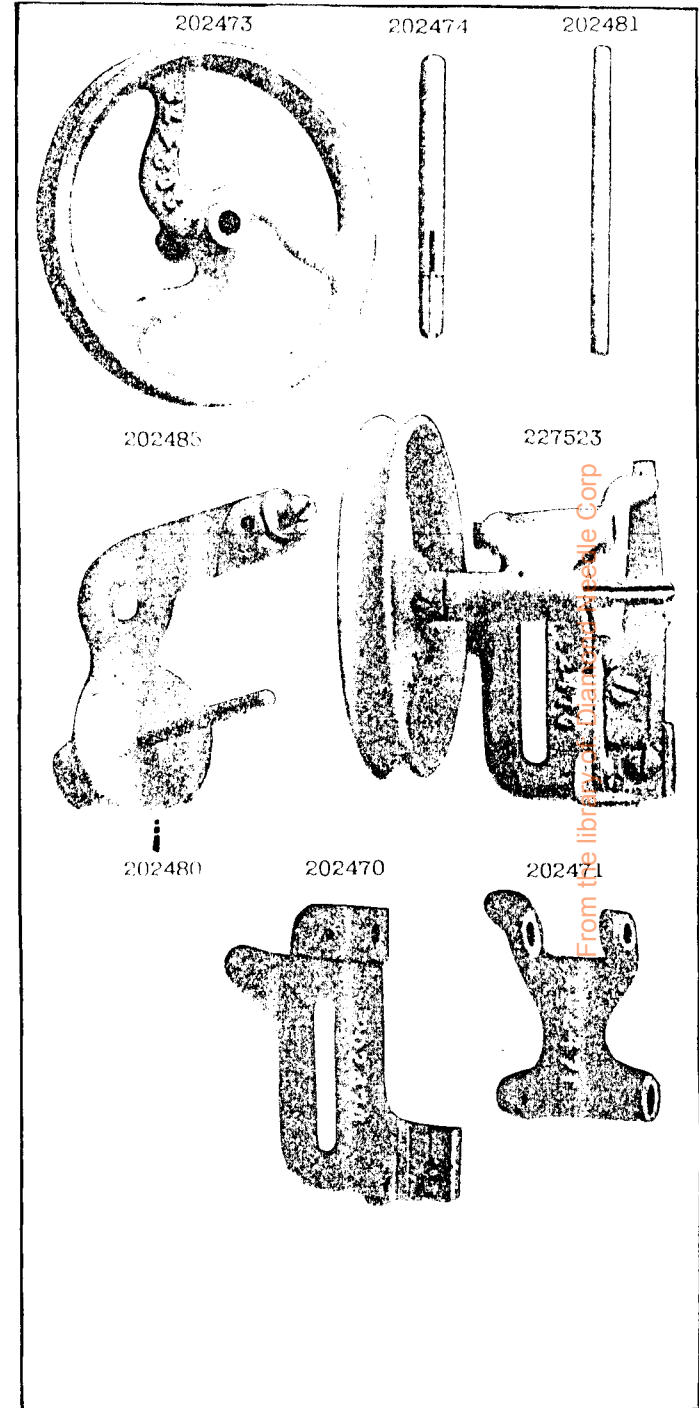


PLATE 12443 - FULL SIZE


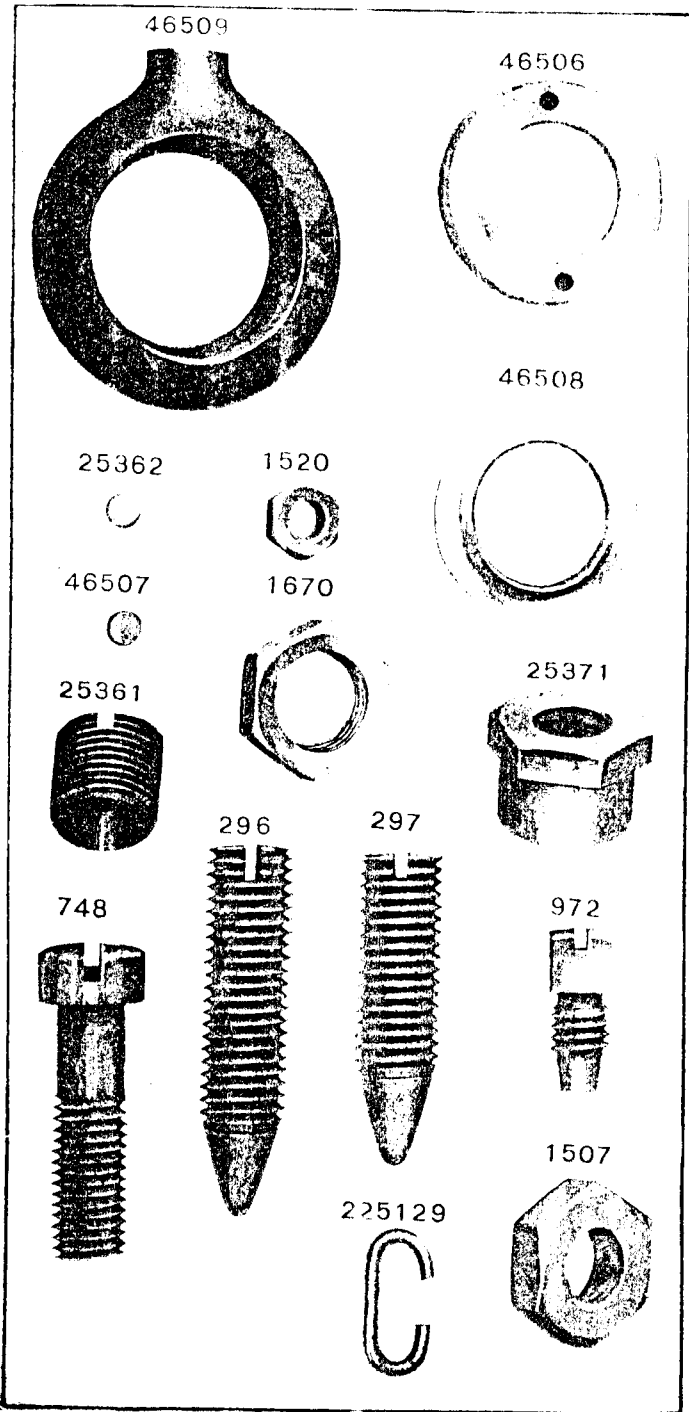


PLATE 12718 - FULL SIZE

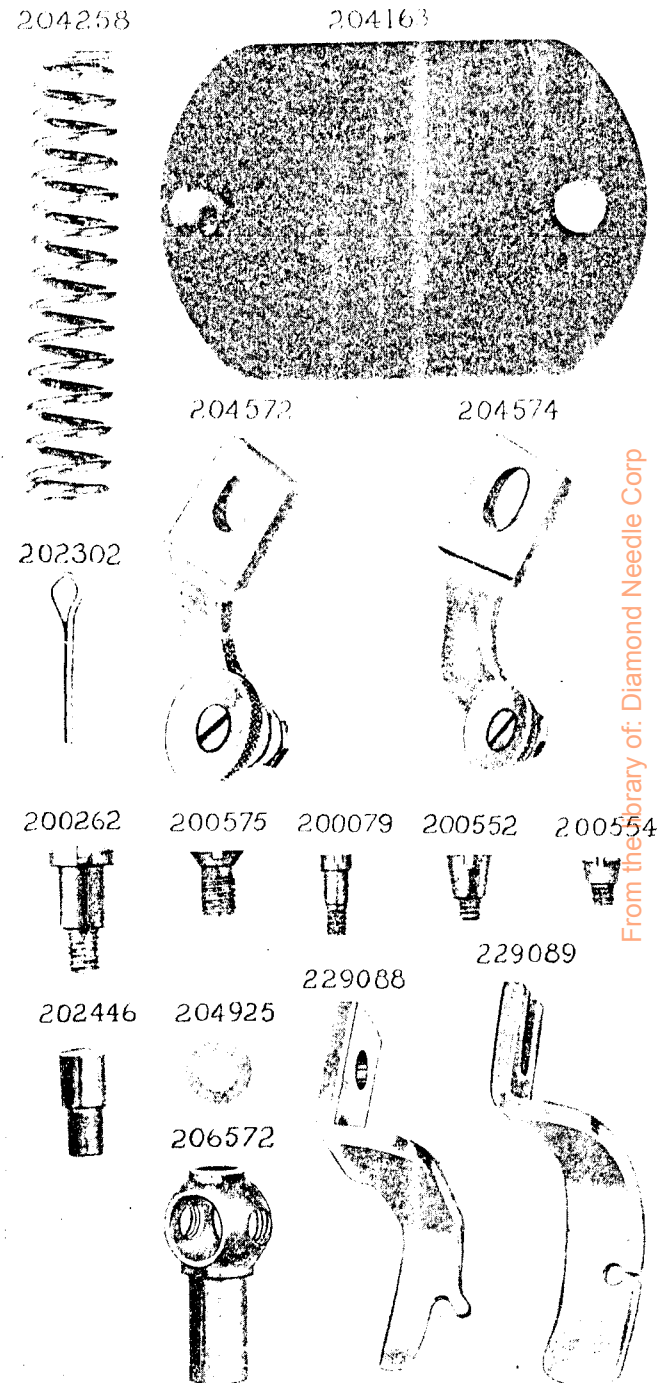

From the Library of: Diamond Needle Corp

PLATE 12719--ONE-HALF SIZE

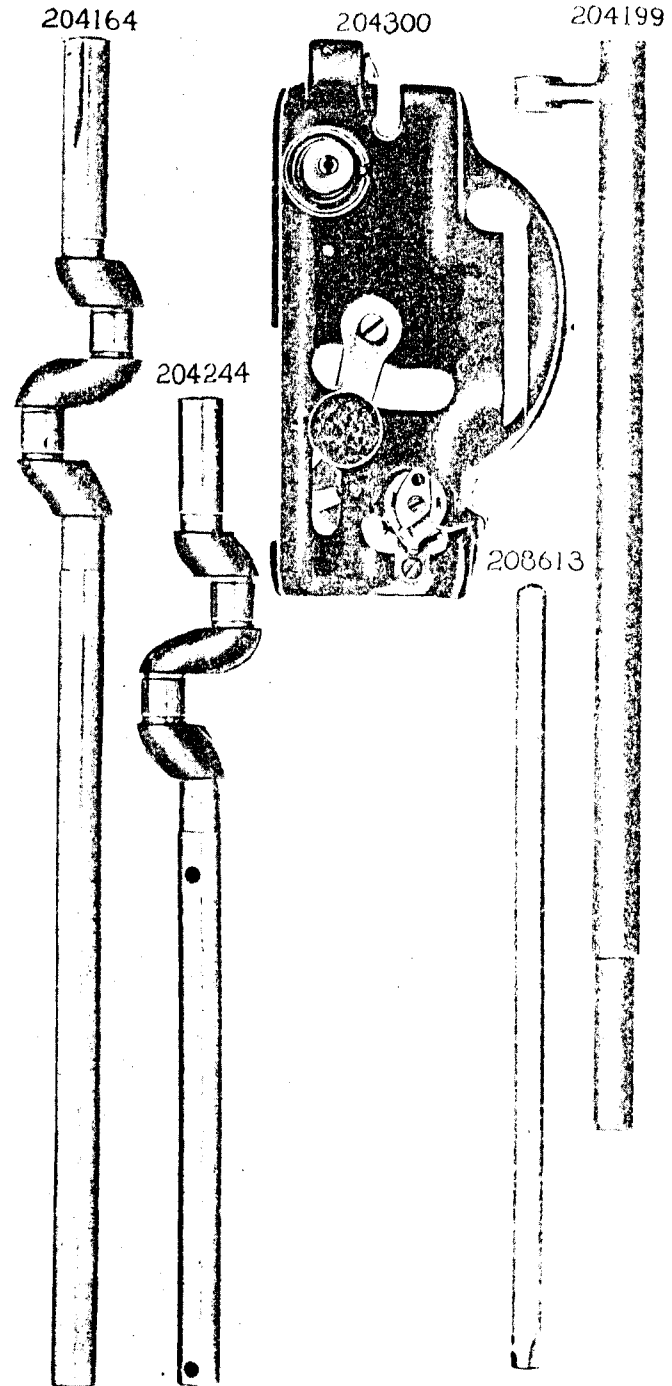


PLATE 12722--FULL SIZE


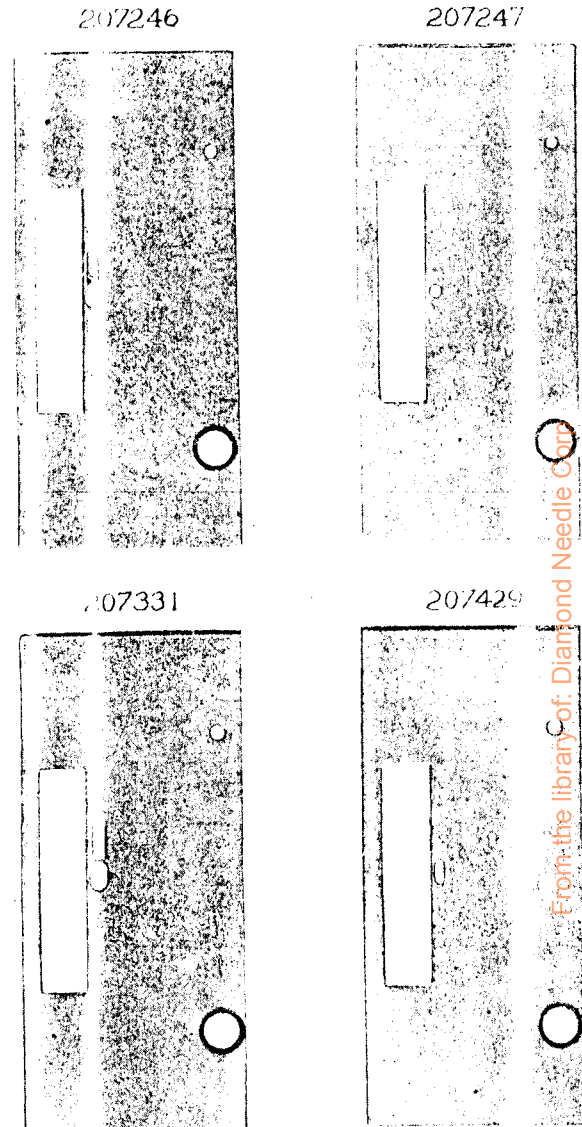


PLATE 12723 FULL SIZE

207224



207225

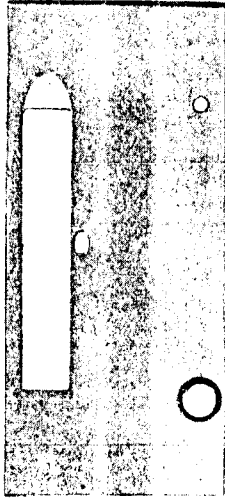

207442



207443



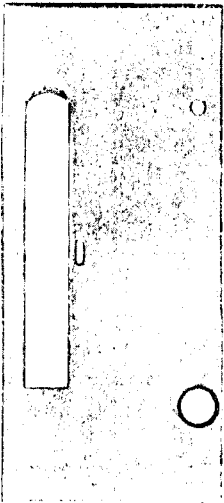


PLATE 12724—FULL SIZE


207467

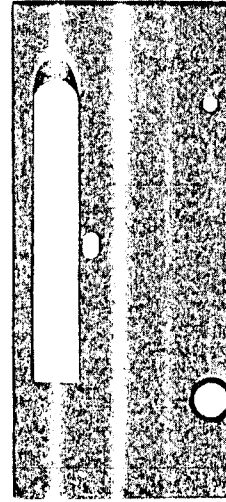

207753

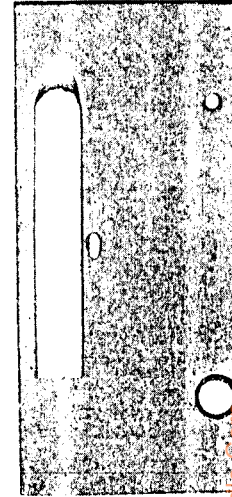


202616

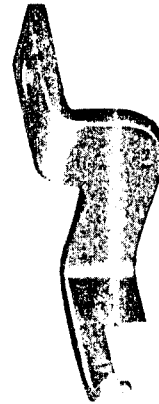

202803



229798

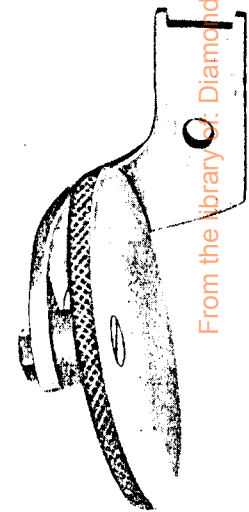


From the Library of: Diamond Seed Co.

PLATE 12725—FULL SIZE

223010



201209

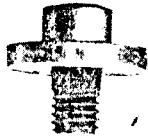

201515



204189




204190



206047



204201

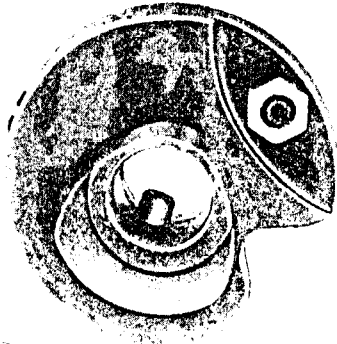


204241



204235



204335

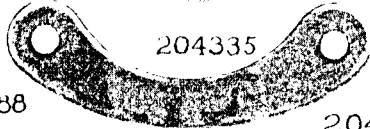

200688



204185



201525



200053



200382




200431




PLATE 12726—FULL SIZE


204240

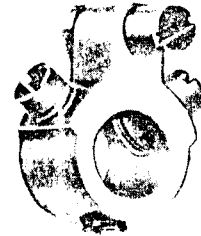

204568

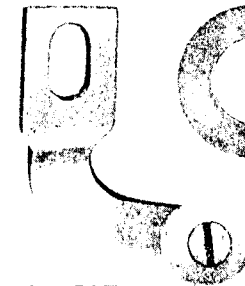

204242

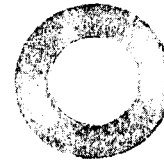

202248



204243



204217



From the library of: Diamond Needle Corp

PLATE 12727--ONE-FOURTH SIZE

204291

204295

204294

204173

